


Owner's Manual

© 1997 Toshiba America Electronic Components, Inc. All rights reserved. Printed in the U.S.A.

Compatible with C/Ku Band
Built-in TI Filter
Full Function UHF Remote Control



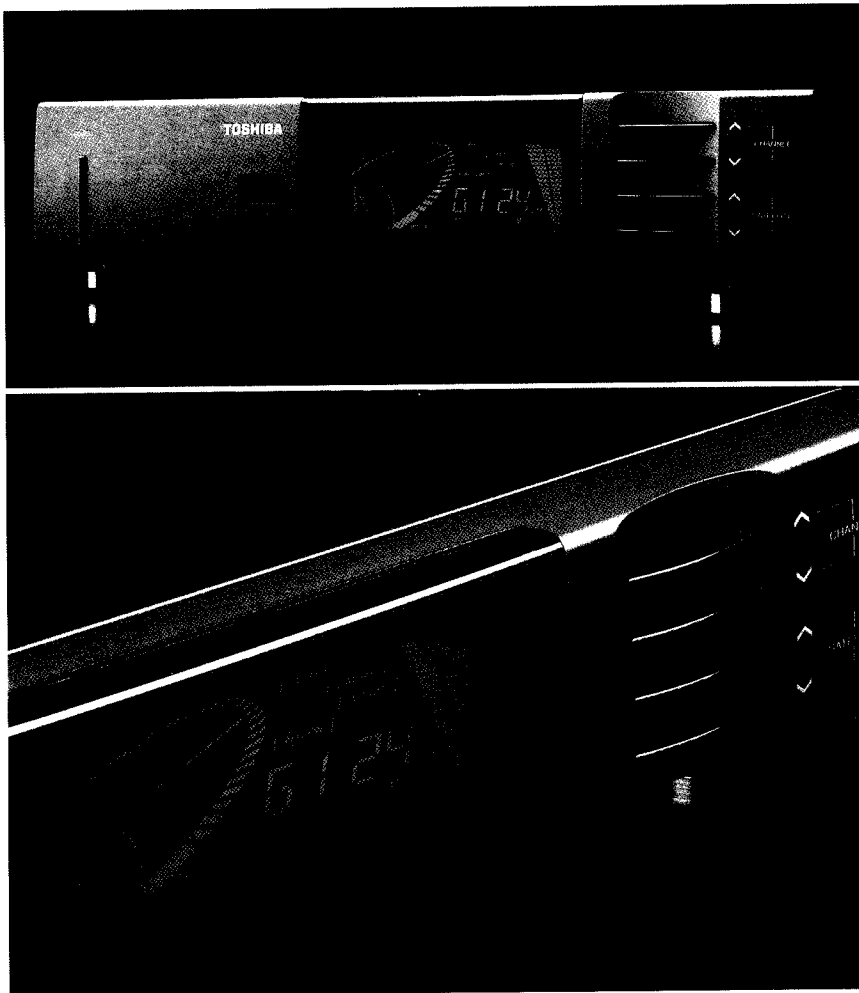

TRX-2000 Satellite Receiver



TOSHIBA

PLEASE READ

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within a triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

In the spaces provided below, record the Model and Serial No. located at the rear of your satellite receiver.

Model No. _____ Serial No. _____

Retain this information for future reference.

NOTE TO SATELLITE SYSTEM INSTALLER

Please pay close attention to Article 810-20 of the National Electrical Code that provides guidelines for proper installation of antenna discharge units. In particular, this article specifies that each conductor of a "lead in" from an outdoor antenna shall be provided with a listed antenna discharge unit except where the lead in conductors are enclosed in a continuous metallic shield that is effectively grounded.

FEATURES

Thank you for purchasing a TOSHIBA TRX-2000. This system has superior performance and many advanced functions. We are confident that you will be fully satisfied with your new TRX-2000. This system has the following features.

Built-in VideoCipher® II Plus Descrambler module

Allows enjoyment of VideoCipher® II Plus programming.

Built-in Programmable Antenna Positioner With Power Supply

30 C-band satellites and 30 Ku-band satellites can be programmed.

Compatible with C/Ku band

The dual LNB inputs may be connected to either single C-band and single Ku-band input or dual C-band or dual Ku-band inputs.

Color On Screen Display

Displays various functions such as satellite name, channel, audio, etc.

A/V Inputs

Allows the connection to an external descrambler.

2 A/V Outputs

Allows the connection to 2 A/V systems, such as TV and VCR.

S-Video Output

Allows the connection to a TV or VCR with S-Video Inputs.

Built-in TI Filter

Reduces the video noise which is caused by the terrestrial interference.

Timer Functions

Can be programmed for 8 events up to 1 year in advance.

20 Favorite Channel Memory

Stores satellite position, channel number and Audio.

144 Memory For Category Selection

Initially, 112 satellite programs are factory programmed in 12 different categories.

Allows easy selection of the satellite program.

Liquid Crystal Multi-Function Display

Displays antenna position, satellite name, channel, audio output level, etc.

Full Function UHF Remote Control

Additional Features

Frequency Synthesized Tuning System

Parental Control (Antenna lock, Channel lockout)

Beep Sound

Auto Tuning

Channel Scan

TABLE OF CONTENTS

FEATURES & CONTROLS	2-7
FEATURES	2
INDICATION OF CONTROLS	4-7
FRONT PANEL	4
REAR PANEL	4-5
REMOTE CONTROL	6
LCD (LIQUID CRYSTAL DISPLAY)	7
SETUP	8-16
INSTALLATION	8-12
INITIAL SETUP	13-16
BASIC OPERATION	17-20
ADVANCED OPERATION	21-50
CATEGORY SELECTION	21-26
FAVORITE PROGRAM	27-28
TIMER FUNCTIONS	29-32
PARENTAL CONTROL	33-36
T.I. FILTER & CH FINE TUNING	37
VIDEOCIPHER® II PLUS OPERATION	38-39
MAIN FUNCTIONS	40-50
OTHERS	51-53
TROUBLESHOOTING	51
SPECIFICATIONS	52
WARRANTY	53

FEATURES & CONTROLS

SET UP


BASIC OPERATION

ADVANCED OPERATION

OTHER

INDICATION OF CONTROLS

FRONT PANEL

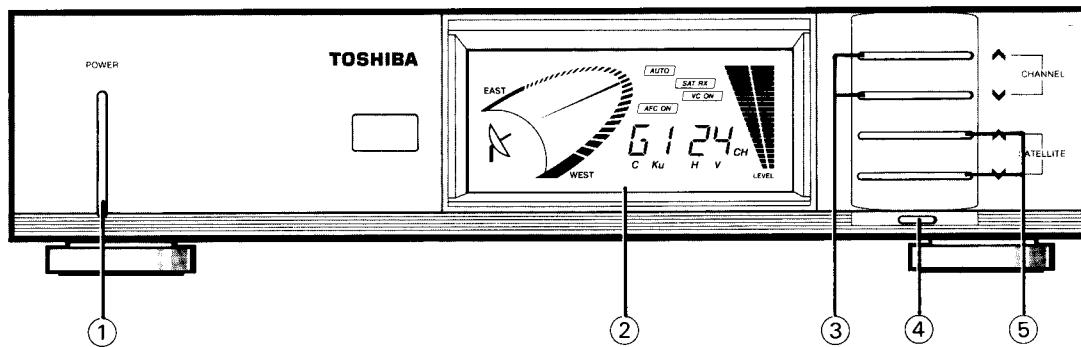

① POWER BUTTON

Turns the receiver on or off.

② LIQUID CRYSTAL DISPLAY

Displays current satellite information.

③ CHANNEL BUTTON

Selects channels up or down.

④ UHF/IR BUTTON

Selects UHF or optional IR Remote Control.

⑤ SATELLITE BUTTON

This button selects the next programmed satellite to the east or west. When the button is released, the dish will automatically begin moving to the requested satellite.

REAR PANEL

① INPUT C/V

This F connector is one of two "block" inputs accepting signals in the range of 950 to 1450MHz. Selection of this input is determined by the setting of "C/Ku" or "V/H".

② INPUT Ku/H

This F connector is one of two "block" inputs. See 1.

③ CHANNEL 3/4

The output of the modulator ④ (VHF OUT) is controlled by this switch. TV reception on channel 3 or 4 is possible.

④ VHF OUT


Channel 3 or 4 modulated VHF signal output. Connect to the VHF input on a television set.

⑤ VHF IN

A VHF signal input. Connect to a VHF antenna or cable system.

⑥ UHF REMOTE IN

This connector is the input terminal for the UHF remote control. Plug the antenna in here.

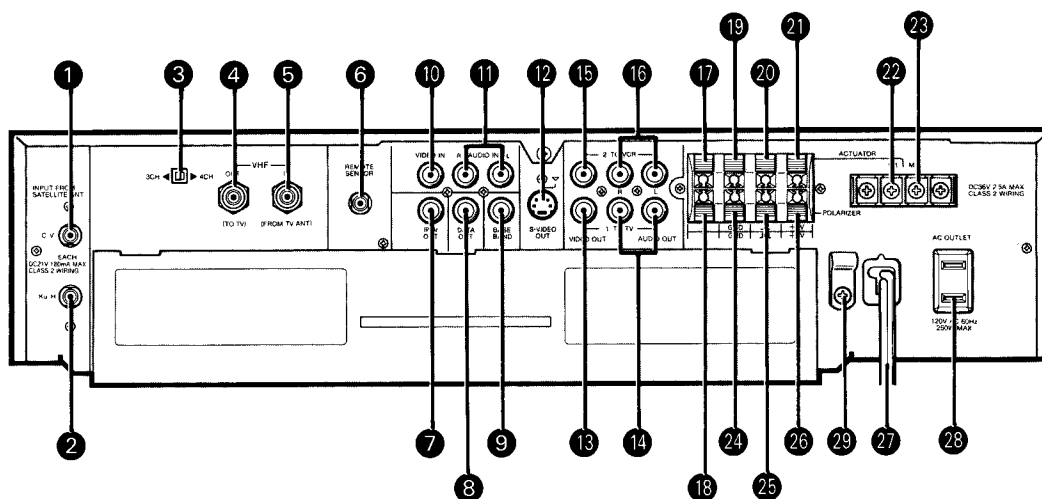

7 IPPV OUT

This phono connector provides output data from the VideoCipher® II Plus module.

8 DATA OUT

This phono connector provides output data from the VideoCipher® II Plus module.

9 BASE BAND

This phono connector provides unfiltered, unclamped composite baseband video output to an external descrambler. This output can be either de-emphasized or non-de-emphasized.

10 VIDEO IN

This phono connector receives the video signal from an external descrambler or a VCR.

11 AUDIO IN

These phono connectors receive the audio signal from an external descrambler or a VCR.

12 S-VIDEO OUT

This phono connector provides S-video output. Connect to the S-video input of a TV or a VCR.

13 VIDEO OUT 1

This phono connector provides the video output to a VCR or a monitor.

14 AUDIO OUT 1

These phono connectors provide the audio outputs, left and right, from the receiver. The output level can be adjusted from the remote.

15 VIDEO OUT 2

This phono connector provides the video output without on screen displays except for the VideoCipher® II Plus.

16 AUDIO OUT 2

These phono connectors provide the audio outputs, left and right. The mute and the volume level are not effected by the remote.

17 H

This is an auxiliary output that provides control signals to a H/V switch when H polarity is selected.

18 V

This is an auxiliary output that provides control signals to a H/V switch when V polarity is selected.

19 GND

An actuator position feedback line used in conjunction with 20 alone or 20 and 21.


20 

This is the actuator return pulse.


21 +5V

The actuator signal line that provides +5V to a hall effect device.

22 M1

Combined with 23, this output controls the motor direction and dynamic braking. When the EAST  is pressed, +36V (MAX) appears at the M1 relative to M2.

23 M2

Combined with 22, this output controls the motor direction and dynamic braking. When the WEST  is pressed, +36V (MAX) appears at the M2 relative to M1.

24 GND

This is the return line for 17, 18, 25, 26.

25 

This terminal is the output control for the polarizer.

26 +5V

This terminal is the 5V supply for the polarizer.

27 LINE CORD

120V AC, 60Hz (nominal) input.

28 AC OUTLET


Provides 120V AC (250W MAX) as long as the line cord is plugged into an active wall outlet.

29 CABLE HOLDER

This is used to secure the cable from satellite antenna.


■ INSTALLING THE BATTERIES:

- ① Press down and pull off.
- ② Insert two AAA batteries, observing the polarity shown by the diagram inside the battery compartment.

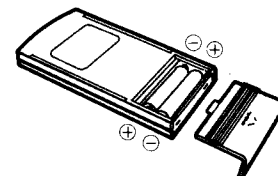

INDICATION OF CONTROLS

REMOTE CONTROL

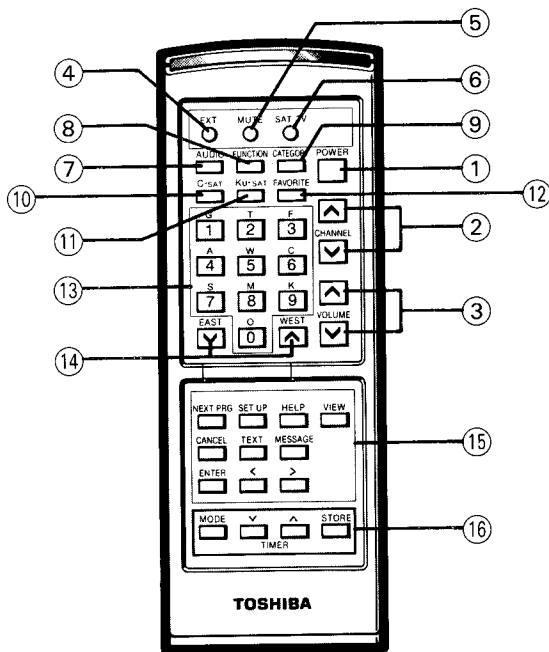

① POWER BUTTON

This button turns the receiver on or off.

② CHANNEL BUTTONS

These buttons allow channel scanning up or down.

③ VOLUME BUTTONS

These buttons adjust the audio up or down.

④ EXT BUTTON

This button selects the output signal (VIDEO OUT, S-VIDEO OUT, AUDIO OUT and VHF OUT) from either the external input (VIDEO and AUDIO IN) or the receiver signal.

⑤ MUTE BUTTON

This button mutes the sound.

⑥ SAT/TV BUTTON

This button selects the RF output, either satellite or TV.

⑦ AUDIO BUTTON

Pressing this button, followed by the ALPHANUMERIC buttons or EAST or WEST , selects preprogrammed audio subcarriers.

⑧ FUNCTION BUTTON

Pressing this button, followed by an ALPHANUMERIC button, selects one of the MAIN FUNCTIONS.

⑨ CATEGORY BUTTON

Pressing this button, followed by an ALPHANUMERIC button, selects a desired satellite program by category.

⑩ C-SAT BUTTON

Pressing this button, followed by the ALPHANUMERIC buttons or EAST or WEST , selects C-band satellites.

⑪ Ku-SAT BUTTON

Pressing this button, followed by the ALPHANUMERIC buttons or EAST or WEST , selects Ku-band satellites.

⑫ FAVORITE BUTTON

Pressing this button, followed by the ALPHANUMERIC buttons, selects a favorite program channel which can be stored in the receiver's memory.

⑬ ALPHANUMERIC BUTTONS

These 10 buttons are used to do the following.

- (1) To select a satellite and a channel directly. See page 17.
- (2) To select a favorite program. See page 27.
- (3) To select a satellite program by category. See page 21.
- (4) To select an audio program.
- (5) To select MAIN FUNCTIONS. See page 40.

⑭ ANTENNA EAST/WEST BUTTONS

This button is used to move the antenna. When pressed with , , this button cycles through programmed satellite positions.

⑮ VIDEOCIPHER® II PLUS CONTROLS

These buttons perform those functions associated with the operation of the VideoCipher® II Plus Descrambler, and are operative only when receiving VideoCipher® signal. See page 38.

Note: , and are also used for other functions.


If the wrong key was pressed or the operation of the TRX-2000 was unknown, press . will clear any on screen display.

⑯ TIMER FUNCTION BUTTONS

These buttons are used to operate the Timer functions. See page 29 in detail.

■ **INSTALLING THE BATTERIES:** See page 5.

LCD (LIQUID CRYSTAL DISPLAY)

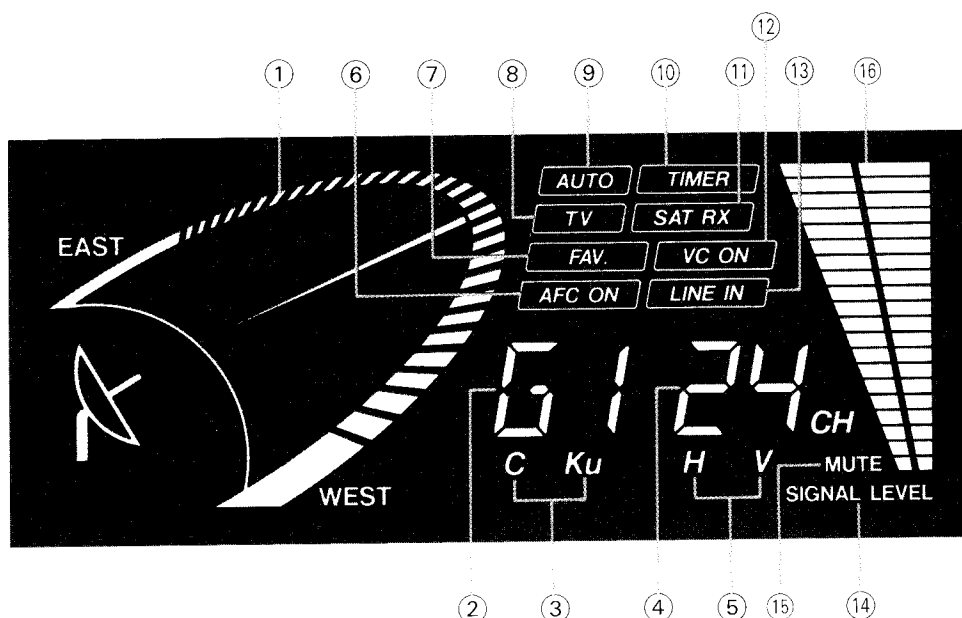

① ANTENNA POSITION DISPLAY

Graphically displays the antenna position.

② SATELLITE NAME DISPLAY

Displays the receiving satellite designation by 2 digits. Displays EL when the dish is at the east limit, and WL when the dish is at the west limit.

③ C/Ku BAND INDICATOR

Indicates the satellite band being received.

④ CHANNEL DISPLAY

Displays the satellite channel being received or the favorite program number.

⑤ POLARITY INDICATOR

Indicates the channel polarity. Displays "H" for horizontal and "V" for vertical polarity.

⑥ AFC INDICATOR

Indicates the Automatic Frequency Control is on. See page 37.

⑦ FAVORITE INDICATOR

Indicates a favorite program is selected.

⑧ TV INDICATOR

Indicates when the television signal is selected.

⑨ AUTO MODE INDICATOR

Indicates the AUTO mode has been selected.

⑩ TIMER INDICATOR

Indicates the TIMER function is on and flashes when power failure is occurred or clock is not set up.

⑪ SAT RX INDICATOR

Indicates the receiver is in the satellite mode.

⑫ VIDEOCIPHER® INDICATOR

Indicates the system is receiving a VideoCipher® II Plus signal.

⑬ LINE IN

Indicates the external signal (from VIDEO IN and AUDIO IN connector) is provided to the output terminal.

⑭ SIGNAL LEVEL INDICATOR

In the AUTO mode, level is displayed. In the PROGRAM mode, signal level is displayed.

⑮ AUDIO MUTE INDICATOR

Indicates the audio output is muted.

⑯ BAR GRAPH INDICATOR

When the receiver is in the AUTO mode, the audio output levels are displayed.

When the receiver is in the PROGRAM mode, the input signal strength is displayed.


INSTALLATION

1. CONNECTIONS TO A SATELLITE ANTENNA

Note: The cable from satellite antenna is heavy. It is recommended to secure it with the cable holder.


(1) SINGLE C-BAND

Set the INPUT MODE to C/KU.
See page 13.

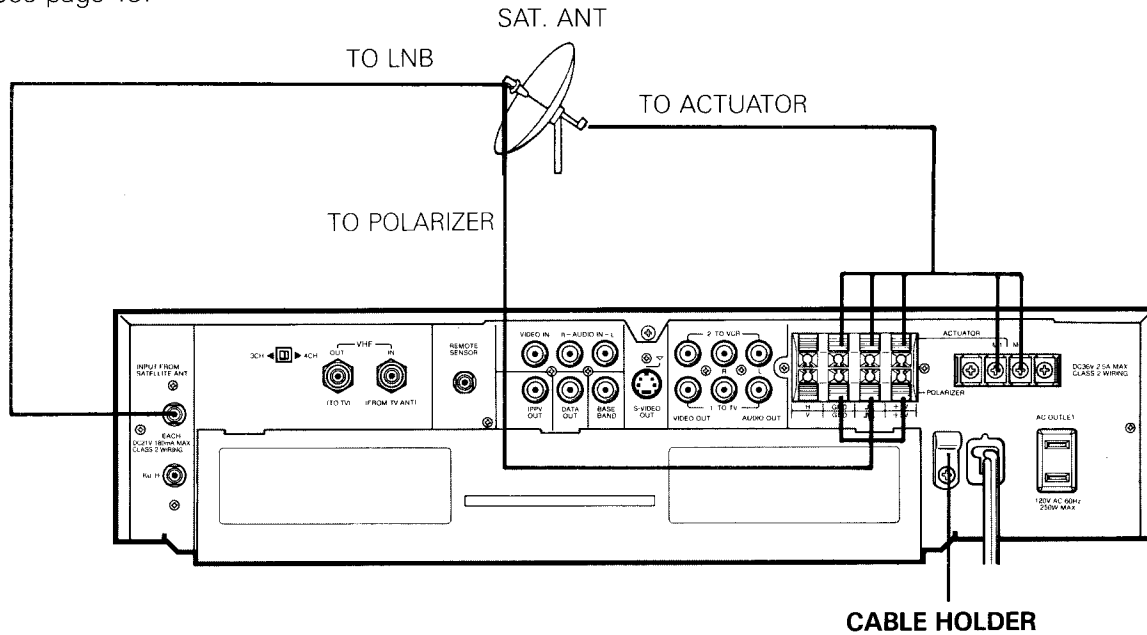


(2) DUAL LNBS

Set the INPUT MODE to V/H.
See page 13.

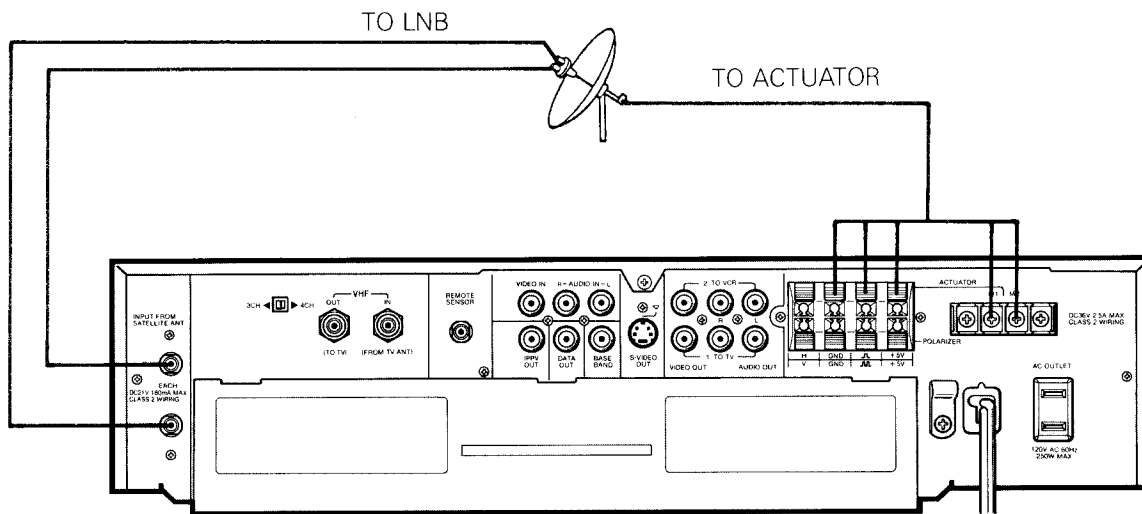

(3) SINGLE C-BAND AND SINGLE KU-BAND LNBs


Set the INPUT MODE to C/KU.
See page 13.

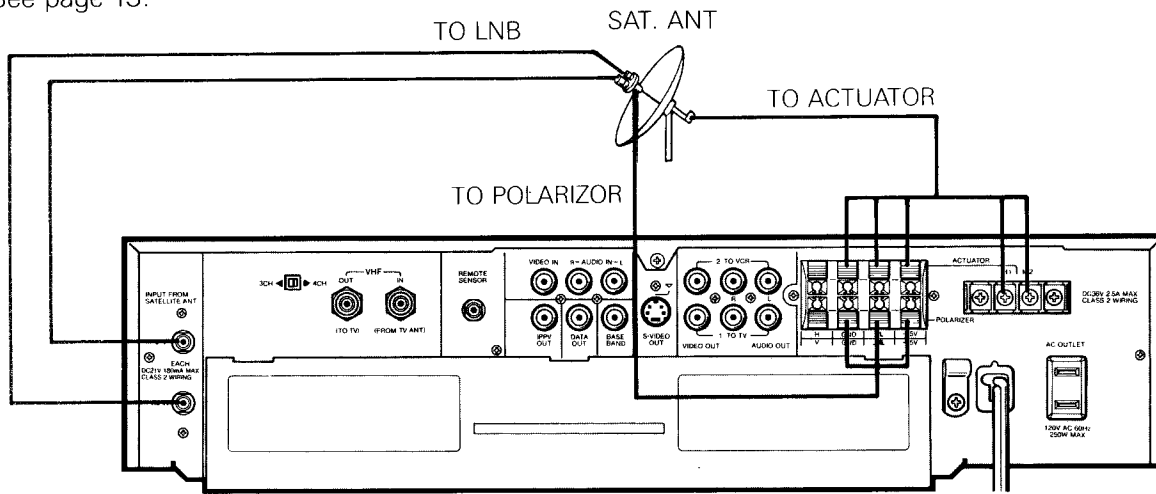

SET UP

(4) DUAL C-BAND LNBs AND MULTIPLE RECEIVERS


Set the INPUT MODE to V/H.
See page 13.

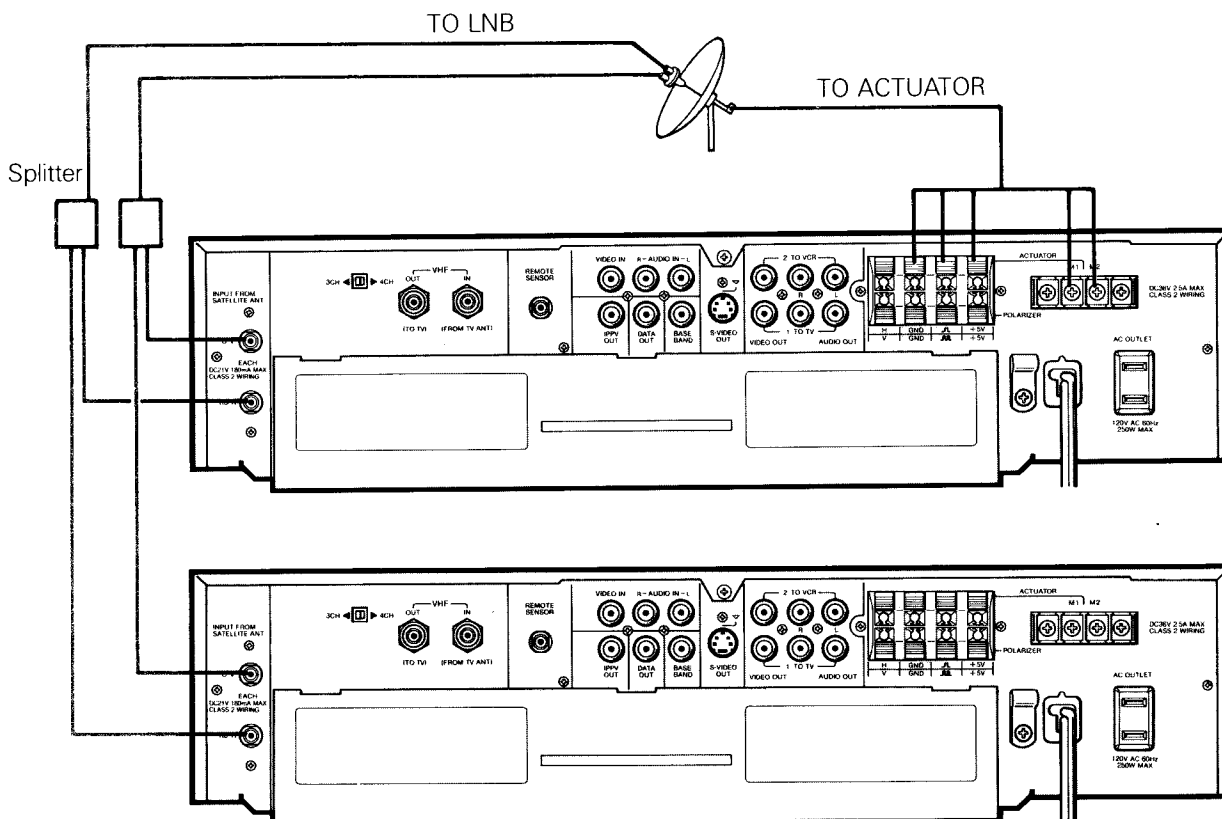

INSTALLATION

2. CONNECTION TO OTHER AV COMPONENTS


EX. 1

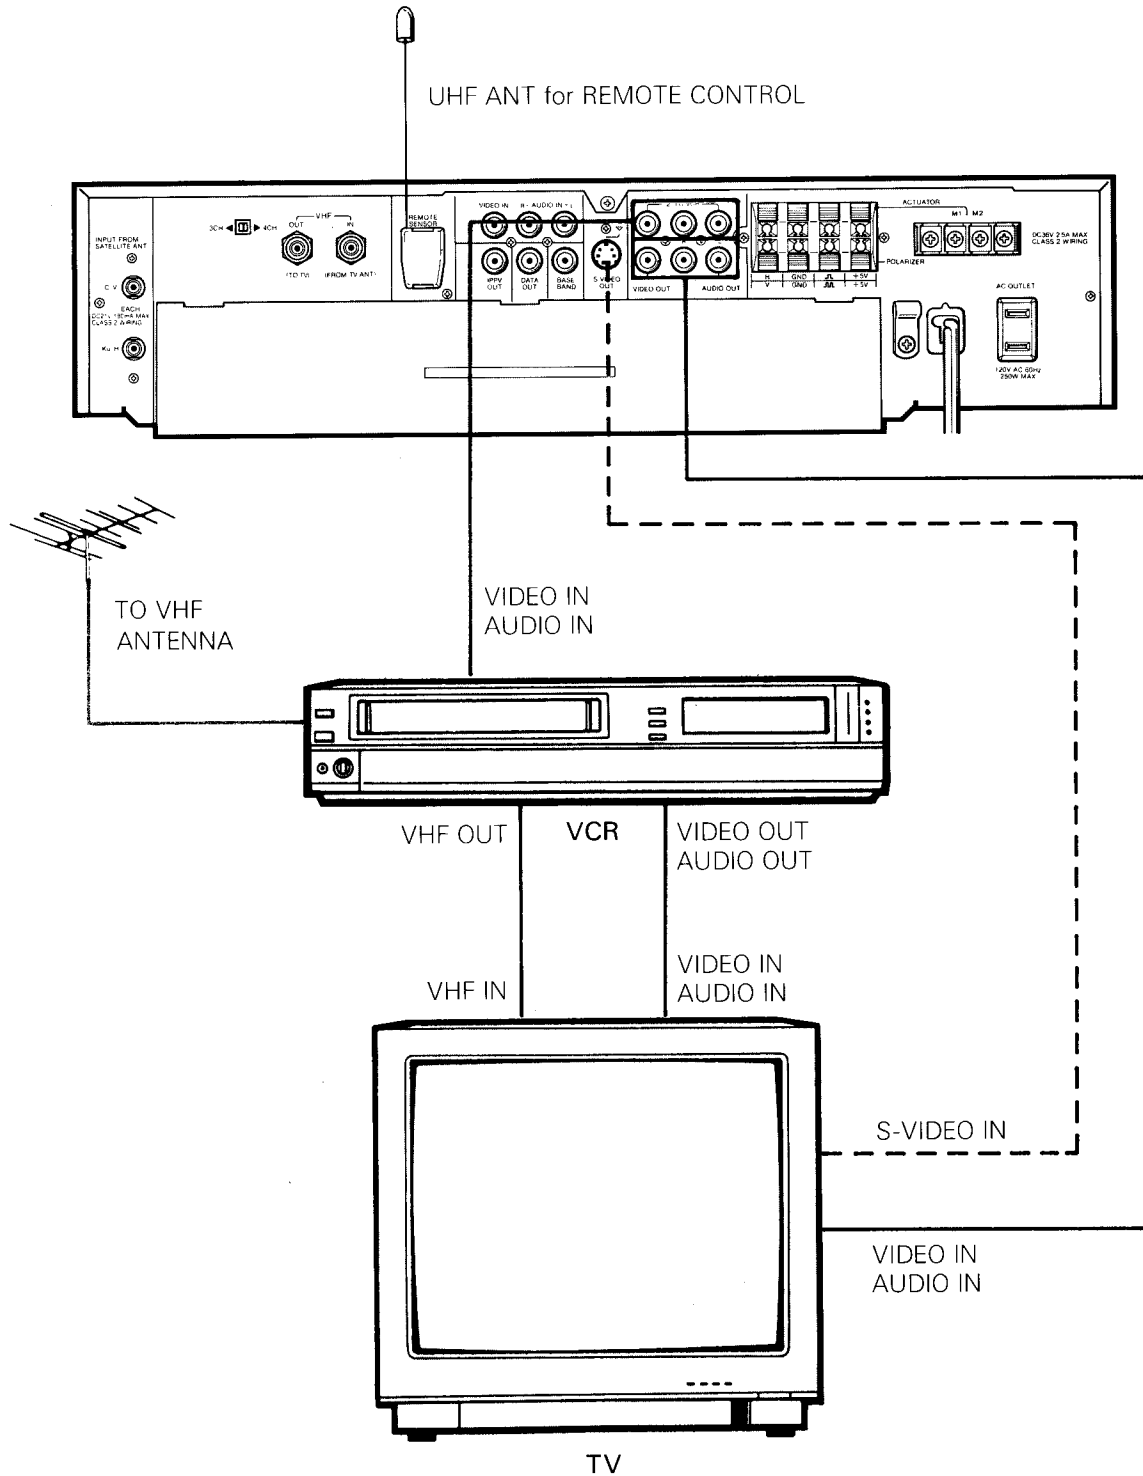

Note:

- When your TV set is equipped with S-VIDEO IN terminal, connect TRX-2000 to this terminal instead of the ordinary VIDEO IN. Audio connection is common for both S-VIDEO and ordinary VIDEO.


EX. 2

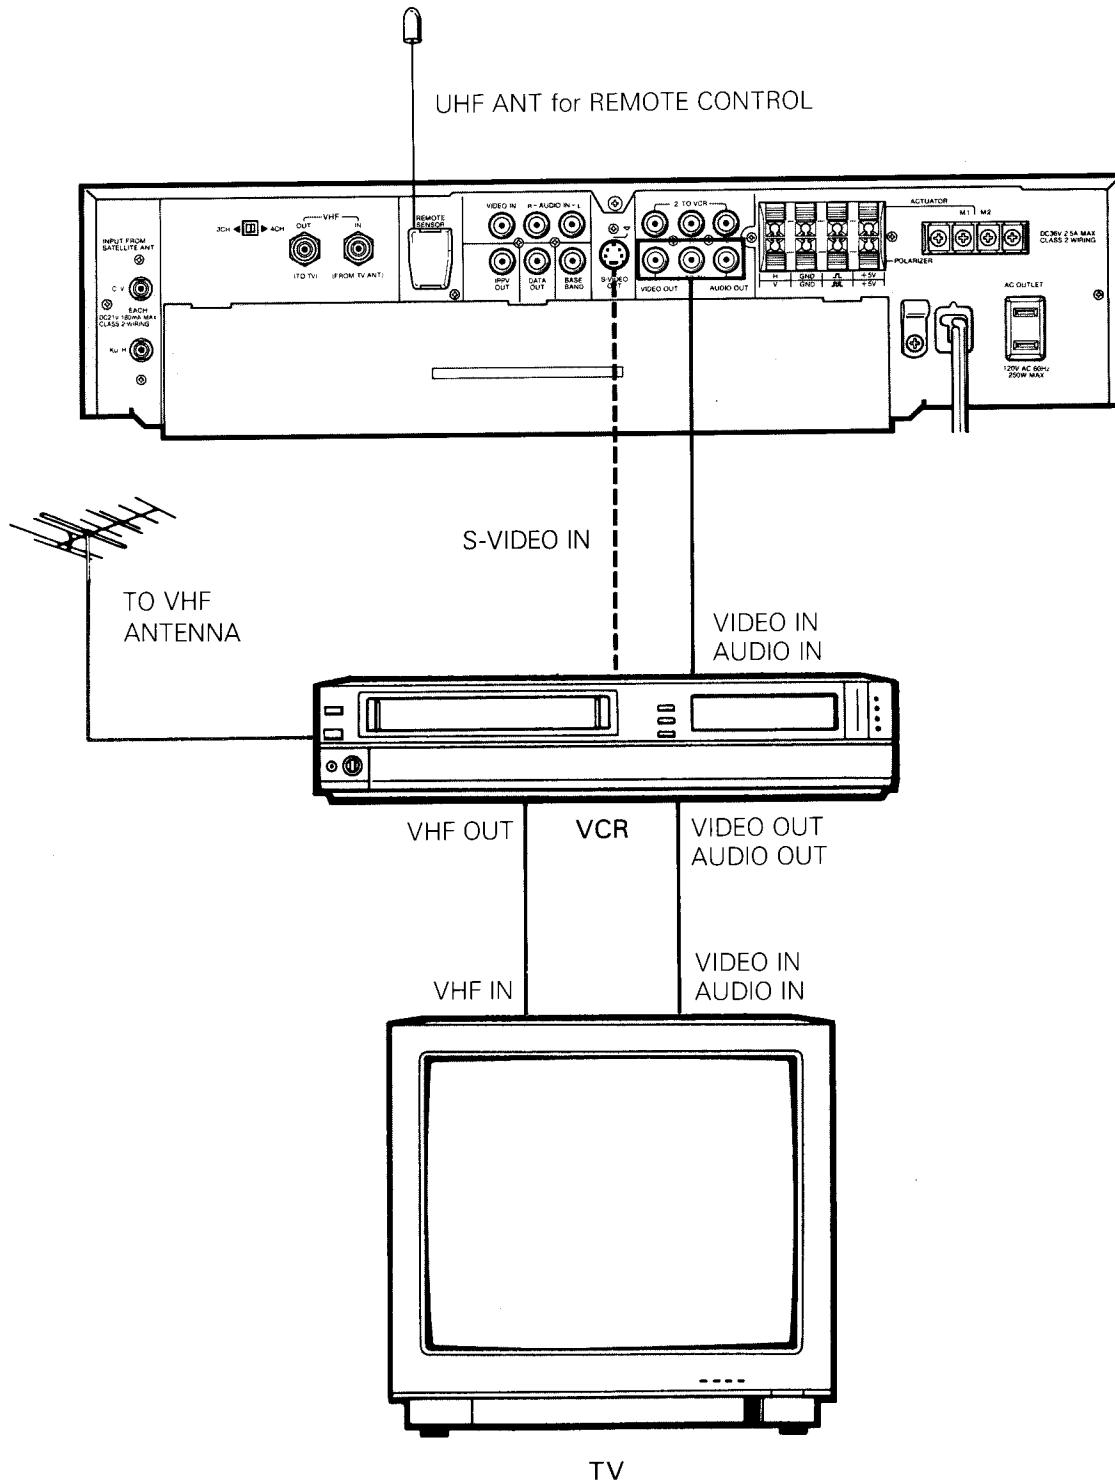

Note:

- When your VCR set is equipped with S-VIDEO IN terminal, connect TRX-2000 to this terminal instead of the ordinary VIDEO IN. Audio connection is common for both S-VIDEO and ordinary VIDEO.
- When recording a program on a VCR, set the TRX-2000's volume control to 63 (max.).

EX. 3

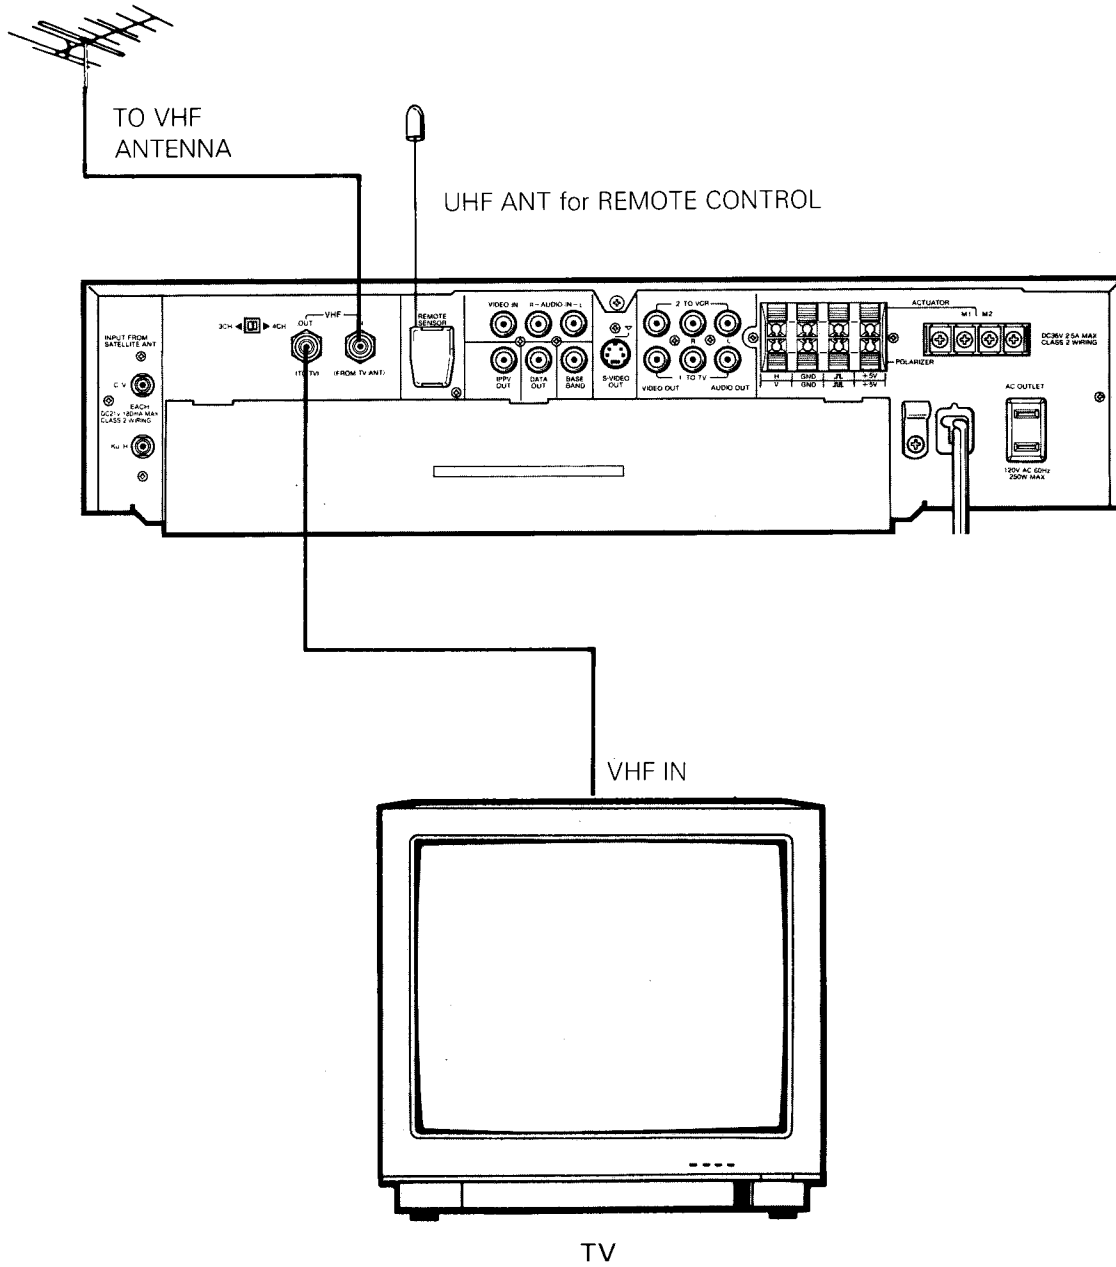

INITIAL SETUP

The following initial setup procedures must be completed before attempting to operate the receiver. Under normal circumstances, there should be no need to change these programs after the initial setup.


1. POWER ON

Turn on the receiver, TV and other equipment (such as an audio system or a video system). Select the appropriate input of the TV in accordance with the connection of the TV and the receiver.

2. SELECTING THE RECEIVER MODE

Confirm that the receiver is in the Program mode by checking that "AUTO" is not on the front panel display. When the "AUTO" light is on, set the receiver to the Program mode as follows.

(a) Press **FUNCTION**, **1**, **6** and the display will be as shown at right.

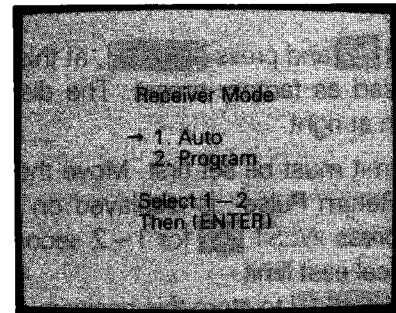


(b) Select **2** and press **ENTER**.

3. SELECTING THE INPUT MODE FOR YOUR SYSTEM

(a) Press **FUNCTION**, **1**, **5** and the display will be as shown at right.

(b) Select **1** or **2** in accordance with the connection of the antenna and LNB system which is being used.

(c) Press **ENTER** to select the mode.

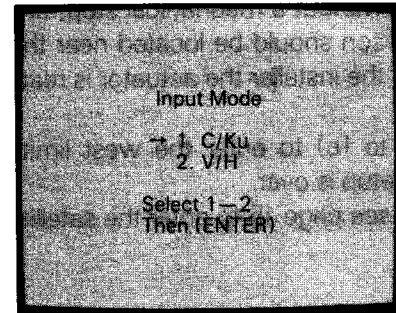

4. CHECK ACTUATOR WIRING


Confirm that when EAST is pressed, the antenna moves to the east. If not, swap the connection of M1 and M2 on the rear panel of the receiver.

INITIAL SETUP


5. SETTING ANTENNA LIMITS

Antenna limits must be set to prevent the antenna from traveling too far. The antenna limits should be set so that the antenna can aim anywhere between the farthest east satellite and the farthest west satellite, without hitting any objects such as the ground or a fence.

(a) Press **FUNCTION**, **4**, **4** and the display will be as shown at right.

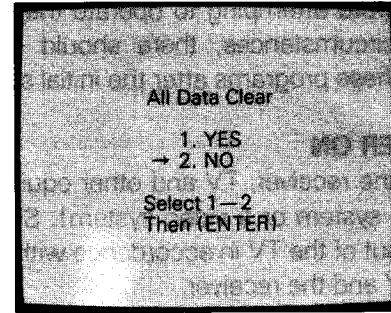

(b) Select **1** and press **ENTER**, at this time all data is initialized as factory preset. The display will be as shown at right.

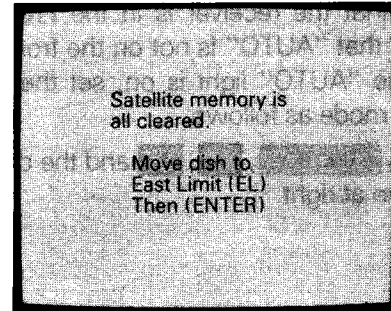

(c) East limit must be set first. Move the dish east until "No Return Pulse" is displayed on screen. At this time press **WEST** **▲** for 1~2 seconds. This is the electrical east limit.

Press **ENTER** to store this position.

Note: To avoid possible damage to an actuator without a mechanical stop, an additional person should be located near the dish to notify the installer the actuator is reaching its limit.

(d) Refer to (c) to enter the west limit. The antenna limit setup is over.

Next, see page 15 to enter the satellite positions.

5. SATELLITE POSITION MEMORY

Up to 60 satellites can be programmed (C-band: 30, Ku-band: 30). For the 34 satellites listed below, the 2-digit ALPHANUMERIC designates the band, polarity and audio/video frequencies which have been stored in memory for each of the satellites. Therefore, it is necessary to program only the satellite locations for these 34 satellites.

C-BAND

NO.	DESIGNATION	SATELLITE	POSITION
1	F5	AURORA	143° W
2	F1	SATCOM F1R	139° W
3	G1	GALAXY 1	134° W
4	F3	SATCOM F3	131° W
5	T3	TELSTAR 303	125° W
6	W5	WESTAR 5	122.5° W
7	S1	SPACENET 1	120° W
8	M1	MORELOS 1	113.5° W
9	A2	ANIK D2	110.5° W
10	A1	ANIK D1	104.5° W
11	W4	WESTAR 4	99° W
12	T1	TELSTAR 301	96° W
13	G3	GALAXY 3	93.5° W
14	W3	WESTAR 3	91° W
15	S3	SPACENET 3	87° W
16	T2	TELSTAR 302	85° W
17	F4	SATCOM F4	82° W
18	W2	WESTAR 2	79° W
19	G2	GALAXY 2	74° W
20	F2	SATCOM F2R	72° W
21	S2	SPACENET 2	69° W

Ku-BAND


NO.	DESIGNATION	SATELLITE	POSITION
1	T1	SPACENET 1	120° W
2	C3	ANIK C3	117.5° W
3	M1	MORELOS 1	113.5° W
4	C2	ANIK C2	110° W
5	G2	GSTAR 2	105° W
6	G1	GSTAR 1	103° W
7	S1	SBS 1	99° W
8	S2	SBS 2	97° W
9	S3	SBS 3	95° W
10	S4	SBS 4	91° W
11	K1	SATCOM K1	85° W
12	K2	SATCOM K2	81° W
13	T2	SPACENET 2	69° W

SET UP

INITIAL SETUP


(a) Press **FUNCTION**, **1**, **2**. The display will be as shown at right.

Select **1** and press **ENTER** to enable the CHANNEL SCAN function.

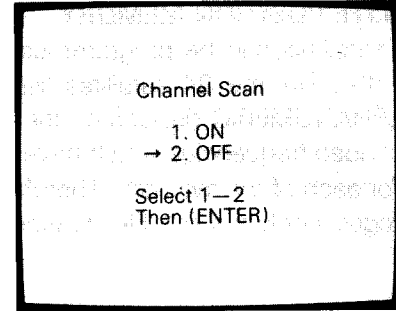

(b) Press **FUNCTION**, **1**, **3**. The display will be as shown at right.


Select **1** and **ENTER** to enable the AUTO TUNING function.

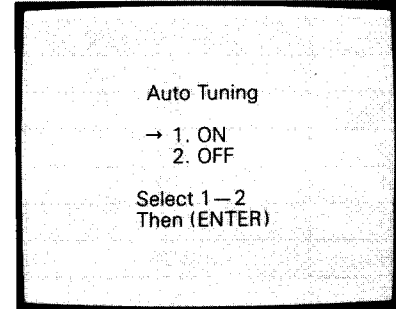

(c) Select C or Ku-band by pressing C-sat or Ku-sat and select a satellite name by pressing **←** or **→** until the desired satellite name appears, or enter the satellite designation (2 digit) by the ALPHANUMERIC buttons.


Ex. When GALAXY 1 is selected.

(d) By pressing and holding **FAST** **▼** or **WEST** **▲**, move the dish to the selected satellite until a picture is visible. To correctly identify the satellite, please refer to a current programming guide.

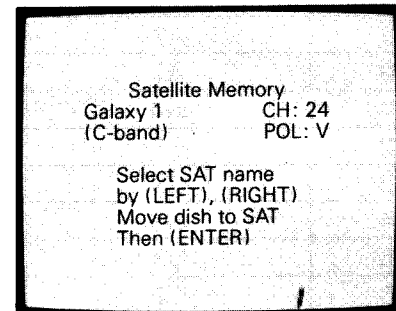

Press **ENTER** and the skew automatically adjusts to the satellite and then the antenna position automatically adjusts to the satellite.

When completed, the antenna position is stored.

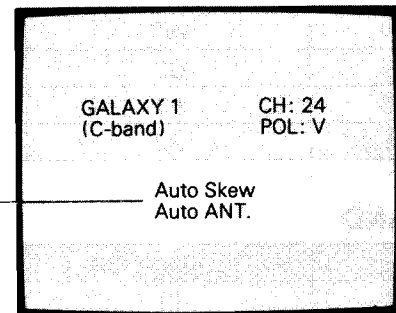

Flashing during operation.

To program additional satellite positions, operate again from (c) to (d).

The INITIAL SETUP is now finished.

The following is the basic operation of this receiver assuming that the operation of INSTALLATION section has been properly completed.

1. POWER ON

Press **POWER**. The LIQUID CRYSTAL DISPLAY (LCD) on the front panel will light up. Check the LCD that AUTO appears. If not, set the receiver mode to AUTO. See page 43.

2. SATELLITE AND CHANNEL SELECTION

(1) Satellite selection

There are two ways to select a satellite.

- Direct access

Press **CH** or **NUM** and input the desired satellite designation (2 digit as G1, F3, etc.) by pressing the ALPHANUMERIC buttons.

Then the dish will move to the desired satellite.



- Next access

Press **CH** or **NUM** and press and hold **CH** or **NUM** until the desired satellite name appears in the display.

After releasing the button, the dish will move to the desired satellite.

Note: If it is desired to view the programmed satellite list, press **LIST** or **INFO** twice, it will be displayed on the TV screen.

Press **RIGHT** or **LEFT** to see next or previous satellite list.

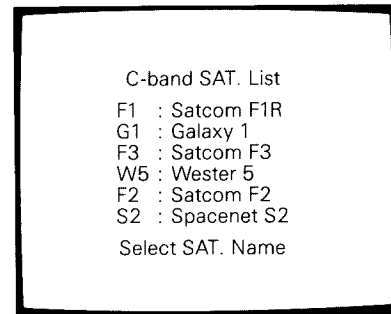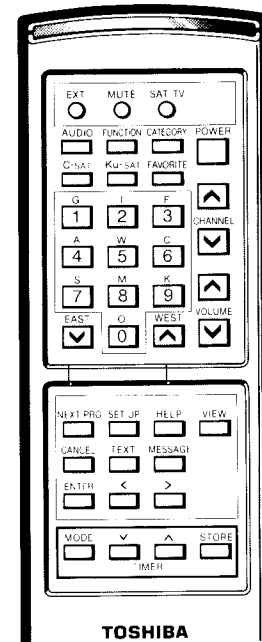


Ex. When G1, C-BAND is selected.

Press **CH** or **NUM** ,


or

Press **CH** or **NUM** , and hold **CH** or **NUM** until G1 is displayed on the LCD and on screen.


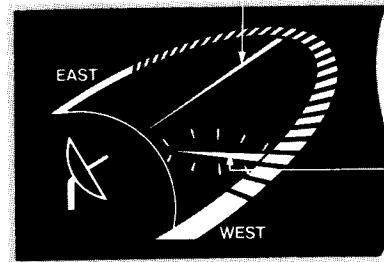


Displays the present antenna position. It moves toward the selected satellite position.

The flashing bar displays the selected satellite position.

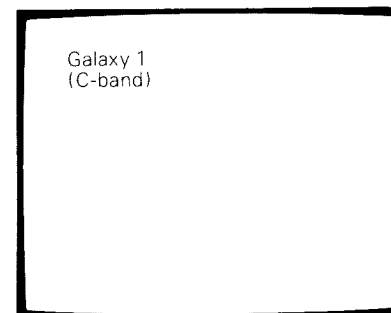



After the dish reaches the selected satellite position, (in this case, G1), the display will change.


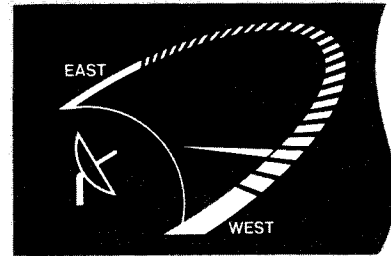
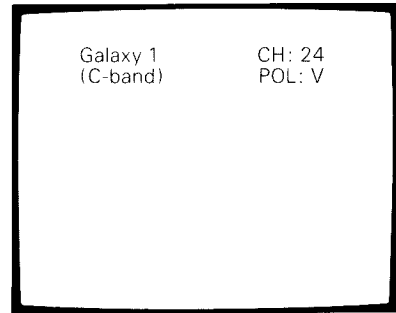


(2) Channel selection

There are two ways to select a channel.

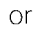- Direct access
Enter the desired channel number by pressing the ALPHANUMERIC buttons.
- Up, down access
Press  or  until the desired channel appears.

When a channel is selected, the number will be displayed as shown at right.

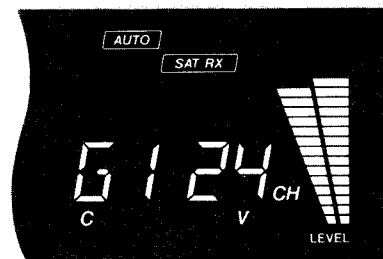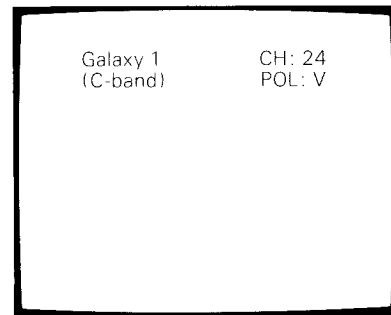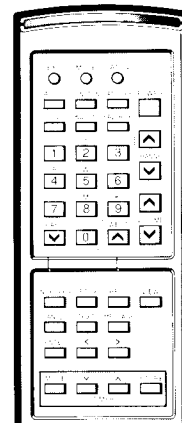

3. AUDIO PROGRAM SELECTION

This receiver has 30 (0-29) AUDIO PROGRAMS.
 By using this AUDIO PROGRAM function, the desired audio data can be selected easily.
 There are two ways to select an audio program.

● DIRECT ACCESS

(a) By pressing **AUDIO** twice, the AUDIO PROGRAM LIST will be displayed.

Press **◀** **▶** to see the next or previous AUDIO PROGRAM LIST.

(b) Select the desired program number.

● UP/DOWN ACCESS

(a) By pressing **AUDIO** and holding **▼** or **▲**, the AUDIO PROGRAM can be changed.

Note: The AUDIO PROGRAM 0 (VC AUDIO) is only for the VideoCipher® II Plus. The AUDIO PROGRAM is automatically set to the AUDIO PROGRAM 0 when receiving a VideoCipher® II Plus program.

Initially, the AUDIO PROGRAM is set as shown at right.

NO.	Mode	BW	A1	A2
0:	VC	Audio		
1:	MN	W	5.40	
2:	MN	W	5.41	
3:	MN	W	5.58	
4:	MN	W	5.76	
5:	MN	W	5.94	

Select 1—29

Audio Program 11

Mode : Monaural


Band : Wide

A1 6.80MHz

BASIC OPERATION


4. VOLUME AND MUTE CONTROLS

Press or button to adjust the audio to a comfortable listening level.

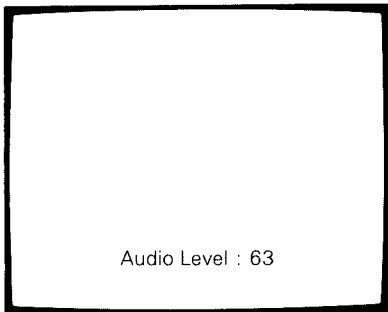

The volume reference level, 0–63 will change by pressing or .

The display will be as shown at right.

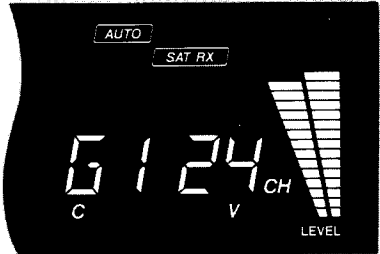


The bargraph indicator will move up or down in accordance to the audio level.

Press to turn off the audio. The display will be as shown at right.



Press again to return to the previous volume level.

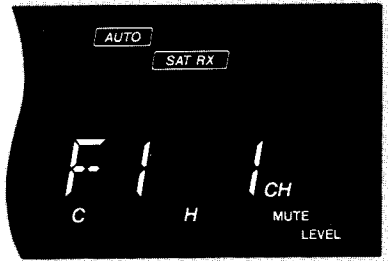

5. MOVING THE DISH

To move the dish, use or .


Note: If the wrong key was pressed or the operation of the TRX-2000 was unknown, press . will clear any on screen display. If "NO RETURN PULSE" is displayed on screen when a satellite is selected or the dish is moved, check the antenna and actuator connections.

CATEGORY SELECTION

The satellite programs are stored in 12 different categories. (Refer to the PROGRAM NAME LIST on page 25.) By using this function, it is possible to select the desired satellite program very easily. If desired, the factory programmed data can be changed. It is possible to store up to 144 satellite programs. Up to 12 programs can be stored in each category.


1. SELECTION

(a) Press **CATEGORY** and the category list will be displayed as shown at right.

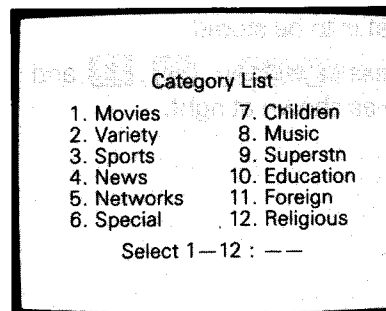

Ex. When **1** is selected.

(b) Select the desired category number and the program name list will be displayed as shown at right. Press **<** **>** to see the next or previous list. Select the desired program number.

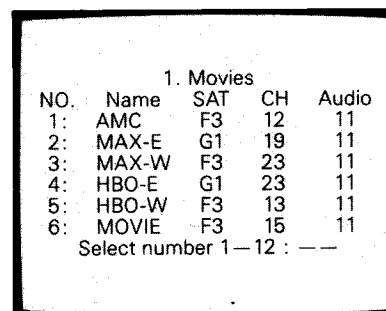

CATEGORY SELECTION


2. CHANGING A PROGRAM

Initially, 112 satellite programs have been factory programmed as shown in the list of the page 25.

If desired, they can be re-programmed as follows.

(1) TO STORE A PROGRAM


- (a) Confirm that the receiver is in the Auto mode.
- (b) Receive the desired satellite, channel and audio that is to be stored.
- (c) Press **FUNCTION**, **3**, **2** and the display will be as shown at right.

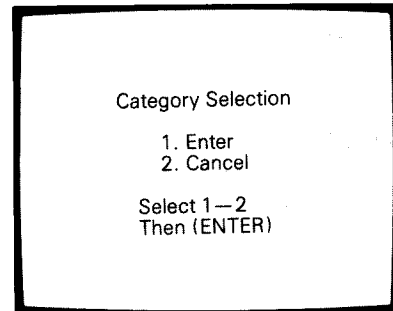

- (d) Select **1** and press **ENTER**. The category list will be displayed as shown at right.




- (e) Select the desired category number and the program name list will be displayed.
Press **←** **→** to see the next or previous list.

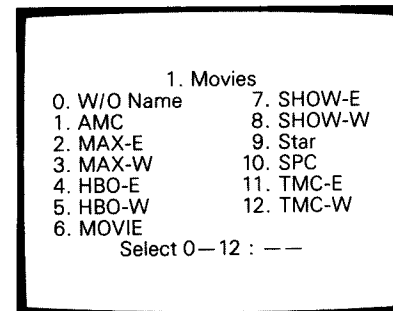


(f) Select the desired program name to be stored.
 If it is desired to store without a name, select 0 (w/o name).

(g) Select the desired program number from 1 to 12.
 The preprogrammed data will be displayed as shown at right. Press **ENTER** to store.

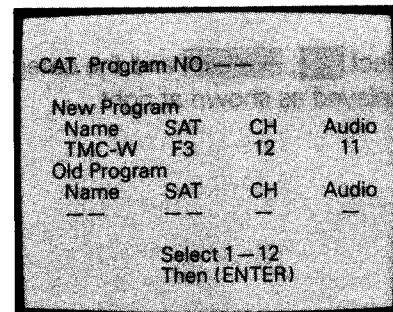


(h) If it is not decided which program number to store, press **CATEGORY**. The category program list will be displayed as shown at right. Press **<** to see the next or previous list. Press **>** to return.

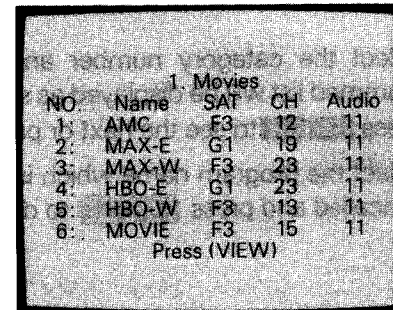


CATEGORY SELECTION

(2) TO CANCEL THE PROGRAM


- (a) Confirm that the receiver is in the Auto mode.
- (b) Press **FUNCTION**, **3**, **2** and the display will be as shown at right.

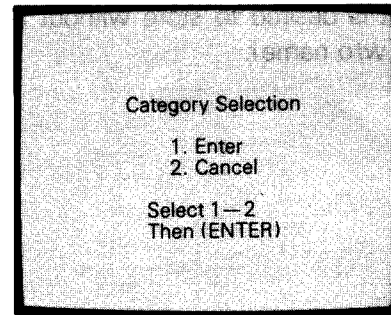

- (c) Select **2**, **ENTER** and the category list will be displayed as shown at right.

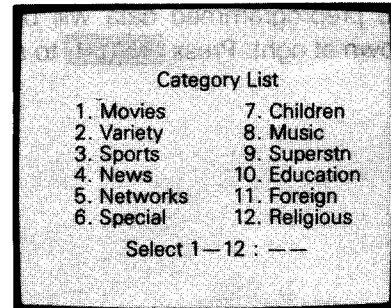

- (d) Select the category number and the preprogrammed list will be displayed as shown at right. Press **<** **>** to see the next or previous list.
- (e) Select the program name which is desired to be cancelled and press **CANCEL** to delete the data.

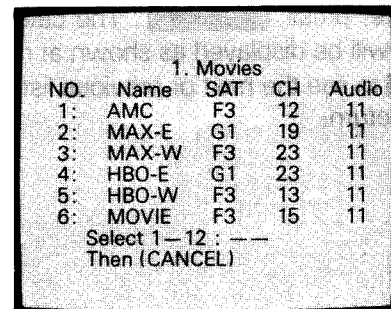

**CATEGORY SELECTION
SATELLITE PROGRAM LIST**

1. MOVIES

PROGRAM NAME	ABBREV	SAT	CH
1. American Movie Classics	AMC	F3	12
2. Cinemax-East	MAX-E	G1	19
3. Cinemax-West	MAX-W	F3	23
4. Home Box Office-East	HBO-E	G1	23
5. Home Box Office-West	HBO-W	F3	13
6. Movietime	MOVIE	F3	15
7. Showtime-East	SHO-E	G1	5
8. Showtime-West	SHO-W	G1	16
9. Stardust Theatre	STAR	G2	2
10. Starion Premiere Cinema	SPC	S3	19
11. The Movie Channel-East	TMC-E	G1	10
12. The Movie Channel-West	TMC-W	G1	14

2. VARIETY

PROGRAM NAME	ABBREV	SAT	CH
1. Arts & Entertainment	A E	G1	12
2. Black Entertainment TV	BET	F3	20
3. Bravo	BRAVO	F3	4
4. Channel America	CHAMER	S2	5
5. Family Channel-East	TFC	G1	11
6. Lifetime-East	LIFE-E	G3	20
7. Lifetime-West	LIFE-W	F3	17
8. Nostalgia Channel	NOST	F4	21
9. RFD-TV	RFD-TV	W5	17
10. Turner Network TV	TNT	F3	18
11. USA Network-East	USA-E	G1	21
12. USA Network-West	USA-W	F3	10

3. SPORTS

PROGRAM NAME	ABBREV	SAT	CH
1. ESPN	ESPN	G1	9
2. Home Team Sports	HTS	S3	23
3. Madison Sq. Garden Network	MSGN	F4	6
4. Midwest Sports Channel	MSC	W5	20
5. New England Sports Network	NESN	F4	13
6. Pacific Sports Network	PSN	F1	5
7. Pass-Detroit	PASS	S3	21
8. Prime Sports Network	PSNW	F1	17
9. Prime Ticket	PRTIC	F4	20
10. Sports Channel	SPCHAN	F4	10
11. Sports Newsatellite	SNS	T1	13
12. Sunshine Network	SUNNET	F1	11

4. NEWS & INFORMATION

PROGRAM NAME	ABBREV	SAT	CH
1. All News Channel	ANC	F2	7
2. C-SPAN	CSPAN	G3	24
3. C-SPAN II	CSPAN2	G3	14
4. Cable News Network	CNNET	G1	7
5. CNBC	CNBC	F3	6
6. Headline News	CNN	G1	8
7. Financial News Network	FNN	F3	11
8. NASA-Select Channel	NASA	F2	13
9. The Travel Channel	TTC	F3	16
10. The Weather Channel	TWC	G3	13
11. The Weather Network	TWN	A2	11

5. NETWORKS

PROGRAM NAME	ABBREV	SAT	CH
1. ABC-East	ABC-E	T1	10
2. CBC North-East	CBC-E	A1	19
3. CBC North-Pacific	CBC-P	A1	11
4. CBMT-Montreal (CBC)	CBMT	A1	20
5. KCNC-Denver (NBC)	KCNC-D	F1	4
6. KMGH-Denver (CBS)	KMGH-D	F1	6
7. KRMA-Denver (PBS)	KRMA-D	F1	12
8. KUSA-Denver (ABC)	KUSA-D	F1	2
9. PBS-A	PBS-A	W4	15
10. WABC-New York (ABC)	WABC	F2	4
11. WBBM-Chicago (CBS)	WBBM	F2	2
12. WXIA-Atlanta (NBC)	WXIA	F2	12

6. SPECIAL

PROGRAM NAME	ABBREV	SAT	CH
1. Cable Video Store PPV	CVS	G3	5
2. Comedy Channel	COMEDY	G1	1
3. Drive-In Cinema PPV	DCINE	S2	1
4. HA Channel	HA	G3	23
5. Playboy At Night	PLAY	F4	24
6. Rendezvous PPV	REN	S2	3
7. Viewer's Choice PPV 1	VC-1	G3	16
8. Viewer's Choice PPV 2	VC-2	G3	21

ADVANCED OPERATION

7. CHILDRENS

PROGRAM NAME	ABBREV	SAT	CH
1. Disney Channel-East	DIS-E	G1	4
2. Disney Channel-West	DIS-W	G1	24
3. Nickelodeon-East	NICK-E	G3	19
4. Nickelodeon-West	NICK-W	G3	22

8. MUSIC

PROGRAM NAME	ABBREV	SAT	CH
1. Country Music TV	CMTV	G1	13
2. Music TV-East	MTV-E	G3	17
3. Music TV-West	MTV-W	G3	18
4. Much Music	MUCHM	A1	6
5. Nashville Network	TNN	G1	2
6. Video Hits One	VH-1	G3	15

9. SUPERSTATIONS

PROGRAM NAME	ABBREV	SAT	CH
1. KTLA-Los Angeles	KTLA	S3	15
2. KTVT-Ft. Worth	KTVT	S3	5
3. KWGN-Denver	KWGN	F1	14
4. Superstation-TBS	TBS	G1	18
5. WGN-Chicago	WGN	G1	3
6. WPIX-New York	WPIX	S3	9
7. WSBK-Boston	WSBK	S3	3
8. WWOR-New York	WWOR	G1	15

10. EDUCATION

PROGRAM NAME	ABBREV	SAT	CH
1. The Discovery Channel	DISC	G1	22
2. The Learning Channel	TLC	F3	2
3. Mind Extension University	MEU	G3	11
4. Oklahoma State	OSU	W4	13

11. FOREIGN

PROGRAM NAME	ABBREV	SAT	CH
1. CBC French-East	CBFT	A1	15
2. French TV1	FTV1	F2	20
3. Galavision (Spanish)	GALAV	G1	20
4. Galavision ECO (Spanish)	GALA	W5	6
5. SCOLA	SCOLA	S2	19
6. Telemundo (Spanish)	TELE	S2	9
7. TV5 (French)	TV5	A2	17
8. XEW-Mexico City (Spanish)	XEW	M1	14
9. XHTV Mexico City	XHTV	M1	7
10. XHDF-Mexico City (Spanish)	XHDF	M1	8
11. XHGC-Televisa (Spanish)	XHGC	M1	10
12. XHIMT-Mexico City (Spanish)	XHIMT	M1	2

12. RELIGIOUS

PROGRAM NAME	ABBREV	SAT	CH
1. AM. Christian TV System	ACTS	G3	7
2. Baptist Television Network	BTN	S1	21
3. Eternal Word TV Network	EWTN	G3	10
4. Familynet	FAMILY	F4	5
5. Inspirational Network	INNET	G1	17
6. Keystone Inspirational Net.	KIN	W4	9
7. National Christian Network	NCN	W4	6
8. Trinity Broadcasting Network	TBN	F3	3
9. University Network	UNET	W5	2
10. Vision TV	VISNTV	A2	15
11. VISN	VISN	F3	9


FAVORITE PROGRAM

By using this function, it is possible to store up to 20 of your favorite satellite programs. Then it is possible to select your desired satellite channel without selecting a satellite or channel. These programs may be on the same satellite or 20 different satellites. These features are only available in the AUTO mode.


1. FAVORITE PROGRAMMING

(1) STORING A FAVORITE PROGRAM


- Confirm that the receiver is in the AUTO mode by checking the LCD on the front panel.
- Receive the satellite, channel and audio that is to be stored.
- Press **FUNCTION**, **3**, **3** and the display will be as shown at right.

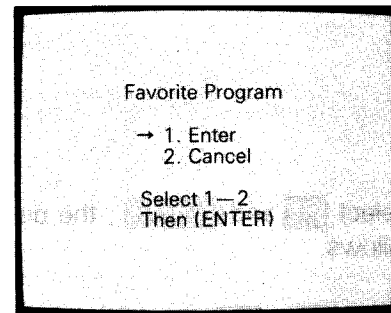


Select **1** and **ENTER**. The satellite and channel will be displayed as shown at right.

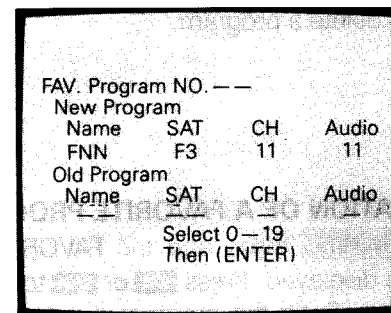

Input the FAVORITE PROGRAM number (0-19), which is to be stored and press **ENTER**.

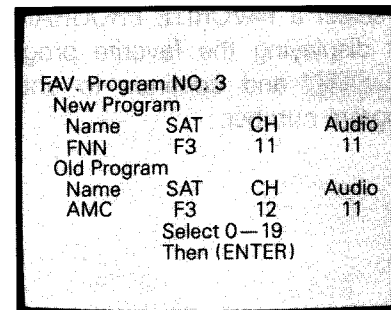

- If it is undecided which program number to store, press **FAVORITE**. Press **<** or **>** to see the next or previous favorite program list. The FAVORITE PROGRAM list will be displayed as shown at right. Press **VIEW** to return.

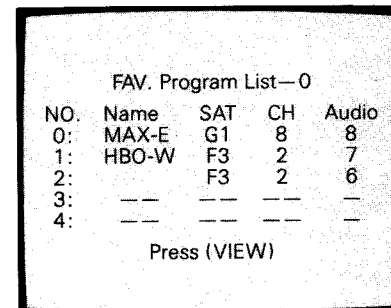


ADVANCED OPERATION

FAVORITE PROGRAM

(2) TO CANCEL A FAVORITE PROGRAM


- (a) Confirm that the receiver is in the AUTO mode by checking the LCD on the front panel.
- (b) Press **FUNCTION**, **[3]**, **[3]** and the display will be as shown at right.

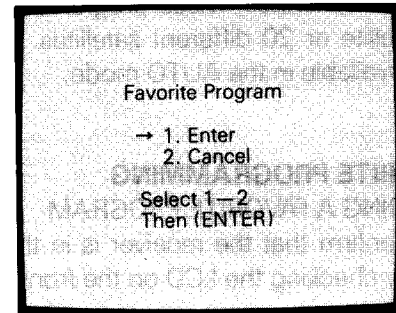

Select **[2]** and **ENTER**, the display will be as follows.

Press **[<]** or **[>]** to see the next or previous list.


- (c) Select the program number and press **CANCEL** to delete a program.

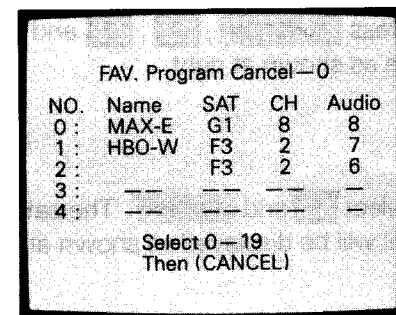

2. OPERATION OF A FAVORITE PROGRAM

Press **FAVORITE** twice and the FAVORITE PROGRAM list will be displayed. Press **[<]** or **[>]** to see the next or previous list. Enter the program number to select your FAVORITE PROGRAM.

Note: To select a FAVORITE PROGRAM directly without displaying the favorite program list, press **FAVORITE** and continue to enter the desired program number.

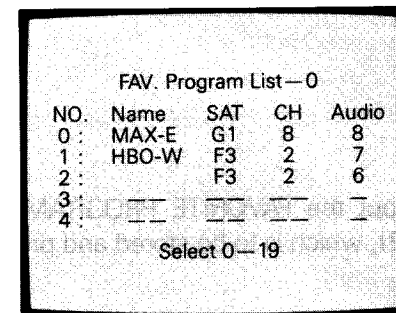

TIMER FUNCTION

There are 2 types of timer functions. They are normal and daily. A normal program can be set for 1 day up to a year in advance. A daily program can be set for the same program everyday. Up to 8 programs can be


set in all. When the programmed time has come, the receiver will be turned on, and go to the satellite and channel which has been programmed.

The timer function is only available in the Auto mode.


(1) CLOCK SETTING

Before using the TIMER FUNCTION, it is necessary to set the clock.


(a) Press **MODE** and the display will be as shown at right.

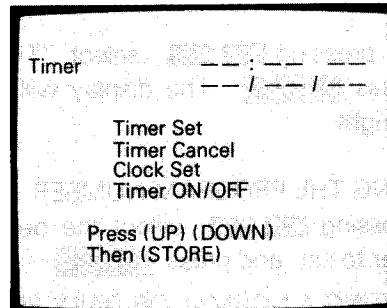


(b) By pressing **▼ ▲**, select "Clock Set". Press **STORE** and the display will be as shown at right.

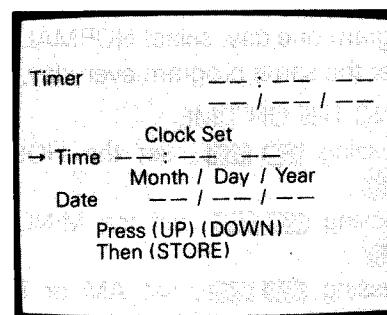

(c) Set the present time.
First, set the hour by pressing **▼ ▲**. Press **STORE**.
Next, set the minutes and AM or PM.

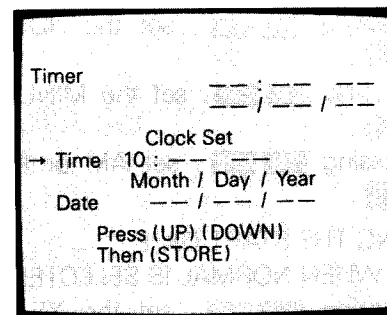


(d) Set the date.
First, set the year by pressing **▼ ▲**. Press **STORE**.
Next, set the month and the day.
When the date is stored, the day of the week will be displayed.

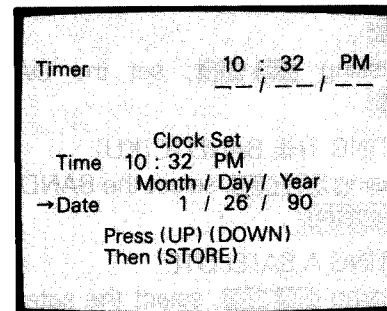

TIMER FUNCTION

(2) SETTING THE TIMER


(a) Press **MODE** and the display will be as shown at right.

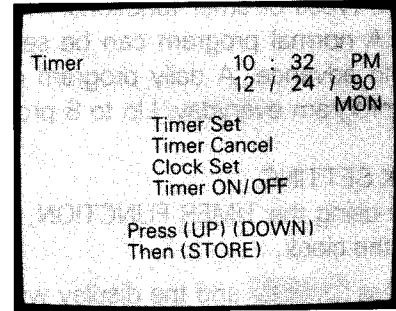

(b) By pressing **▼ ▲**, select "Timer Set" and press **STORE**. The display will be as shown at right.

SETTING THE PROGRAM NUMBER

By pressing **▼ ▲**, select the desired program number to set, and press **STORE**.

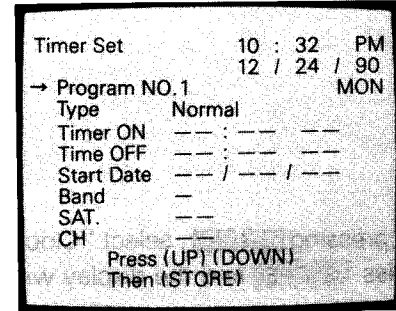

SELECTING A NORMAL OR DAILY PROGRAM

By pressing **▼ ▲**, select the NORMAL PROGRAM or DAILY PROGRAM.

To program one day, select NORMAL.


To enter the same program everyday, select DAILY.

SETTING THE ON TIME

By pressing **▼ ▲**, set the HOUR and press **STORE**.

By pressing **▼ ▲**, set the MINUTE and press **STORE**.

By pressing **▼ ▲**, set AM or PM and press **STORE**.

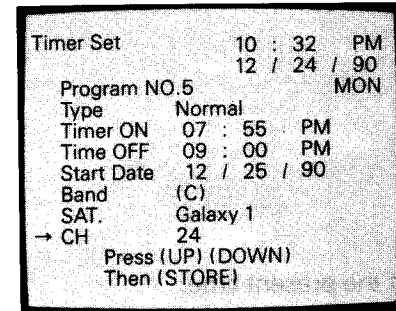

SETTING THE OFF TIME

By pressing **▼ ▲**, set the HOUR and press **STORE**.

By pressing **▼ ▲**, set the MINUTE and press **STORE**.

By pressing **▼ ▲**, set AM or PM and press **STORE**.

SETTING THE START DATE

(ONLY WHEN NORMAL IS SELECTED)

By pressing **▼ ▲**, set the YEAR and press **STORE**.

By pressing **▼ ▲**, set the MONTH and press **STORE**.

By pressing **▼ ▲**, set the DAY and press **STORE**.

SELECTING THE BAND (C/KU)

By pressing **▼ ▲**, select the BAND (C or Ku) and press **STORE**.

SELECTING A SATELLITE

By pressing **▼ ▲**, select the satellite name and press **STORE**.

SELECTING A CHANNEL

By pressing **▼ ▲**, select the channel number and press **STORE**.

IMPORTANT:


See TIMER ON/OFF FUNCTION section (page 32) to turn on the timer function.

NOTE:


Even after the timer is programmed, and is on, the receiver can be used as normal. When the programmed time has come, the receiver will automatically move to the programmed satellite position and channel. When the timer is on, only the power button can be used. All other front panel and remote control buttons are inoperative.

(3) CANCELING A TIMER PROGRAM

(a) Press **STOP** and the display will be as shown at right.

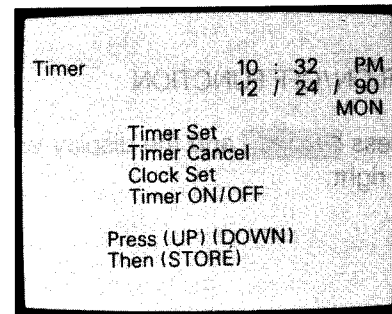

(b) Select "Timer Cancel" and press **STORE**. The display will be as shown at right.

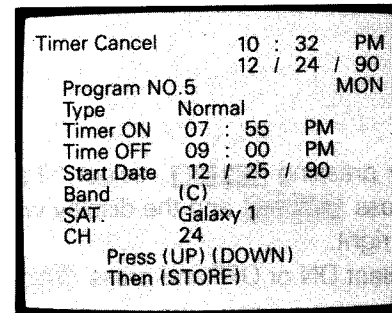

(c) By pressing **UP** **DOWN**, select the desired program number to cancel.
Press **STORE** to cancel the data.


NOTE: IN CASE OF POWER FAILURE

When there has been a power failure, "TIMER" indicator on the front panel flashes to inform. In this case, set the clock again.


TIMER FUNCTION

(4) TIMER ON/OFF FUNCTION

(a) Press **MODE** and the display will be as shown at right.

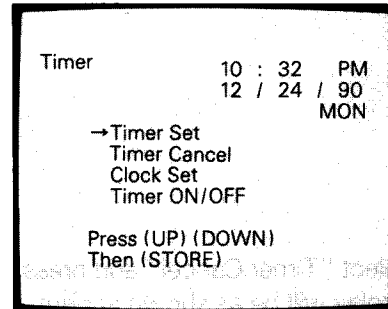


(b) By pressing **↓** **↑**, select "Timer ON/OFF". Press **STORE** and the display will be as shown at right. Select ON or OFF and press **STORE**.

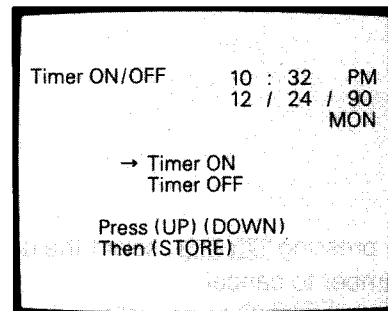


(5) CONFIRMING THE TIMER PROGRAM

(a) Press **MODE** and the display will be as shown at right.

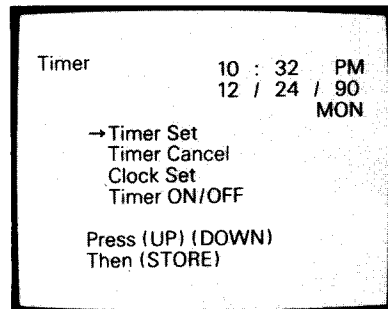

(b) By pressing **↓** **↑**, select "Timer Set". Press **STORE** and the display will be as shown at right.

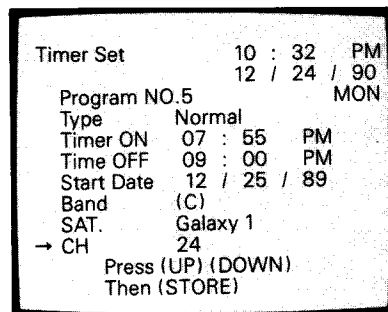

(c) By pressing **↓** **↑**, the program number can be changed. And the programmed data will be displayed. Press **MODE** to return.

PARENTAL CONTROL

There are two features in PARENTAL CONTROL, one is antenna lock and the other is channel lockout. The password is needed to use this PARENTAL CONTROL feature. Initially, 1048 was programmed. If desired, a password can be added by using the CHANGING PASSWORD section.

NOTE:


This function can be used only when receiver is in the AUTO mode. When PARENTAL CONTROL is on, the receiver mode can not be changed from AUTO to PROGRAM.

1. ANTENNA LOCK PROGRAMMING


(a) Confirm that the receiver is in the AUTO mode.

Select the desired satellite.


Press FUNCTION, [4] and the display will be as shown at right.

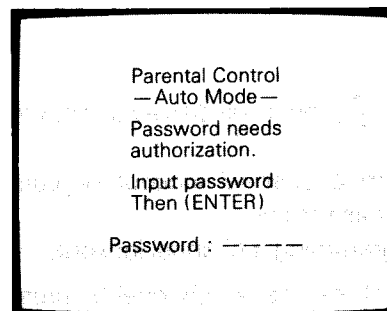

(b) Input the password and press ENTER. When the password is correct, the display will be as shown at right.

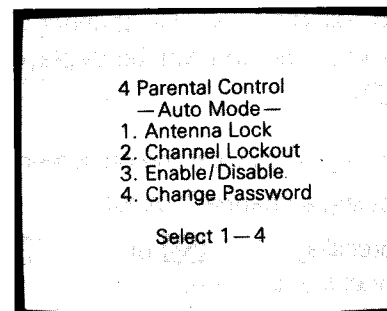

(c) Select [1] and the display will be as shown at right.

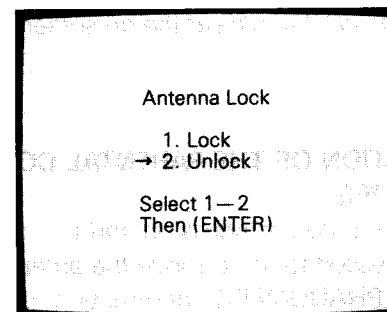

(d) Select lock or unlock.

● To lock the antenna, press [1] and [ENTER].


● To unlock the antenna, press [2] and [ENTER].

2. CHANNEL LOCKOUT PROGRAMMING

(a) Confirm that the receiver is in the AUTO mode.


Select the satellite which has the desired channel to be locked out.

(b) Press FUNCTION, [4] and the display will be as shown at right.

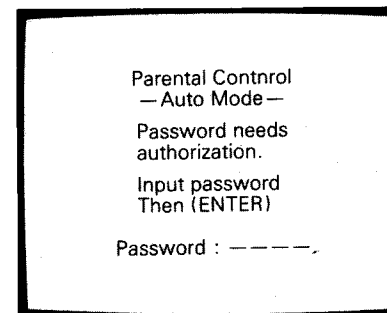

PARENTAL CONTROL

(c) Input the password and press **ENTER**. When the password is correct, the display will be as shown at right.

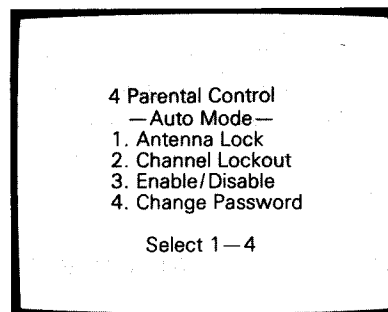

(d) Select **2** and it will display as shown at right.

(e) Program a channel lockout or cancel a channel lockout as follows.



● Programming a channel lockout.

Select the desired channel by pressing **EAST**  or **WEST** .

Press **ENTER** and the channel is programmed to lockout and an L will be displayed as indicated at right.



Press **VIEW** to clear the on screen display.

● Canceling a channel lockout.



By pressing **EAST**  or **WEST** , select the channel that is locked out..


Press **CANCEL**, channel will not be locked out.

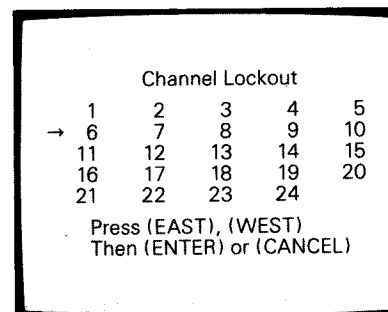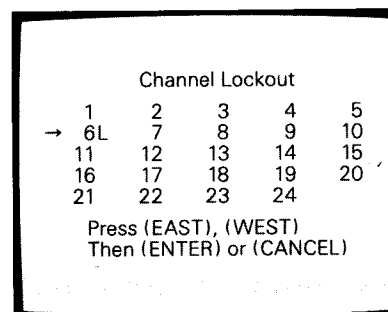Press **VIEW** to clear the on screen display.




3. OPERATION OF THE PARENTAL CONTROL FEATURES

● When the antenna lock is on and **EAST**  or **WEST**  is pressed to try to move the antenna, or if a satellite ALPHANUMERIC designation is entered, the display will be as shown at right.

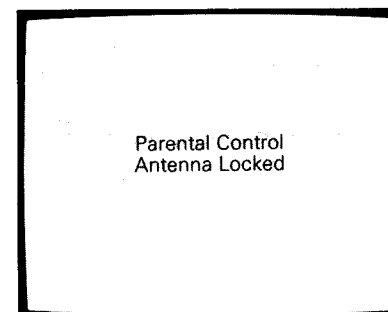


- When the channel lockout is on and a satellite channel is selected that is programmed to lockout, the display will be as shown at right.

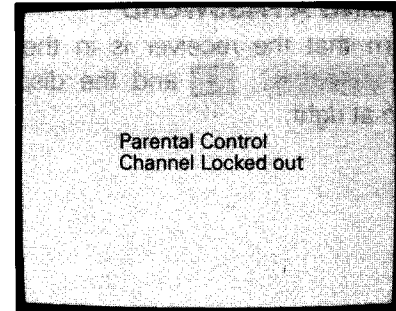


4. TO ENABLE OR DISABLE THE PARENTAL CONTROL FEATURES

- (a) Confirm that the receiver is in the AUTO mode. Press **FUNCTION**, **4** and the display will be as shown at right.

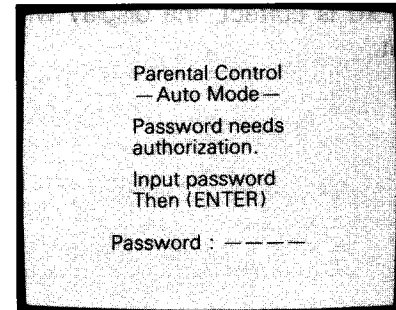


- (b) Input the password and press **ENTER**. When the password is correct, the display will be as shown at right.

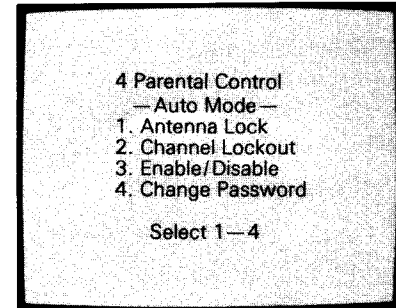

Select **3** and the display will be as shown at right.


- (c) Select enable or disable as follows.
- To enable the parental control. Select **1** and press **ENTER**.
 - To disable the parental control. Select **2** and press **ENTER**.

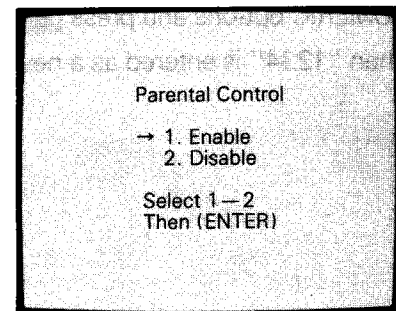


PARENTAL CONTROL

5. CHANGING A PASSWORD


(a) Confirm that the receiver is in the AUTO mode.
Press [FUNCTION], [4] and the display will be as shown at right.

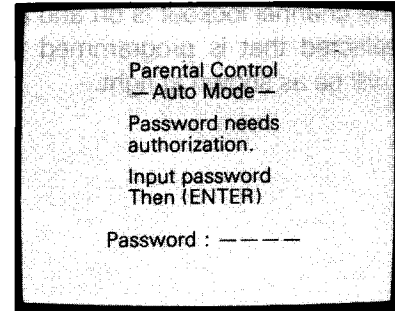


(b) Input the password and press ENTER. When the password is correct, the display will be as shown at right.

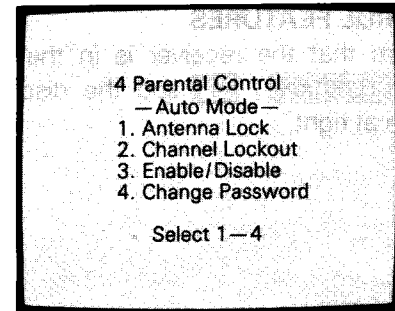

(c) Select [4] and the display will be as shown at right.

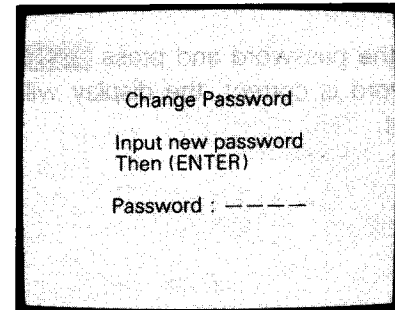


(d) Input the new password (4 digit) by using the ALPHANUMERIC buttons and press ENTER to store.
Ex. When "1234" is entered as a new password.

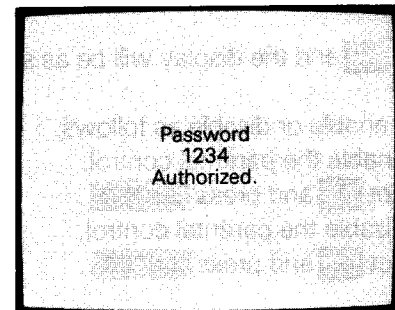


T.I FILTER & CH FINE TUNING

This receiver has a built in TI filter and storable frequency tuning by channel, with the TI/CH Fine function. By using this function, it is possible to reduce the sparkle noise in the picture, which is caused by terrestrial interference. Only when the AFC (Auto Frequency Control) is off, can the channel frequency be tuned. The TI filter ON/OFF selection and the channel fine tune can be stored by channel.

(a) Press: FUNCTION , **2** , **3** and the display will be as shown at right.

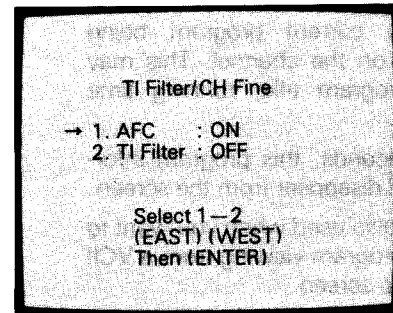

(b) Select 1—2.
By pressing or holding EAST or WEST , turn the AFC & TI filter ON or OFF.

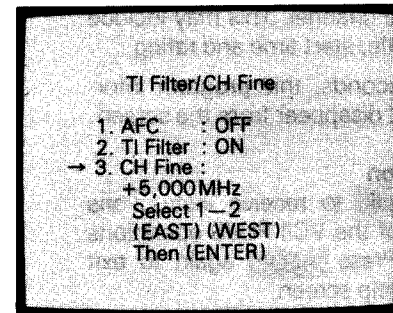

(c) The channel frequency can be tuned only when the AFC is OFF. Select **3** and press EAST or WEST to set the channel frequency.
Press ENTER to store.

VIDEOCIPHER® II PLUS OPERATION

Once you have received authorization, you can view VCII PLUS channels just as you would unscrambled channels. However, VCII PLUS channels provide additional features and services. The following features can be used only on VCII PLUS channels. Here's how to use them:

View Button

Press **VIEW** to view information about the current program being broadcast on the channel. This may include program title, running time and rating.

After 3 seconds, this program information will disappear from the screen.

VIEW is also used when you want to return to program viewing from a VCII PLUS setup screen.

Next Button

Press **NEXT PRG** to view information about the next program to be broadcast on the channel. This may include program title, start time and rating.

After 3 seconds, this program information will disappear from the screen.

Help Button

Press **HELP** to receive instructions for many of the VCII PLUS operations features. Press **HELP** again to exit from the Help screen.

Message Button

VCII PLUS channels have the ability to broadcast messages addressed to individual users. Press **MESSAGE** to view these personal messages. Press **<** or **>** to erase the message after you have read it. If message prompting is enabled, a star [*] will appear on your screen when a personal message is received. See "Unit Settings" for message prompting description.

Text Button

Some VCII PLUS channels may broadcast information service text messages over the channel (e.g. news bulletins, program information, etc.).

TEXT allows direct access to the two types of information services—channel based, and system wide. To view information service text:

1. Press **TEXT**.
2. Press **1** to access the Channel Information Service text which pertain to the current channel only.
3. Press **2** to access the System Information Service text (for information on the entire system).

Setup Button

Press **SETUP** to view the Available Services Menu. This menu provides access to the Unit Setup submenu and lists the services on this channel (Audio, Video, Data, Channel Information, or System Information). On any given channel, the number of available services will vary, but there will always be Personal Messages and the program video/audio. A small arrow will point to the service currently selected.

1. Unit Setup

The Unit Setup submenu is used to customize other VCII PLUS features. Press **1** to access the Unit Setup submenu.

2. Personal Messages

VCII PLUS offers access to personal messages through both **MESSAGE** and the **AVAILABLE SERVICE** menu. See "Message Button" for details. Press **2** to read any personal messages.

3. Program Name

This is the name of the current audio/video program. Press **3** to select the current program.

4. Data Services

Some VCII PLUS channels may broadcast up to three data services (stocks, news) along with the current audio/video program. You can receive only one data service at a time. To receive a data service:

a) Connect your data receiver equipment (computer) to the "auxiliary data out" port of your IRD. NOTE: You will need a specialized data receiver device for this connection.

b) Press the appropriate number button to select the desired data service.

5/6. Channel/System Information Service

VCII PLUS offers access to information service messages through both **TEXT** and the **AVAILABLE SERVICES** menu. See "Text Button" for details. Press the appropriate number button to access either Channel or System Information Service.

Unit Setup

Press **SETUP**, **1** to access the Unit Setup submenu. You can then choose any one of these VCII PLUS setup screens by pressing the appropriate number button on your remote control.

The following VCII PLUS features can be accessed through the Unit Setup menu:

1. Installation Data

This screen displays your Unit ID number, signal quality and other unit status information.

2. Unit Settings

This screen allows you to enable/disable message prompting and to select primary/alternate audio.

A. Audio Selection

Some VCII PLUS channels offer second languages on their programs.

Press **1** to switch between the **PRIMARY** (usually English) and the **ALTERNATE** (second language) audio selection.

B. Message Prompting

When message prompting is enabled, an [*] will appear on your TV screen when a personal message is received. Press **2** to enable/disable message prompting.

2. Rating Ceiling (Parental Lockout)

Rating ceilings are used to control the types of VCII PLUS programs you wish other family members to view. Rating ceilings are based on those used by the motion picture industry to rate their films according to age groups.

By setting Rating Levels, you can prevent viewing all VCII PLUS programs that have been rated above the level that you set. For example, if you set the level at PG-13, your system will allow only NR, G, PG, and PG-13 rated programs. Both R and X-rated programs will be locked out. (NOTE: Not all VCII PLUS channels use rating levels so you may want to consult a satellite guide for details on a particular program.)

To set your Rating Ceiling:

- A. Tune to any VCII PLUS channel.
- B. Press **SET UP**, **1** and then **3**.
- C. Enter your password if one has been set.
- D. Use **<**, **>** to lower/raise the Rating Ceiling.

3. Rating Password

The Rating Password is used to control access to the Rating Ceiling screen. We suggest that you pick as a password a number that is easy to remember, your zip code, date of birth, phone number, street address, etc. If you forget your password, you will need to contact your program distributor to have it reprogrammed.

To set or change a rating password:

- A. Press **SET UP**, **1**, **4**.
- B. If your system already has a password stored, you will need to enter it and press **ENTER** before the system will accept a new one.
- C. Enter your new password (up to 8 digits), then press **ENTER**.
- D. Repeat the new password a second time and press **ENTER** to confirm.

If you don't want rating password control:

- A. Press **SET UP**, **1**, **4** and then press **ENTER** twice when prompted to enter a password.

4. Purchase Password

The Purchase Password controls access to program purchases. See Rating Password for Instruction on setting and using the Purchase Password.

5. Purchase History

The Purchase History screen displays information about the last 15 pay-per-view programs purchased. This information includes, date/time of purchase, program name and cost. Use **<**, **>** to view all programs in the list.

6. Credit Information

The Pay-Per-View Credit Information screen may display your credit limit and credit verification. This screen is for informational use only.

7. Consumer Key (Button) Entry

VCII PLUS is designed to accept secondary authorization in the form of a Consumer Key. The Consumer Key Entry screen allows for entry of this key. If the Consumer Key is not needed, this entry will not appear in the Setup Menu.

Program Messages

VCII PLUS program suppliers offer a wide variety of services, some of which may require pay-per-view or other restrictions on viewing. If this occurs, you will see one of the following messages on your TV screen when you are tuned to that channel:

A. "No subscription for this channel."

This indicates that your unit has not been authorized to receive this channel. Contact the program supplier to receive authorization.

B. "Blacked out."

The program is not available in your geographical area.

C. "Program locked out."

The rating of the program currently being broadcast exceeds your Rating Ceiling. If this happens, you will be prompted to override the rating lockout. If you have set a Rating Password (see "Rating Password"), you will be prompted to enter it.

Note: The rating override is in effect for the duration of the program (even if you change channels and then tune back to the overridden channel). To cancel rating overrides, you must turn your unit off.

Note: VIDEOCIPHER® II PLUS is a registered trademark of GENERAL INSTRUMENT CORPORATION.

VIDEOCIPHER® II PLUS trademark is used under license from CABLE/HOME COMMUNICATIONS CORP. (C/HCC), subsidiary of GENERAL INSTRUMENT CORPORATION.

To enable your satellite descrambler and obtain proper authorization for descrambling, appropriate programming providers or their agents must be contacted.

MAIN FUNCTION


MAIN MENU

— AUTO MODE —		— PROGRAM MODE —	
1. CUSTOMER CHOICE	1.1 BEEP 1.2 BASIC OSD 1.3 ANTENNA MOVE BLANK 1.4 AUDIO LEVEL METER 1.5 SKIP TUNING 1.6 RECEIVER MODE (AUTO or PROGRAM)	1. SET UP	1.1 BEEP 1.2 CHANNEL SCAN 1.3 AUTO TUNING 1.4 SIGNAL BAR SHIFT 1.5 INPUT MODE (C&Ku or H&V) 1.6 RECEIVER MODE (AUTO or PROGRAM)
2. TUNING	2.1 CHANGE POLARITY H/V 2.2 ADJUST SKEW 2.3 TI FILTER & CH FINE TUNING 2.4 CHANNEL SKIP	2. TUNING	2.1 CHANGE POLARITY H/V 2.2 ADJUST SKEW 2.3 TI FILTER & CH FINE TUNING
3. CHANGE PROGRAM	3.1 AUDIO PROGRAM 3.2 CATEGORY SELECTION 3.3 FAVORITE PROGRAM 3.4 REALIGN SAT. MEMORY	3. CHANGE PROGRAM	3.1 AUDIO PROGRAM 3.2 CATEGORY SELECTION 3.3 ANTENNA LIMIT
4. PARENTAL CONTROL	4.1 ANTENNA LOCK 4.2 CH LOCKOUT 4.3 PL ENABLE/DISABLE 4.4 CHANGE PASSWORD	4. INSTALLATION	4.1 KU-SAT FORMAT 4.2 CALIBRATE KU-CH 4.3 ALL SATELLITES CLEAR 4.4 ALL DATA CLEAR


These functions can be easily used with **FUNCTION** and an ALPHANUMERIC BUTTON as follows.

1. BASIC OPERATION OF THE MAIN FUNCTION

(a) Press **FUNCTION** and the main menu will be displayed as shown at right.

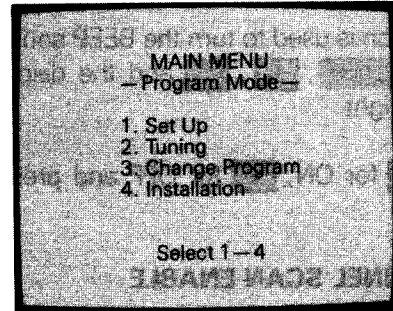


IN THE PROGRAM MODE

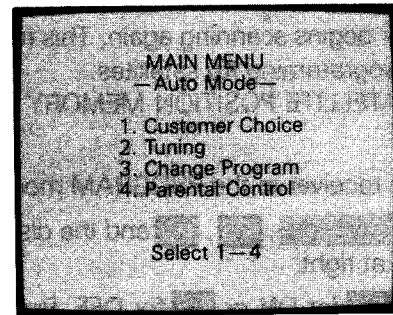

IN THE AUTO MODE

(b) Select the desired main function number by pressing an ALPHANUMERIC button. The main function which is selected will be displayed as shown at right.


Ex. 1. When **FUNCTION**, **1** is pressed in the AUTO mode.

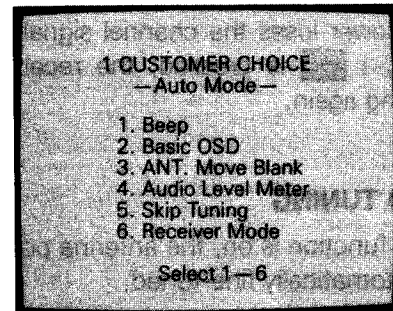

(c) Select the desired item number by an ALPHANUMERIC button.

Operating instructions will appear on screen.

Ex. 2. When **1** is pressed after Ex. 1.

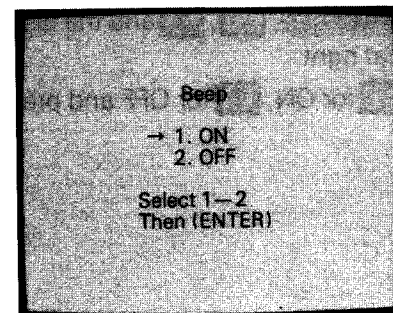

ADVANCED OPERATION

MAIN FUNCTION

— PROGRAM MODE —

1. SET UP

1.1 BEEP ON/OFF

This function is used to turn the BEEP sound ON or OFF. Press **FUNCTION**, **1**, **1** and the display will be as shown at right.

Select **1** for ON, **2** for OFF and press **ENTER** to store.

1.2 CHANNEL SCAN ENABLE

The channel scan feature allows the receiver to search rapidly for active channels. The receiver stops scanning when a signal is found. When the channel signal is lost, the receiver begins scanning again. This function is useful when programming Ku satellites.




See the SATELLITE POSITION MEMORY section (page 15).

- (a) Set the receiver to the PROGRAM mode.
- (b) Press **FUNCTION**, **1**, **2** and the display will be as shown at right.
- (c) Select **1** for ON or **2** for OFF. Press **ENTER** to turn the channel scan on or off. When CHANNEL SCAN ON is selected, it will begin channel scanning rapidly and will stop when a signal is found. When the receiver loses the channel signal as EAST **▼** or WEST **▲** is pressed, the receiver will begin scanning again.

1.3 AUTO TUNING

When this function is on, the antenna position and the skew is automatically fine-tuned.

- (a) Set the receiver to the PROGRAM mode.
- (b) Press **FUNCTION**, **1**, **3** and the display will be as shown at right.
- (c) Press **1** for ON, **2** for OFF and press **ENTER**.

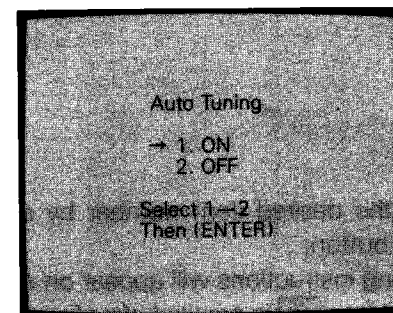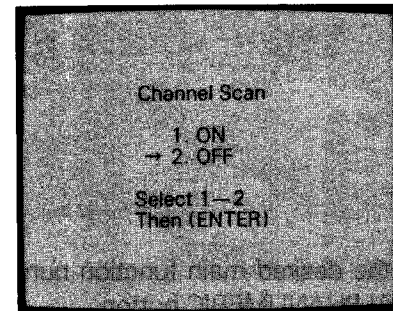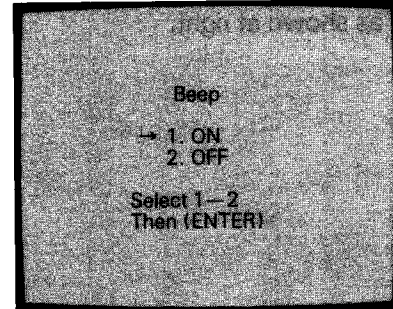




1.4 SIGNAL BAR SHIFT

The signal bar graph indicates the input signal level in the PROGRAM mode, and indicates the audio output level in the AUTO mode. The input signal level can be shifted up or down to accommodate very weak or very strong RF signals. The signal bar shift has no effect on the audio output level.

- Set the receiver mode to the PROGRAM mode.
- Press **MEMO**, **VIEW**, and the display will be as shown at right.
- By pressing or holding **MEMO** or **VIEW**, set the indicator to the desired level. Press **VIEW** to return to the normal mode.

In the PROGRAM mode, the left indicator displays the RF input signal level and the right indicator displays the reference level for the input signal. If the RF signal is too weak, the reference indicator can be shifted down to compensate for the low input level.

In the AUTO mode, the indicators display the audio output level.

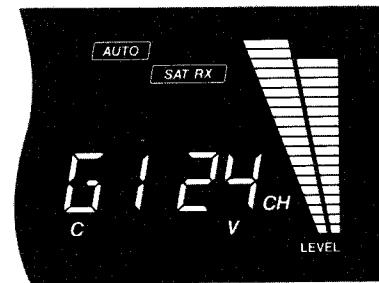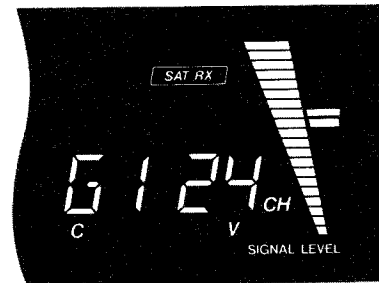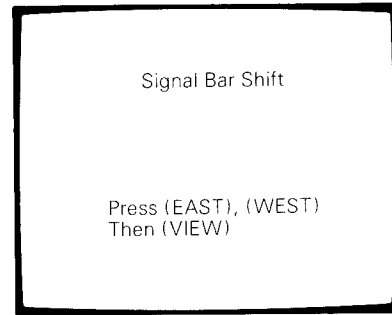

1.5 INPUT MODE SELECTION

This receiver has 2 input modes, C&KU and V&H. Set to the appropriate mode in accordance with the antenna and feed.



- Press **MEMO**, **VIEW**, and the display will be as shown at right.
- Select **MEMO** for C&KU, **VIEW** for V&H and press **VIEW**.

When the AUTO mode is selected, "AUTO" will appear on the front panel display.

1.6 RECEIVER MODE SELECTION

The 2 modes of the receiver are PROGRAM and AUTO. The PROGRAM mode is used when entering the east and west limits and satellite positions. The AUTO mode is used after initial programming is completed.

- Press **MEMO**, **VIEW**, and the display will be as shown at right.
- Select **MEMO** for the AUTO mode, **VIEW** for the PROGRAM mode and press **VIEW**.
When the AUTO mode is selected, "AUTO" will appear on front panel display.

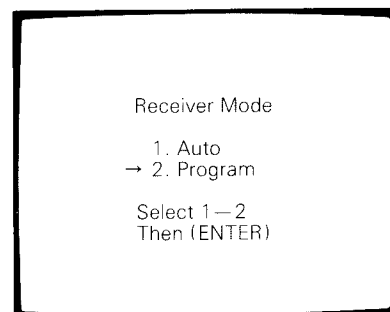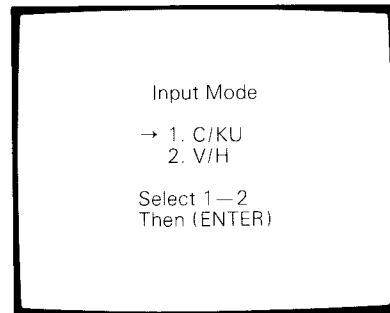

MAIN FUNCTION

2. TUNING

2.1 CHANGE POLARITY


Polarity settings are factory programmed and are selected when recalling a satellite and a channel. Normally it is not necessary to change the polarity. When the factory programmed polarity does not correspond to the channel polarity, it can be changed and stored. The CHANGE POLARITY function is available both in the PROGRAM mode and the AUTO mode.

● C-band

Press FUNCTION , **2** , **1** and the display will be as shown at right.

Select **1** for the factory programmed polarity, or select **2** for the inverse, the selected polarity is set for every channel.

Press ENTER to store the selected polarity, or press VIEW to select it temporarily.

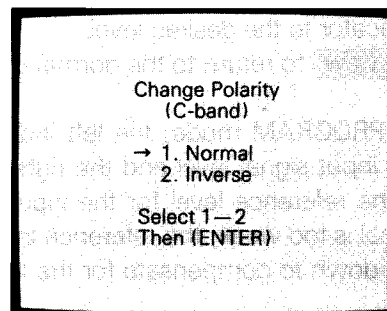


● Ku-band

Press FUNCTION , **2** , **1** and the display will be as shown at right.

Select **1** for H, select **2** for V, the selected polarity is set for every channel.

Press ENTER to store the selected polarity, or press VIEW to select it temporarily.

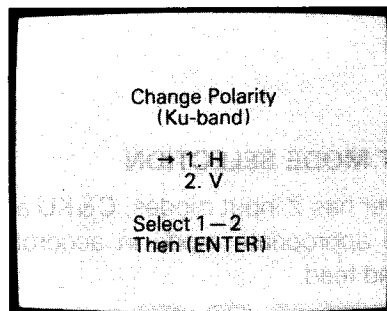


2.2 ADJUST SKEW

Normally when the AUTO TUNING is selected (MAIN FUNCTION 1-3), there is no need to adjust the skew. But if desired, the skew can be adjusted manually as follows.

(a) Press FUNCTION , **2** , **2** and the display will be as shown at right.

(b) Adjust the skew by pressing LAST **▼** or NEXT **▲** to get the best picture.

Press ENTER to store.

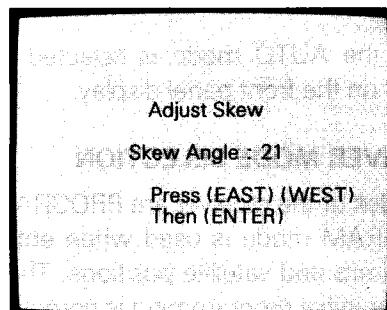

2.3 TI FILTER & CH FINE TUNING


See page 37 for operation.

3. CHANGE PROGRAM



3.1 AUDIO PROGRAM

30 audio subcarriers are factory programmed. If desired, the audio program can be changed as follows.

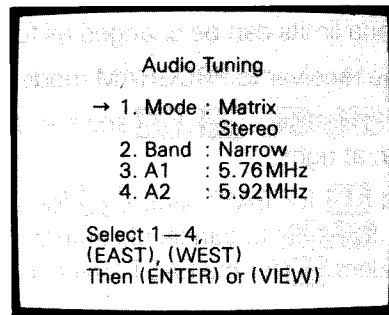
(a) Press **FUNCTION**, **3**, **1** and the display will be as shown at right.




(b) Select 1—4.

By pressing or holding **LAST**  or **VIEW** , select the desired audio subcarrier.


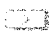
Press **ENTER** and the AUDIO program will be displayed as shown at right.

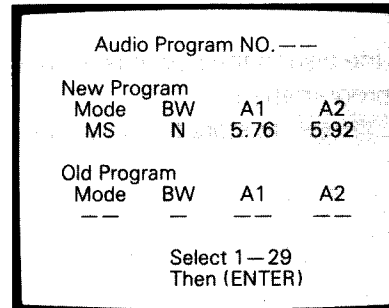

Select the AUDIO PROGRAM number (1—29) that is to be changed, and press **ENTER**.

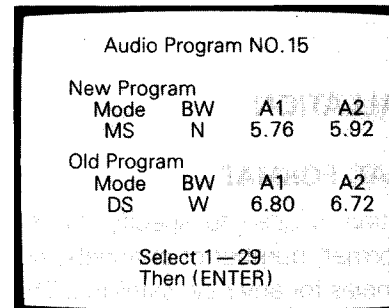


(c) If it is undecided which program number to store, press **AUDIO**. Then the AUDIO PROGRAM list will be displayed as shown at right.

Press  or  to see the next or previous list.

Press **VIEW** to return.

Note: AUDIO PROGRAM 0 (VC AUDIO) is only for VIDEOCIPHER® II Plus channels. Audio program 0 can not be changed.

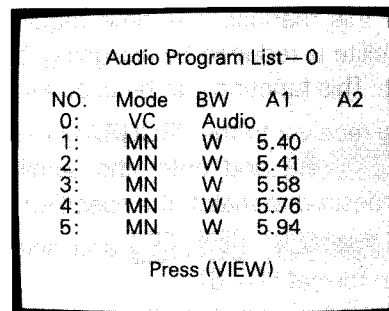

3.2 CATEGORY SELECTION


By using this function, it is possible to change the stored data for category selection.

See CATEGORY SELECTION section (page 21) to operate.


3.3 CHANGE ANTENNA LIMIT

The antenna limits can be changed as follows.

- (a) Set the receiver to PROGRAM mode.
- (b) Press **FUNCTION**, **3**, **3** and the display will be as shown at right.
- (c) Select **1** for EAST limit, **2** for WEST limit and press **CANCEL** to cancel old antenna limit.
Ex. Select **1** for the EAST limit and then **CANCEL**.

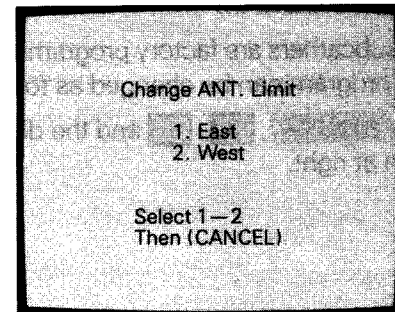

- (d) Move the dish to the new east or west limit which is to be programmed.
Press **ENTER** to store the new antenna limit.

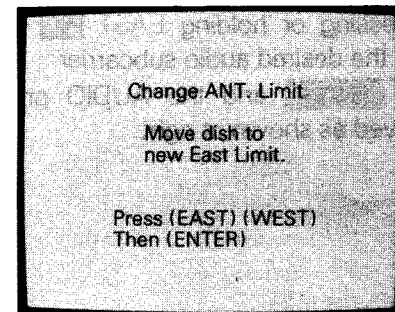


4. INSTALLATION

4.1 KU SAT. FORMAT

This function is used to specify the Ku-band satellite channel format, number of channels, polarity, and center frequencies for any new satellites. This will be helpful when programming a new Ku-band satellite that does not appear on the satellite chart in the programming section of this manual. The time required to program a new satellite is reduced by assigning it a similar existing format. This function can be used as follows.

- (a) Set the receiver to the PROGRAM mode.
Press **KU-SAT** and enter the satellite designation that is desired to match the specified format.
- (b) Press **FUNCTION**, **4**, **1** and select the desired satellite format (1—6).
Press **ENTER** to specify the format.

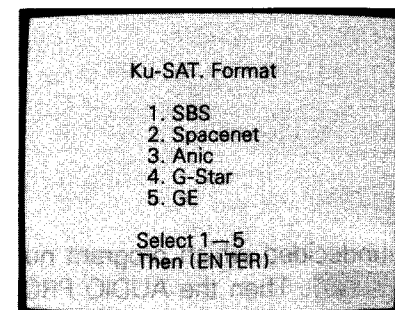


MAIN FUNCTION

4.2 CALIBRATE Ku-CHANNEL

This function is used to assign any channel frequency to any channel number on the Ku-band. A Ku-band satellite channel can be programmed as follows.

- Confirm that the receiver is in the AUTO mode.
Select the Ku-band satellite to be calibrated.
- Set the receiver to the PROGRAM mode.
- By using the channel or buttons, or the ALPHANUMERIC buttons, input the channel number to be programmed.
- Press , , and the display will be as shown at right.
- By using the EAST or WEST button, adjust the frequency for the best picture.
- Press to store the channel frequency.

If it is desired to program additional channels, operate again from (c). When completed, set the receiver mode to the AUTO mode.

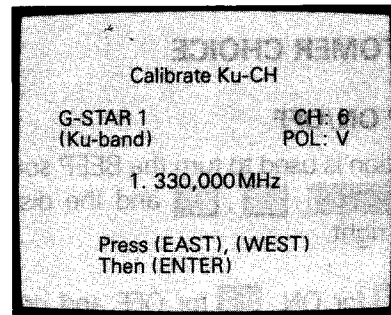


4.3 ALL SATELLITES CLEAR

This function is used to erase and initialize all of the satellite data.

- Set the receiver to the PROGRAM mode.
- Press , , and the display will be as shown at right.

Select and press to erase and initialize all of the satellite data.

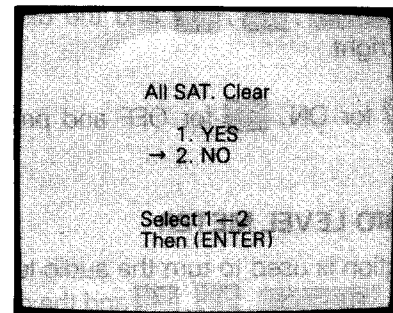


4.4 ALL DATA CLEAR

This function is used to erase and initialize all data which has been programmed.

- Set the receiver to the PROGRAM mode.
- Press , , and the display will be as shown at right.

Select and press to erase and initialize all data.

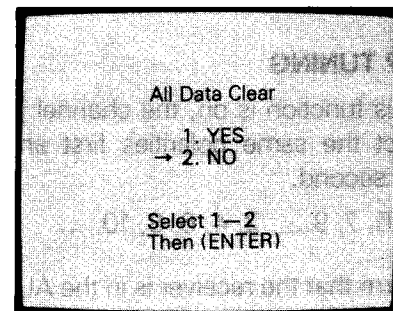

Note: When data is initialized, the audio level is set to maximum.


— AUTO MODE —

1. CUSTOMER CHOICE

1.1 BEEP ON/OFF

This function is used to turn the BEEP sound ON or OFF. Press FUNCTION , **[1]** , **[1]** and the display will be as shown at right.


Select **[1]** for ON, **[2]** for OFF and press ENTER to store.

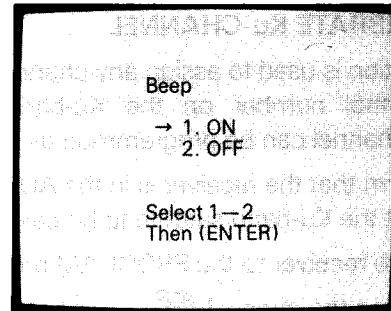

1.2 BASIC OSD ON/OFF

This function is used to turn the basic on screen display (channel, band and satellite name etc.) ON or OFF. Press FUNCTION , **[1]** , **[2]** and the display will shown at right.

Select **[1]** for ON, or **[2]** for OFF and press ENTER

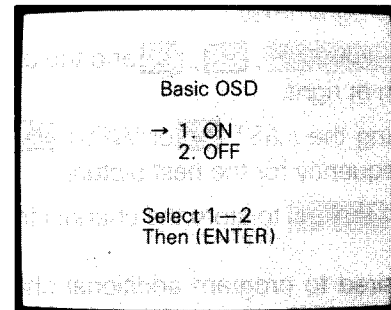


1.3 ANTENNA MOVE BLANK

This function makes the TV screen blackout when the antenna is moving between satellites.


Press FUNCTION , **[1]** , **[3]** and the display will be as shown at right.

Press **[1]** for ON, **[2]** for OFF and press ENTER to store.

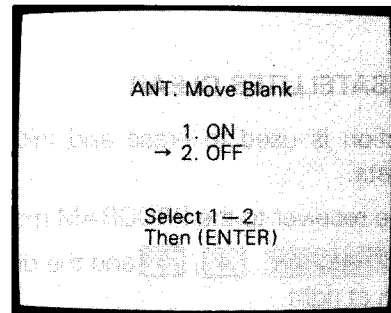

1.4 AUDIO LEVEL METER

This function is used to turn the audio level meter on or off. Press FUNCTION , **[1]** , **[4]** and the display will be as shown at right. Select **[1]** for ON, **[2]** for OFF and press ENTER to store.

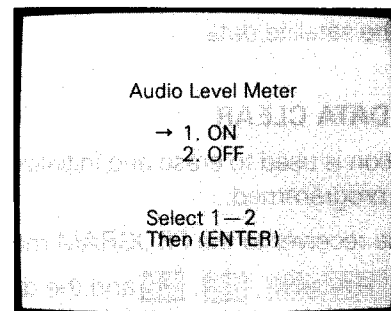


1.5 SKIP TUNING

When this function is on, the channel **[V]** **[^]** buttons will select the same polarities first and the opposite polarities second.

ex. 1, 3, 5, 7, 9..... 2, 4, 6, 8, 10.....

- (a) Confirm that the receiver is in the AUTO mode.
- (b) Press FUNCTION , **[1]** , **[5]** and the display will be as shown at right.
- (c) Select **[1]** for normal, **[2]** for Skip Tuning and press ENTER .

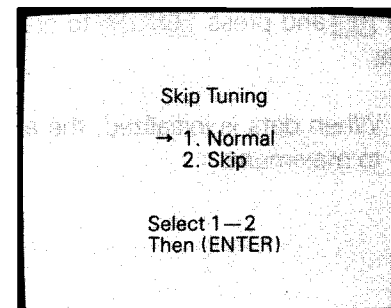


MAIN FUNCTION

1.6 RECEIVER MODE SELECTION

The 2 modes of the receiver are PROGRAM and AUTO. The PROGRAM mode is used when entering the east and west limits and satellite positions. The AUTO mode is used after initial programming is completed.

- (a) Press FUNCTION , **1** , **6** and the display will be as shown at right.
- (b) Select **1** for the AUTO mode, **2** for the PROGRAM mode and press ENTER .
When the AUTO mode is selected, "AUTO" will appear on front panel display.

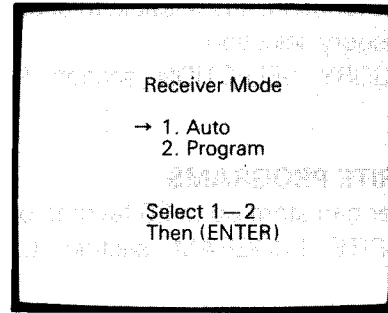

2. TUNING

2.1 CHANGE POLARITY H/V

See page 44 for operation.

2.2 ADJUST SKEW

See page 44 for operation.

2.3 TI FILTER & CH FINE TUNING

See page 37 for operation.



2.4 CHANNEL SKIP

The TRX-2000 can be programmed to skip one or more channels of a satellite.

- (a) Select the satellite that has a channel or channels desired to be skipped.
- (b) Press FUNCTION , **2** , **4** and the display will be as shown at right.

When programming a channel skip: Select the desired channel by pressing **▼** or WEST **▲**. Press ENTER and the channel is programmed to be skipped. An S will be displayed as shown at right. Press VIEW to clear the on screen display.

When canceling a channel skip: Pressing EAST **▼** or WEST **▲** to select the desired channel to cancel a skip. Press CANCEL and the skip will be canceled. Press VIEW to clear the on-screen display.

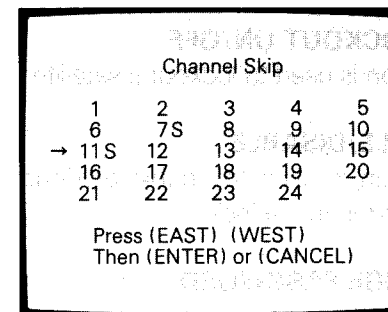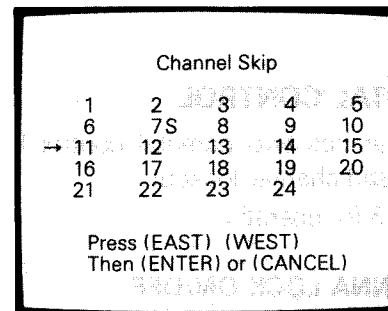

ADVANCED OPERATION

3. CHANGE PROGRAM

3.1 AUDIO PROGRAMS

30 audio subcarriers are factory programmed. If desired, the audio programs can be changed. See page 19 for operation.

MAIN FUNCTION

3.2 CATEGORY SELECTION

By using this function, it is possible to change the stored data for category selection.

See CATEGORY SELECTION section (page 21) to operate.

3.3 FAVORITE PROGRAMS


This receiver can store up to 20 favorite programs.

See FAVORITE PROGRAM section (page 27) to operate.

3.4 SATELLITE MEMORY REALIGNMENT

This function is used when a sensor wire has come loose, an actuator clamp has slipped, or an actuator has been reinstalled after a repair. It allows realignment of the actuator to match the already stored satellite positions without having to reprogram all of the satellites. Memory can be restored if all satellites are mispositioned either east or west by the same amount.

- (a) Confirm that the receiver is in the AUTO mode.
- (b) Select an active channel on the desired satellite that is programmed.
- (c) Press FUNCTION, **[3]**, **[4]** and the display will be as shown at right.
- (d) By using **▲** or **▼**, move the antenna to the position for the best picture.
Press **[ENTER]** to realign the satellite memory.

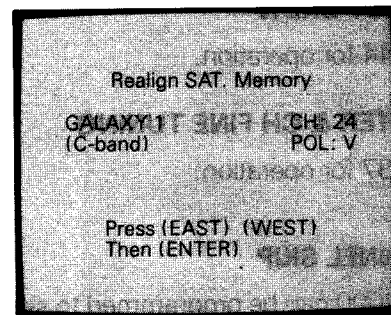

4. PARENTAL CONTROL

This receiver has two parental control functions, antenna lock and channel lockout.

See page 33 for operation.

4.1 ANTENNA LOCK ON/OFF

This function is used to lock the antenna movement.

4.2 CH LOCKOUT ON/OFF

This function is used to lockout a satellite channel.

4.3 ENABLE/DISABLE

This function is used to enable or disable all channel lockouts and antenna lock.

4.4 CHANGE PASSWORD

This function is used to change a password to the parental control feature.

TROUBLESHOOTING

The TRX-2000 is designed to give years of trouble free service. However, if a problem should occur, please check the following before calling your dealer.

problem: No picture or sound, no front panel light.

solution: Check that the receiver AC cord is plugged into an active wall outlet.

problem: No picture or sound, but the front panel lights are on.

solution: Check to be sure television is tuned to channel 3 or 4 channel when using the VHF OUT.

Check that the antenna is aimed to an operating satellite.

Check all cable connections.

Check that the satellite name appears on the LCD.

problem: No picture but sound is OK.

solution: Check cable connections to the video monitor or television.

problem: Snowy or sparkly picture.

solution: Check antenna alignment, polarity fine tuning and all interconnect cables. On some weak transponders, some snow in the picture may be normal.

problem: No sound or noisy sound but the picture is OK.

solution: Check the volume and mute controls.

Check the audio program and the audio tuning.

Check all audio cables for worn insulation or shorts.

problem: Antenna does not return accurately to all satellites.

solution: Check the mounting of the actuator on the antenna, and mounting bolts on the antenna.

Realign satellites by using the REALIGN SATELLITES SECTION in the main functions.

problem: The receiver can not be set to the PROGRAM mode.

solution: Confirm that the PARENTAL CONTROL is off.

problem: When the parental control password has been forgotten.

solution: Use 1048.

problem: When an unusual condition occurs and the remote control buttons do not operate.

solution: Unplug the AC cord.

Wait a few minutes and reconnect.

Check that the UHF antenna is plugged into the UHF REMOTE IN connector.

See page 4 ⑥.

SPECIFICATIONS

RF

Input Frequency	950 to 1450MHz
Input Impedance	75 ohms
Noise Figure	12dB
Image Rejection	45dB
Input Signal Level	-60 to -30dBm
L.O. Leakage at Input	-50dbm max.
Terminal	
2nd IF Frequency	402.78MHz
Threshold	7dB C/N
Bandwidth	27/16 (Selectable)MHz

VIDEO PERFORMANCE

VIDEO OUT

Format	NTSC
De-emphasis	CCIR REC. 405-1
Output Impedance	75 ohms
Frequency Response	+1/-3dB (10KHz to 4.2MHz)
Output Level	1Vp-p \pm 2dB

AUDIO PERFORMANCE

Bandwidth	330KHz/150KHz (selectable)
De-emphasis	75 μ sec.
Subcarrier Frequency	5.0 to 8.5MHz tuneable
Frequency Response	\pm 1dB (30 to 15KHz)
Output Impedance	600 ohms Unbalanced
Output Level	-4.2dBs \pm 2.5dB at 75KHz Deviation
Signal to Noise	60dB

RF MODULATOR

Output Frequency	VHF US 3 or 4ch selectable
Output Level	66dB μ V \pm 3dB

POWER

Primary Power	120VAC, 60Hz
Power Consumption	170 watts
Power Supply to LNB	15 to 21.2VDC, 180mA max. \times 2
Polarizer Output	5 \pm 0.5V 1.0A max. (Motor Driven type)

ACTUATOR INTERFACE

Motor Power	36V max., 2.5A max. class 2 (M1, M2)
5V Supply	5.5V min. 6.0V max.
Sense (Reed Switch)	Form C closure
(Hall)	+5V TTL Level

ENVIRONMENTAL CONDITIONS

Ambient Operation	+0 to +40°C (32 to 104°F)
Temperature	
Humidity	Indoor Environment

MECHANICAL

Size	16-15/16" \times 3-1/2" \times 14-15/16"
Weight	17lbs

Design and specifications are subject to change without notice.

LIMITED WARRANTY TOSHIBA SATELLITE RECEIVER

Toshiba America Consumer Products, Inc. ("TACP") makes the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited Two (2) Year Warranty

TACP warrants this product and its parts against defects in materials or workmanship for a period of two years after the date of original retail purchase. The VideoCipher®II PLUS module is also warranted for 2 years. During this period TACP will repair a defective product or part, without charge to you. You must deliver the entire set to a selling dealer. You pay for all transportation and insurance charges for the set to and from the selling dealer. This warranty does not cover Acts of God, such as, but not limited to, lightning.

Owner's Manual and Warranty Registration

You should read the owner's manual thoroughly before operating this product. You should also insure that your name and address is on file as an owner of a TACP product by completing and mailing the enclosed registration card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to enable TACP to establish the date of purchase of the product, as well as to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty so long as you retain other proof of purchase such as a bill of sale.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase. Completing and mailing in the attached registration card within ten days after the original retail purchase is one way of providing such other proof of purchase.
- (2) You must notify the selling dealer within ten (10) days after you discover a defective product or part.
- (3) All warranty servicing of this product must be made by a TACP Service Center.
- (4) These warranties are effective only if the product is purchased and operated in the U.S.A.
- (5) Any charges for installation, assembly, set up adjustment of controls are not covered by this warranty. Reception problems caused by inadequate antenna systems and other components are your responsibility.
- (6) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, improper installation, improper maintenance, assembly or use with incompatible products or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.
NOTE: The VideoCipher®II PLUS descrambler module should not be returned for service without the TRX-2000, unless you have received prior authorization from the TACP Service Center.
- (7) TACP shall have no liability or responsibility to reimburse or compensate you for the loss of paid subscription television programming, such as, but not limited to, HBO, Showtime, etc. in the event this product requires servicing. You are advised to notify each programmer being paid a subscription fee that the product is "out of service" and that you wish to suspend your subscription while the product is being serviced.

Step-by-Step Procedures—How to Obtain Warranty Service

To obtain warranty servicing, you should:

- (1) Contact the selling dealer for warranty service within ten (10) days after you find a defective product or part for instructions.
- (2) Arrange for the delivery of the product to the selling dealer. Products shipped to the selling dealer must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charges must be prepaid by you.
- (3) If you have any question about service, please contact the following TACP Service Center.

Toshiba America Consumer Products, Inc.
Satellite Service Center
1010 Johnson Drive
Buffalo Grove, IL 60089-6900
Phone Number:
(708) 541-9400

ALL WARRANTIES IMPLIED BY STATE LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY STATE LAW AS HEREBY LIMITED, THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS AND SIMILAR OBLIGATIONS OF MANUFACTURER OR SELLER WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PARTS. IN NO EVENT SHALL TACP BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

OTHER

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

BRANCH OFFICE/CHICAGO: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900