

TOSHIBA

OWNER'S MANUAL

900MHz

CORDLESS TELEPHONE

FT-8507BK



TOLL FREE CUSTOMER SERVICE

1-800-631-3811

Should your unit require service, please refer to the
"Toshiba service procedure" in your owner's manual.

FT-8507BK

Toshiba America takes pride in presenting the FT-8507BK, one of the finest telephones available. Intelligent design, superb craftsmanship, and the latest technological advances have been combined to provide you with a telephone that is easy to operate and will provide you with years of dependable service. Please take the time now to read your Owner's Manual carefully, so that you may enjoy the many convenient features of your FT-8507BK telephone.

- 900 MHz Transmission
- Helical Antenna Provides Excellent Reception and Durability
- 20 Number Speed Dial
- 3 Way Conversation
- 7 Days Standby Battery Life
- Compandor Sound Clarity
- Low Battery Indicator
- Wall Mountable
- Intercom/Call Transfer
- Hearing Aid Compatible
- Full Function 2 way Speakerphone
- Speakerphone Mute
- Private Conversation Mode
- Any Key Auto Talk
- Last Number Redial
- Flash Function
- Pause

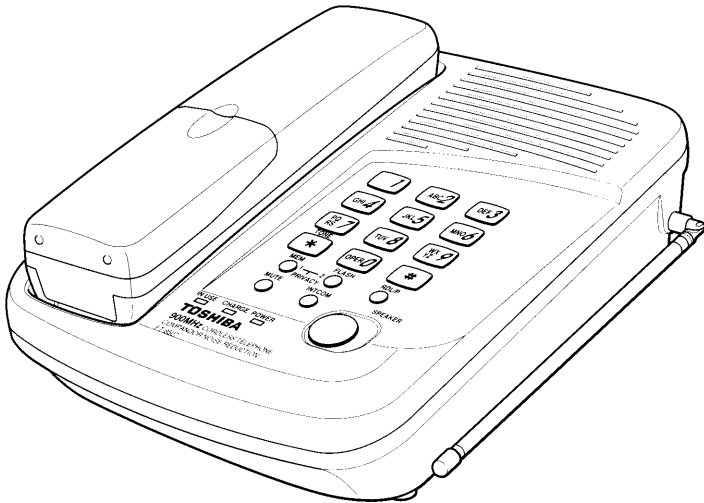


TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
INSTALLATION	5
Recommended location for the base unit 5/ Parts checklist 6/ Setting up the base unit 8/ AC adaptor specifications 8/ Wall mounting 9/ Installing the handset battery pack 10/ Charging the handset 11	
LOCATION OF CONTROLS	12
USING THE TELEPHONE	16
Tone/Pulse selection 16/ Adjusting the ringer volume 16	
Making a call 17/ Adjusting the speaker volume 17	
Interference or static 18/ Answering a call 18	
Transferring the incoming call 18	
Last number redial 19/ Muting 20/ Call waiting 20	
Banking and telephone services 21/ Changing the security code 21	
Intercom 22/ Monitoring around the base 23/ 3-Way conversation 23	
Private conversation mode 24	
SPEED DIALING	25
Storing numbers 25/ Dialing a stored number 26	
Erasing a stored number 26/ Chain dialing 27	
Using the memory dialing or PBX 27	
TROUBLESHOOTING	28
SPECIFICATIONS	29
WARRANTY/SERVICE	31

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 4 Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5 Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
- 6 Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 7 Do not allow anything to rest on the power cord. Do not locate this product where the cord can be stepped on or tripped over.
- 8 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10 Do not disassemble this product. Opening or removing covers put you at risk of electrical shock, and incorrect reassembly can cause shocks, sparks or other damage during subsequent use.
- 11 Take this product to a qualified service technician under any of the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally according to the operating instructions. Adjust only those controls covered by this manual. Improper adjustment of other controls may result in serious damage to the unit or your home.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
- 12 Do not use the telephone to report a gas leak in the vicinity of the leak.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.

BATTERIES


- 1 Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
- 2 Do not dispose of the battery pack in a fire. The cell may explode. Check with State and local codes for possible special disposal instructions.
- 3 Do not open or mutilate the battery pack. Released electrolytes are corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4 Exercise care in handling the batteries. Contact with conductive materials such as rings, bracelets and keys may cause the battery to short out, resulting in overheating which could burn.
- 5 Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
- 6 Observe proper polarity orientation between the battery pack and battery charger.

ATTENTION: THE PRODUCT THAT YOU HAVE PURCHASED CONTAINS A RECHARGEABLE BATTERY. UNDER VARIOUS STATE AND LOCAL LAWS, IT MAY BE ILLEGAL TO DISPOSE OF THIS BATTERY INTO THE MUNICIPAL WASTE STREAM. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT FOR DETAILS IN YOUR AREA REGARDING RECYCLING OPTIONS OR PROPER DISPOSAL.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

The RBRC™ Seal

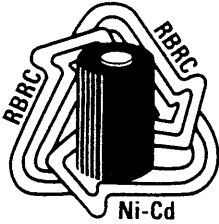

The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which is illegal in some areas.

TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Detach the battery compartment cover on the handset and remove the nickel-cadmium battery pack.

RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

INSTALLATION


RECOMMENDED LOCATION FOR THE BASE UNIT

To ensure good communication between the base and handset, place the base near the center of a room.

Avoid following locations:


- near TV, VCR or personal computer
- by a window facing a street with heavy traffic
- near heat sources such as radiators or air ducts
- in direct sunlight
- subject to water splash, dust, mechanical vibration
- near a microwave oven

Also keep away from another cordless telephone.

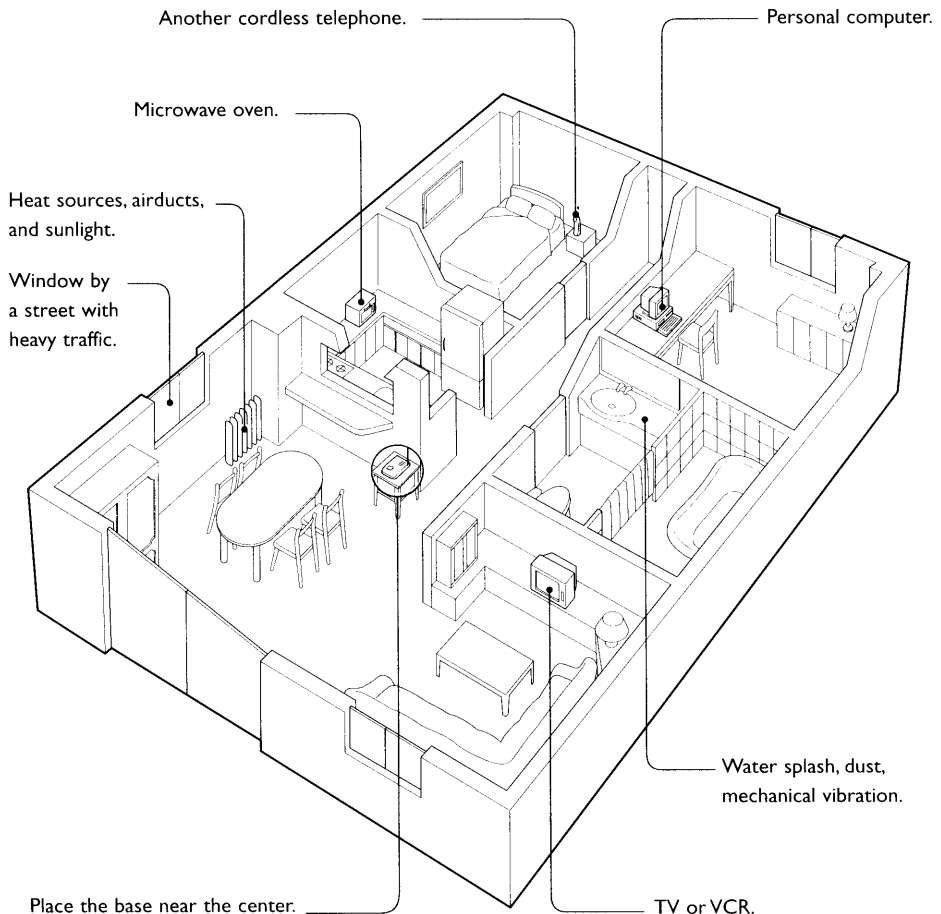


INSTALLATION


PARTS CHECKLIST

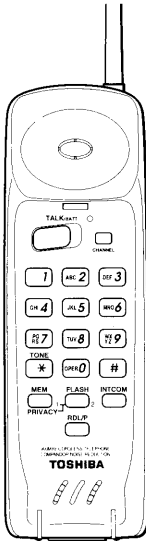


Handset

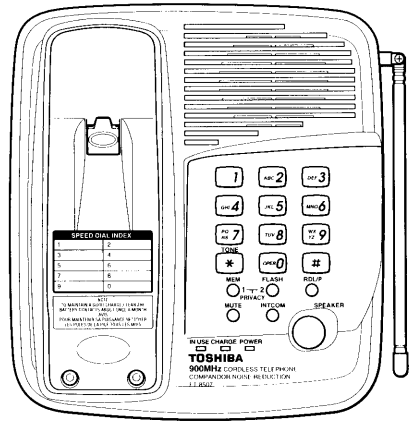

Base Unit

 


6' Modular Long Line Cord

 

6" Modular Short Line Cord


INSTALLATION

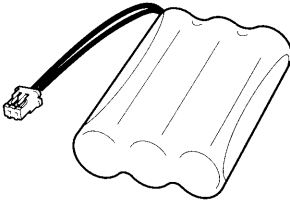

Battery Pack

SPEED DIAL INDEX	
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	


**Directory Card
(on the handset)**

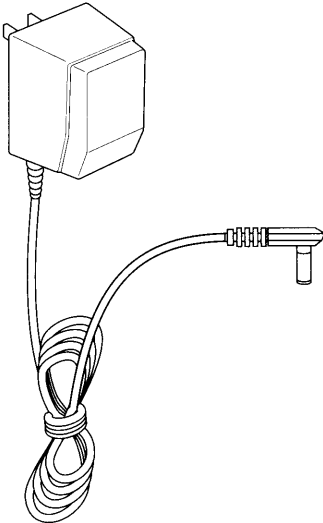

AC Adaptor

SPEED DIAL INDEX	
1	2
3	4
5	6
7	8
9	0

**Directory Card
(on the base)**

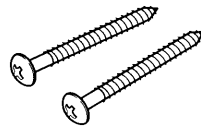

Screws (for the wall mount)




INSTALLATION

SETTING UP THE BASE UNIT

For use on a desk or counter top follow the instructions below. For Wall Mounting directions, proceed to the next page.


- 1 Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is further away, you may need an extension cord.
- 2 Plug one end of the telephone line cord into the back of the base in the slot labeled TEL LINE, and plug the other end into the telephone jack.
- 3 Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base, and plug the other end into the electrical outlet.

NOTE: Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly.

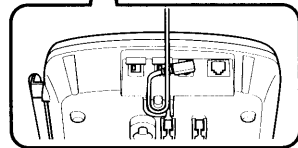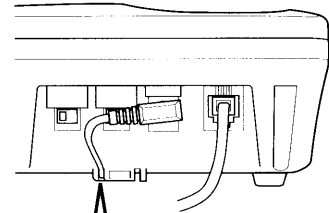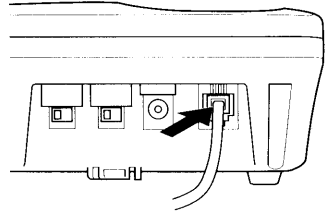

AC ADAPTOR SPECIFICATIONS

Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly.

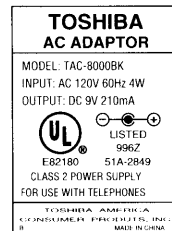

INSTALLATION




WALL MOUNTING

This wall mounting system is designed to work with a standard wall jack plate with two protruding nail-like heads on either side of the jack opening. They are available at most phone or electronics retailers.

(To mount the base on the wall using a baseboard jack, cut out the template on page 29 to position screws.)

- 1 Make sure that your telephone jack is located near an electrical outlet. To ensure constant functioning, the outlet should not be controlled by a light switch. If the outlet is further away, you may need an extension cord.
- 2 Plug one end of the short telephone line cord into the back of the base in the slot labeled TEL LINE.
- 3 Insert the tip of the AC adaptor into the slot labeled DC IN 9V on the back of the base.
- 4 Position the AC adaptor cord through the channel on the back of the base.
- 5 Position the base over the wall plate "screws". Plug in line cord into the jack. Press the unit towards the wall and then down to secure it properly.
- 6 Remove the switch hook tab and flip it over as shown then plug the AC adaptor into the electrical outlet.

NOTE: Use only the AC adaptor, or one matching its specifications exactly, with this product. Incorrect voltage may damage the unit or cause it to function improperly. See page 8 for specifications.

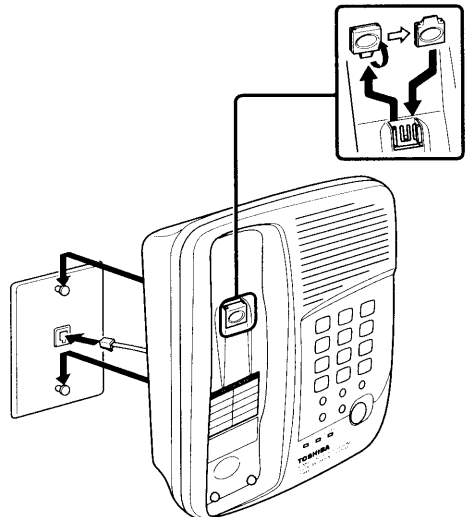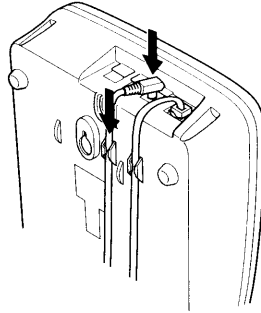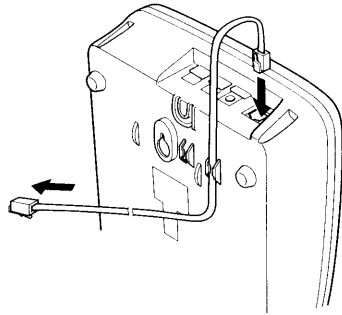




INSTALLATION

INSTALLING THE HANDSET BATTERY PACK

NOTE: Be sure to charge the handset 12-16 hours before use.

- 1 Remove the battery compartment cover on the back of the handset by sliding it down.
- 2 Plug the battery pack cord into the connector in the battery compartment. With the handset held upright, the black wire should go to the right side of the connector terminal, and the red wire should go to the left side.
- 3 Place the battery pack in the battery compartment.
- 4 Replace the battery compartment cover by sliding it up until it clicks shut. Make sure not to get the wires of the battery pack caught in the cover.




NOTE: When replacing the battery pack, please check with State and local agencies for proper disposal of the old battery.

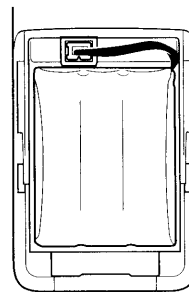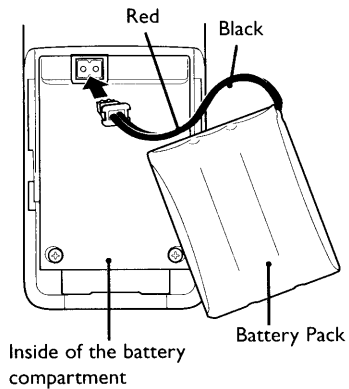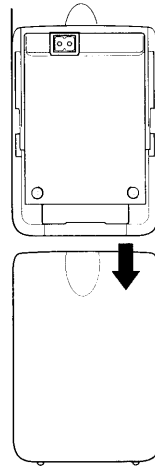

INSTALLATION

CHARGING THE HANDSET

- 1 After installing the battery pack and setting up the base, place the handset on the base unit.
- 2 The CHARGE LED lights to show that the handset is charging.
- 3 If the LED does not light, make sure the AC adaptor is plugged in securely and that the electrical outlet is working and not controlled by a light switch.
- 4 If the LED still does not light, verify that the charging contacts are clean and untarnished. Clean the contacts occasionally with a dry cloth.

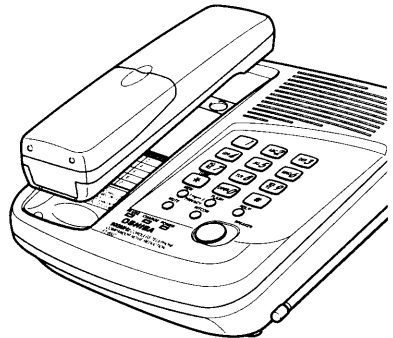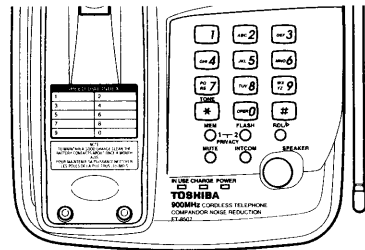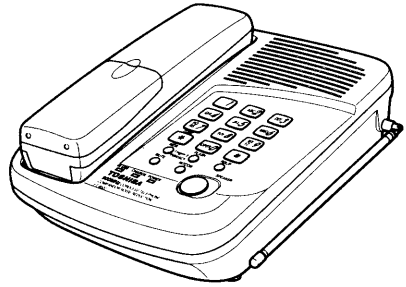

LOCATION OF CONTROLS

HANDSET

TALK/BATT LED

Steady Red: phone is in use/the hold or intercom status.

Blinking Red: low battery status/the channel is being changed.

TALK button

Press to make a call, receive an Intercom call, receive a call or hang up after a call (page 17). (For Call Waiting press the FLASH button.)

TONE button

If you have Rotary/Pulse service, press this button and you can have temporary tones for use with bank and other telephone service (page 21).


MEM button

Used to program speed dial numbers into the phone (page 25, 26).

PRIVATE CONVERSATION mode

Press the FLASH button after pressing the MEM button, you can talk in the PRIVATE CONVERSATION mode.

This mode will prevent your telephone conversation from being interrupted either from the base unit or the handset which is not currently used (page 24).

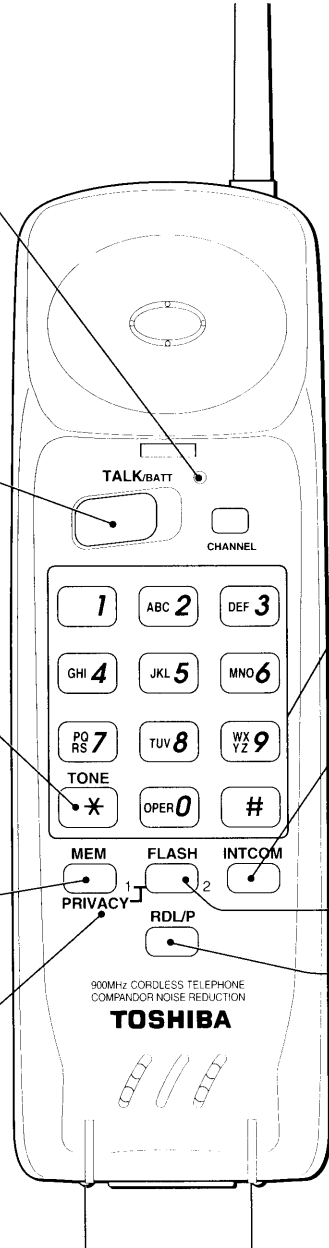

Charging contacts

LOCATION OF CONTROLS

Speed Dial Directory Card— You can write down the numbers in the speed dial memory.

Please attach the supplied Directory Card on your handset.

SPEED DIAL INDEX	
1	
2	
3	
4	
5	
6	
7	
8	
9	
0	

Dialpad

Used to dial the phone numbers or to program speed dial numbers. Press any key on the dialpad to receive a call (page 18.)

INTCOM button

Press to beep the base for intercom call (page 22).

FLASH button

Used in conjunction with Telephone Company services, such as Call Waiting (page 20).

RDL/P button

Press to redial the last number dialed or to insert a pause into speed dialing numbers (page 19).

Battery Compartment— Install the rechargeable battery pack here. Charge for at least 12 hours whenever installing or replacing the battery (page 10).

LOCATION OF CONTROLS

BASE

TONE/PULSE switch

Used to set the phone for tone or pulse dialing (page 16).

DC IN 9V jack

For AC adaptor connection.

TEL LINE cord modular jack

For telephone line cord connection (page 8).

Switch hook tab

MEM button

Used to program speed dial numbers into the phone (page 25, 26).

MUTE button

Press to turn off the microphone so that the other party cannot hear your voice (page 20).

Speed Dial Directory Card - You can write down the numbers in the speed dial memory. Please attach the supplied Directory Card on your base.


LEDs

POWER - Steady on when the power is on.


CHARGE - On shows the handset is being charged.

IN USE - Steady on when the line is engaged.

Blinks when muting is activated and holding the line.

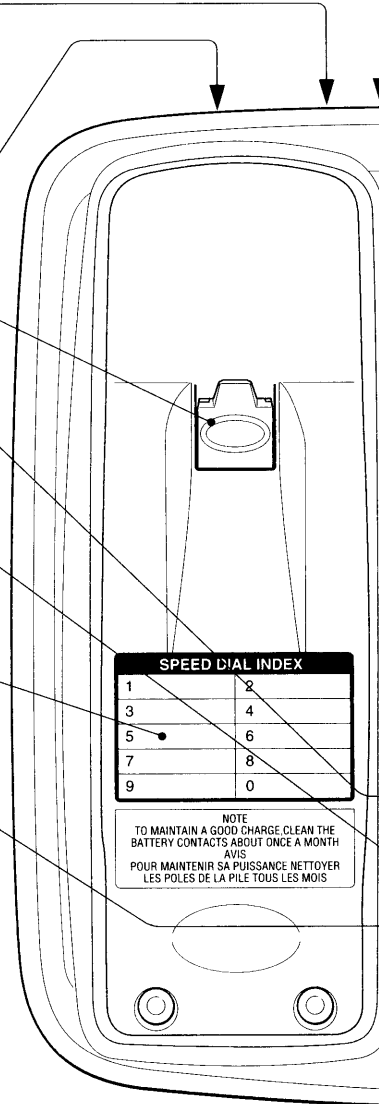

LOCATION OF CONTROLS

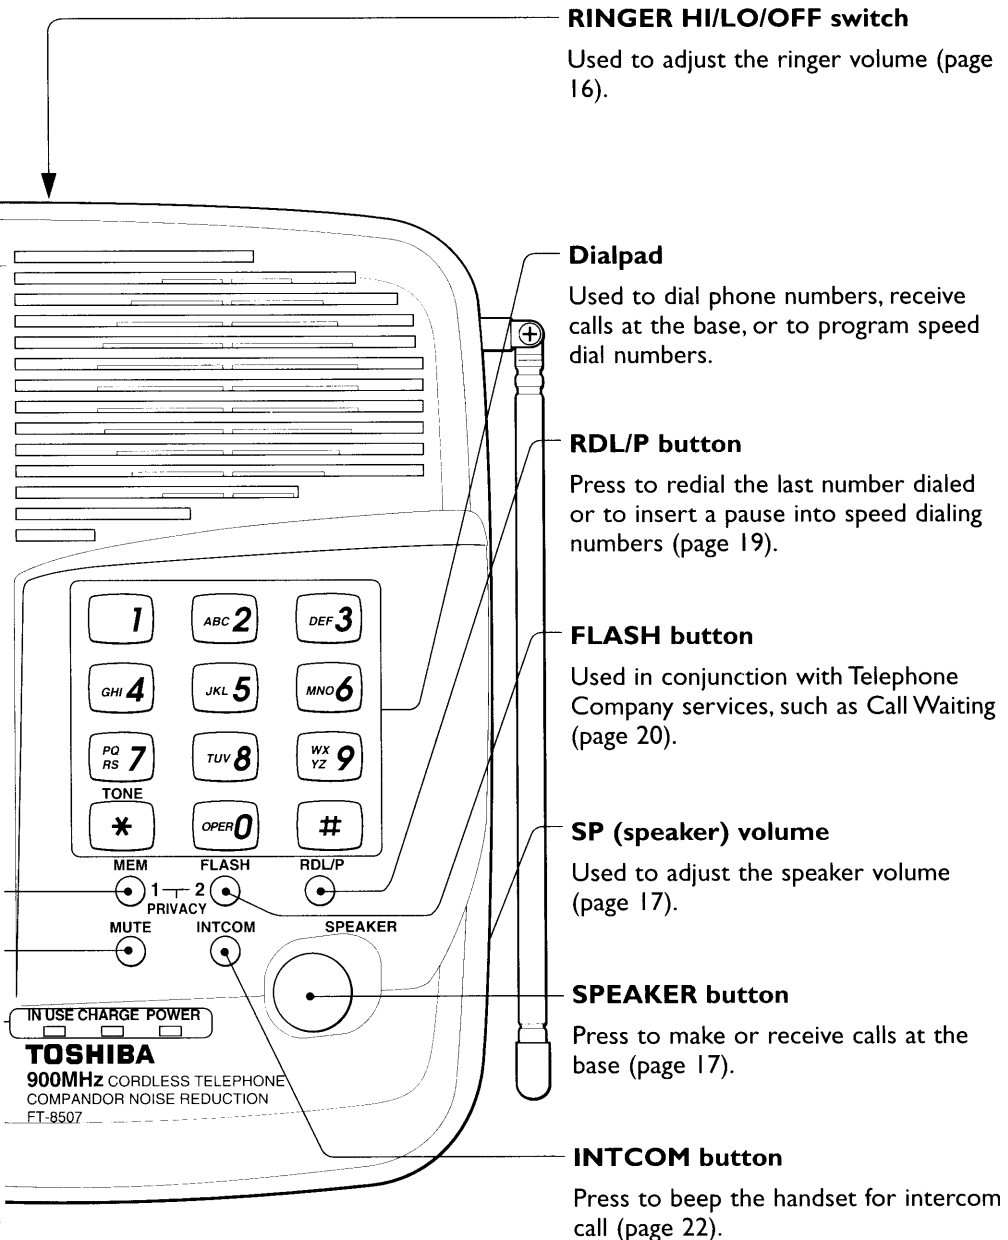


USING THE TELEPHONE

TONE/PULSE SELECTION

Set the TONE/PULSE switch for the type of service you have, tone or pulse. If you are not sure which type of service you have:

- 1 Set the T-P switch to T.
- 2 Press the TALK button on the handset and listen for a dial tone.
- 3 Press any number other than 0. If the dial tone stops, you have Tone service. If the dial tone continues, you have Pulse service.
- 4 If you have Pulse service, set the T-P switch to P.

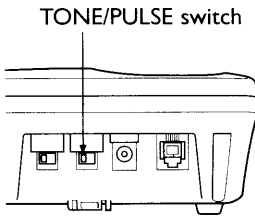

ADJUSTING THE RINGER VOLUME


You can adjust the ringer volume by using the RINGER switch on the base unit. Slide the switch to one of the following positions to select your desired volume level:

HI(high) - Sets the ringer volume to high level.

LO(low) - Sets the ringer volume to low level.

OFF - Turns the ringer off.

RINGER HI/LO/OFF

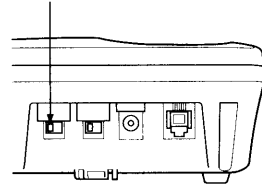

NOTE:


If the handset is placed on the base unit, the handset rings but the base unit does not ring.

USING THE TELEPHONE

MAKING A CALL

AT THE HANDSET:

- 1 Press the TALK button.
- 2 Listen for dial tone. The TALK/BATT LED will come on in red.
- 3 Key in the phone number you are calling.
- 4 It may take a second for transmission and for ringing to start.
- 5 To hang up, press the TALK button again.

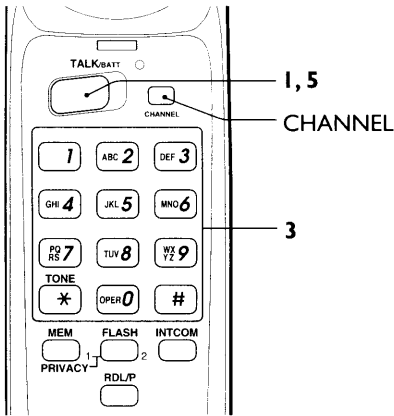


NOTES:

- If the handset battery becomes weak during conversation, warning beeps will sound every 3 seconds. Finish the call as soon as possible and return the handset to the base unit for recharging.
- If the handset is too far away from the base unit, the line may not disconnect even if you press the TALK button. In such a case, you will hear a beep sound indicating an error. To disconnect the line, bring the handset near the base unit and press the TALK button again, or return the handset to the base unit.
- If a power interruption occurs, press the TALK button. The handset returns to the standby mode.


AT THE BASE:

- 1 Press the SPEAKER button.
- 2 Key in the phone number you are calling.
- 3 To hang up, press the SPEAKER button again.

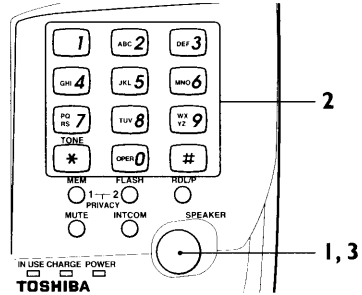

ADJUSTING THE SPEAKER VOLUME

You can adjust the speaker volume by using the SP(speaker) VOLUME on the base unit.

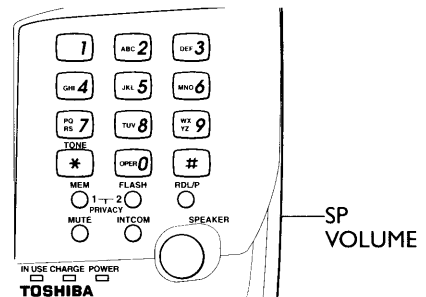

USING THE TELEPHONE

INTERFERENCE OR STATIC

Static interference can be caused by many different things, such as: cordless phones in neighbouring homes or apartments, baby monitors, microwave ovens, certain kinds of lighting, etc. To reduce static on the line:

- 1 Try moving to another location in the room or closer to the base unit.
- 2 Press the CHANNEL button on the handset to change to clearer channel.
- 3 Lower the antenna slightly on the base unit.
- 4 If none of the above solutions works, refer to the Troubleshooting on page 28.

NOTE:

When the channel is changed, the TALK/BATT LED blinks. If it fails error beeps sound.

For service information, call 1-800-631-3811.

ANSWERING A CALL

AT THE HANDSET:

If the handset is on the base unit, simply pick it up and it will connect automatically. To hang up, press the TALK button or replace the handset on the base unit.

If the handset is off the base unit, press the TALK button or **any dialing keys** including * and # to answer your call. To hang up, press the TALK button again or place the handset on the base unit.

AT THE BASE:

Press the SPEAKER button or **any dialing keys** including * and # to answer a call. You can talk via the speaker on the base unit. To hang up, press the SPEAKER button again.

TRANSFERRING THE INCOMING CALL

You can transfer the incoming call from the handset to the base, or from the base to the handset.

FROM THE HANDSET TO THE BASE:

- 1 While in the Talk mode, press the INTCOM button on the handset.
- 2 Press the SPEAKER or INTCOM button on the base accept the call and place the call on hold.
- 3 Press the TALK button on the handset to release the call and complete the transfer.

To resume the conversation on the handset, press the SPEAKER button on the base.

FROM THE BASE TO THE HANDSET

- 1 While in the Speakerphone mode, press the INTCOM button on the base.
- 2 Press the TALK or INTCOM button on the handset to accept the call and place the call on hold.
- 3 Press the SPEAKER button on the base to release the call and complete the transfer.

To resume the conversation on the base, press the TALK button on the handset.


USING THE TELEPHONE

LAST NUMBER REDIAL

AT THE HANDSET:

To redial the last number that you called on the handset:

- 1 Press the TALK button.
- 2 Wait for dialtone.
- 3 Press the RDL/P button.

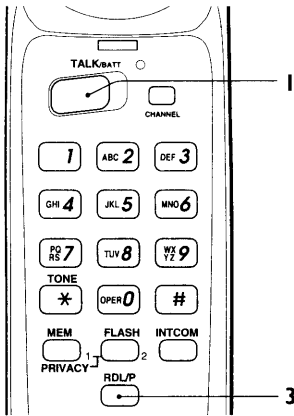


NOTES:

- You cannot redial the number which is more than 32 digits.
- RDL/P stands for REDIAL/PAUSE. If any button is pressed between TALK and RDL/P, the unit will assume you want PAUSE and will not REDIAL.

AT THE BASE:

To redial the last number that you called on the base unit:

- 1 Press the SPEAKER button.
- 2 Wait for dialtone.
- 3 Press the RDL/P button.

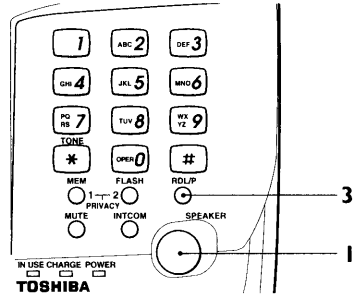

NOTES:

- You cannot redial the number which is more than 32 digits.
- RDL/P stands for REDIAL/PAUSE. If any button is pressed between SPEAKER and RDL/P, the unit will assume that you want PAUSE and will not REDIAL.


USING THE TELEPHONE

MUTING

Press the MUTE button on the base unit to turn off the microphone of the base. You may speak to someone in the room without the caller overhearing.

To resume conversation, press the MUTE button again.

Muting is not possible on the handset.

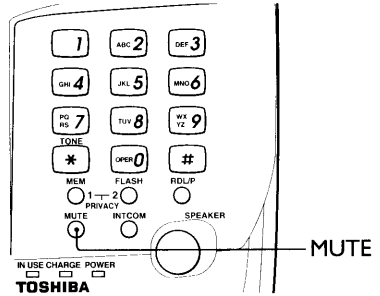



CALL WAITING

AT THE HANDSET AND BASE:

- 1 To answer a Call Waiting call, press the FLASH button.
- 2 Press the FLASH button again to switch between calls.

NOTES:

- Pressing the TALK button will not access Call Waiting; it will disconnect the current caller.
- Pressing the FLASH button without having received a Call Waiting signal may disconnect the current caller.

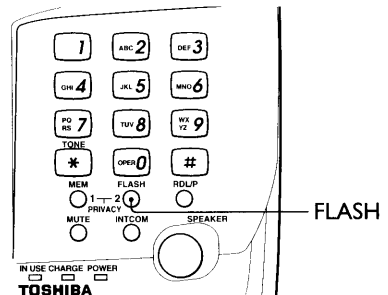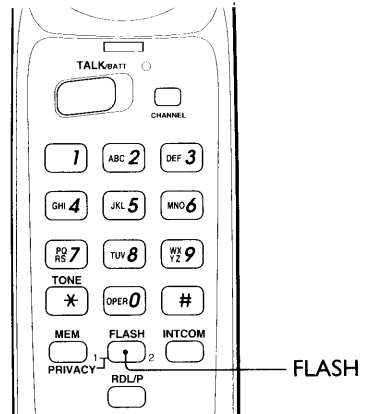



USING THE TELEPHONE

BANKING AND TELEPHONE SERVICES

AT THE HANDSET AND BASE:

Even if you have PULSE dialing, you can use this phone with banking and other phone services requiring touch tone signals.

- 1 Dial the service number and wait for the connection.
- 2 Press the TONE button and then enter the numbers required.
- 3 You will hear the tones on the line.

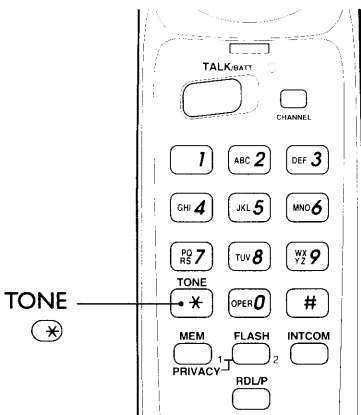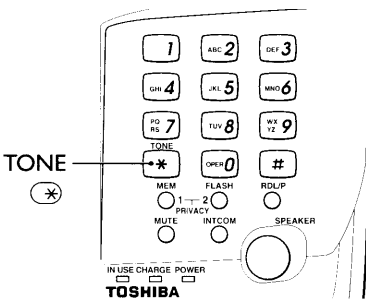


CHANGING THE SECURITY CODE

The digital security code is automatically set when you place the handset on the base unit.

Only in the rare event that you need to change the code, the following are the instructions to do so. Perform when you are not making a call.

- 1 With the handset placed on the base, press the INTCOM button of the base unit.
- 2 Pick up the handset from the base.
- 3 Keep the handset away from the base for about 5 to 7 seconds.
- 4 Replace the handset on the base. New security code is set automatically.

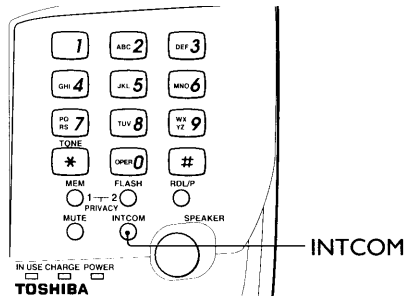

USING THE TELEPHONE

INTERCOM

You can use the INTERCOM to have a 2-way conversation between the base and handset without tying up the phone line. Or you can use it as a handset locator.

INTERCOM CALL FROM HANDSET TO BASE:



- 1 Press the INTCOM button on the handset to beep the base. The handset also beeps.
- 2 Press the SPEAKER or INTCOM button to answer on the base.
- 3 Begin speaking.
- 4 When you finish, press the TALK button on the handset or the SPEAKER button on the base.

INTERCOM CALL FROM BASE TO HANDSET:

- 1 Press the INTCOM button on the base to beep the handset. The base also beeps.
- 2 Press the TALK or INTCOM button to answer on the handset.
- 3 Begin speaking.
- 4 When you finish, press the SPEAKER button on the base or the TALK button on the handset.

NOTES:

- If a call comes in during intercom, you will hear the ring on the base unit. To answer the incoming call, disconnect the intercom first.
- You can cancel the INTERCOM call before the other party answers it by pressing the INTCOM button again on the caller unit (the handset or the base unit).
- If you attempt to call the base unit while in use, you will hear a busy tone.
- The INTCOM button on the base unit will not function while the handset is in use.

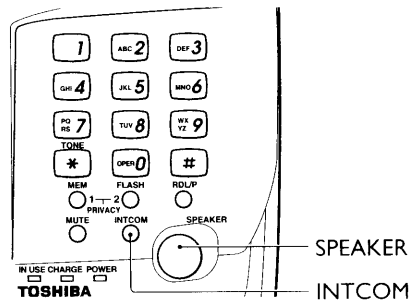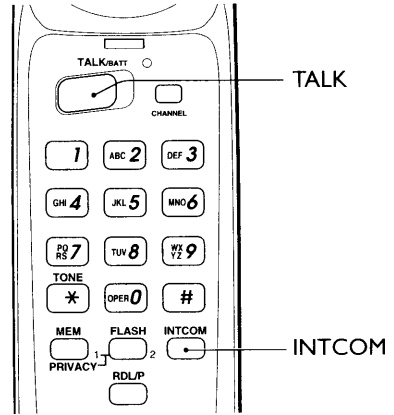


USING THE TELEPHONE

MONITORING AROUND THE BASE

You can monitor around the base unit by using the handset.

- 1 Press the INTCOM button on the handset.
- 2 Press the TALK button while the beep sounds.
You can now hear the sound around the base.
- 3 To finish monitoring, press the TALK button.

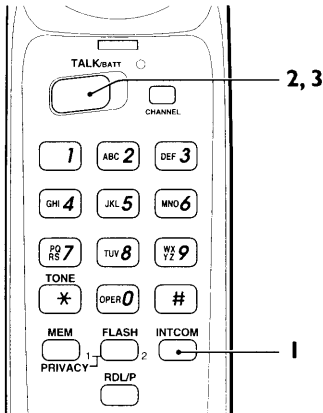


JOINING THE CONVERSATION FROM THE BASE:

- 1 Press the SPEAKER button to join the conversation being held between the handset and the other party.
- 2 To exit the 3-way conversation, press the SPEAKER button again.

NOTES:

- If you attempt to call the base unit while it is dialing, you will hear a busy tone.
- You cannot obtain a 3-way conversation if the privacy conversation mode has been enabled.

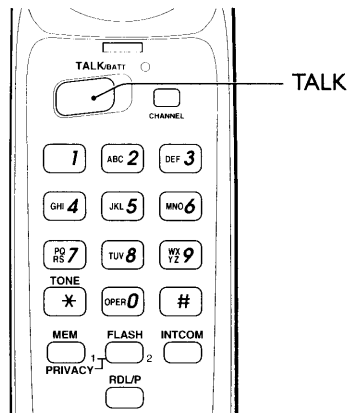


3-WAY CONVERSATION

You can obtain a 3-way communication by joining the conversation between the handset (or the base unit) and the other party.

JOINING THE CONVERSATION FROM THE HANDSET:

- 1 Press the TALK button to join the conversation being held between the base unit speaker and the other party.
- 2 To exit the 3-way conversation, press the TALK button again.

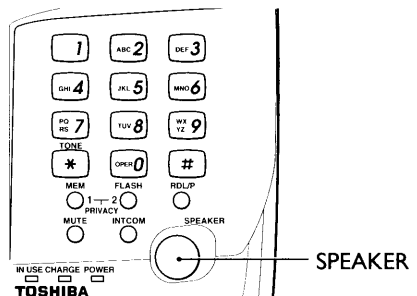

USING THE TELEPHONE

PRIVATE CONVERSATION

The PRIVATE CONVERSATION mode will prevent your telephone conversation from being interrupted either from the base unit or the handset which is not currently used for the conversation. You can enable and disable this mode by using either the base unit or the handset.



To enable the PRIVATE CONVERSATION mode:

- 1 Press the TALK button on the handset or the SPEAKER button on the base unit when you want to talk in the PRIVATE CONVERSATION mode.
- 2 Press the MEM button.
- 3 Press the FLASH button. The unit beeps to indicate that the PRIVATE CONVERSATION mode has been enabled.

The PRIVATE CONVERSATION mode automatically goes off after the conversation.

NOTES:

- If you press the TALK button on the handset while the base unit is in the PRIVATE CONVERSATION mode, you will hear a busy tone.
- If you press the SPEAKER button on the base unit while the handset is in the PRIVATE CONVERSATION mode, you will hear a busy tone.
- The PRIVATE CONVERSATION can be canceled by pressing the INTCOM button on the base unit or the handset which is currently used for the telephone conversation.

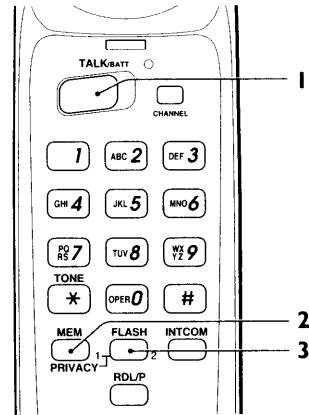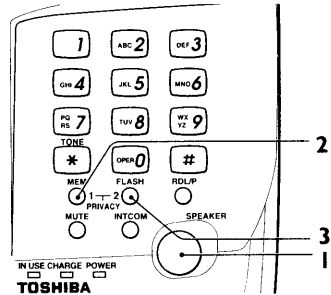

SPEED DIALING


You can store up to 20 telephone numbers (10 each on the handset and the base unit) in the speed dial memory. Each number can be up to 16 digits, including numbers and symbols (0-9, #, *, TONE and PAUSE) which count 1 each.

STORING NUMBERS

AT THE HANDSET AND THE BASE:

Remember, each number should be stored just as you would dial it manually. So for long distance calls, you may need 1-area code-number, but for local calls, just the number.

- 1 Press the MEM button during on-hook condition.
- 2 Dial the phone number (16 digits max.).
- 3 Press the MEM button again.
- 4 Press the number (0-9) you want the phone number assigned to.
A long beep indicates that the number has been stored successfully.

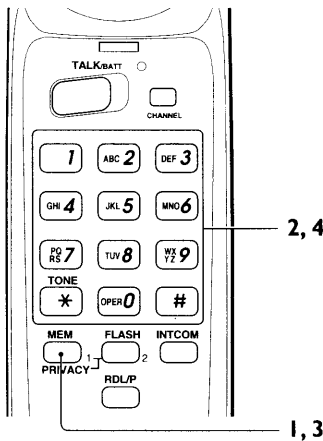

EXAMPLE to store (101)555-1234 under (ABC 2).

MEM → (1) (OPN 0) (1) (AC 5) (JK 5) (AC 5) (1) (AC 2) (OP 3)
(OH 4) → MEM → (AC 2)


EXAMPLE for storing a phone number and instructions for banking or voice mail systems for storage in two-touch memory number 9:

MEM → (P 9) (OPN 0) (1) (AC 2) (OP 3) (OH 4) (JK 5) →
RDL/P → (MO 6) (P 7) (TU 8) (P 9) (1) (AC 2) → MEM → (P 9)

The RDL/P button works as the PAUSE button here.

NOTES:

- Press a button within 20 seconds after the previous button. Otherwise the setting procedure will be canceled.
- If you store a new telephone number in the same memory number, the previously stored telephone number is erased.
- If you make a mistake, short beeps sound and the setting is canceled.

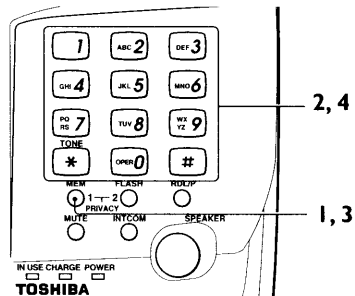


SPEED DIALING

DIALING A STORED NUMBER


AT THE HANDSET:

- 1 Press TALK and wait for dial tone.
- 2 Press the MEM button.
- 3 Press the memory location number (0-9).

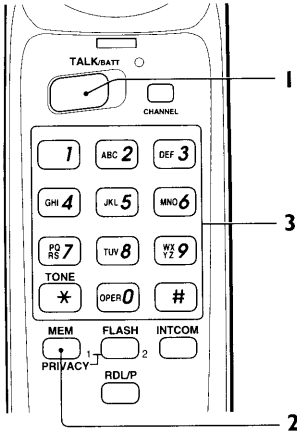

AT THE BASE:

- 1 Press SPEAKER and wait for dial tone.
- 2 Press the MEM button.
- 3 Press the memory location number (0-9).

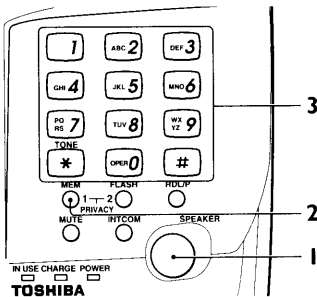

ERASING A STORED NUMBER

AT THE HANDSET AND THE BASE:

You can erase a number or simply store another one in its place. When you store a new phone number, the one previously stored in that memory is erased automatically. To erase a stored number:

- 1 Press the MEM button twice.
- 2 Press the memory location button (0-9).

CHAIN DIALING

(When the telephone number is more than 16 digits)

There are some different dialing options.
You can:

- (A) Store the numbers in memory locations.
- (B) Store the numbers at the beginning of the dialing sequence, and dial the rest of the numbers manually.
- (C) Store some numbers at the end, and dial the first numbers manually.

EXAMPLE to store

9-RDL/P-012345678-TONE-90123456:

- (A) To store the numbers in two memory numbers

Store the memory numbers 1 and 2 for example

First, MEM ⇒ RDL/P ⇒

TONE

⇒ MEM ⇒

Then, MEM ⇒ ⇒

MEM ⇒

To dial the above number

TALK ⇒ MEM ⇒ ⇒ MEM ⇒

- (B) To store some numbers at the beginning, and dial the rest of the numbers manually.

Store from 9 to TONE in memory number 1 for example.

To dial the above number

TALK ⇒ MEM ⇒ ⇒ and then

press

- (C) To store some numbers at the end, and dial the first numbers manually
Store from TONE to 6 in memory number 1 for example.

To dial the above number

TALK ⇒ RDL/P ⇒

⇒ MEM ⇒

USING THE MEMORY DIALING OR PBX

The RDL/P (redial/pause) button allows you to insert a pause of about 3 seconds in the memory dialing to make an outgoing call through a PBX or a long distance service.

EXAMPLE to store 0-1234567 to call through a PBX in memory number 1

MEM ⇒ ⇒ RDL/P ⇒ ⇒ MEM ⇒

If more than 3 seconds are needed, press RDL/P twice.

To dial the above number

TALK ⇒ MEM ⇒

If you may require further operating instructions about memory dialing, **call 1-800-631-3811**

TROUBLESHOOTING

Should any problem occur with the set, make the following simple tests to determine whether or not servicing is required.

If the problem persists after you have made these tests, **call 1-800-631-3811 for Customer Service.**

PROBLEM	Cause and Countermeasure
<p>No dial tone. No calls come in.</p>	<ul style="list-style-type: none"> • AC adaptor of the base unit is not plugged into the AC 120V outlet. • Battery is low. → Place the handset on the base unit to recharge. • Telephone line cord is disconnected. → Check the wall telephone jack. • The previous call is not disconnected. → Press the TALK button to disconnect the line. • Trouble with the telephone line. → Check with other telephone.
<p>The line is noisy.</p>	<ul style="list-style-type: none"> • The handset is too far from the base unit. → Bring the handset near the base unit. • The battery is low. → Place the handset on the base unit to recharge. • The base unit is located in a place with high interference. → Relocate the base unit. • Interference from TV, appliances, etc. → Move away from the interference source. • May be line noise. → Check with another phone.
<p>Battery pack goes low quickly.</p>	<ul style="list-style-type: none"> • The battery pack was not fully charged at the initial charging. Charge the battery pack for 12 to 16 hours without any interruption. • To avoid Ni-Cd battery memory effect, be sure to charge only as needed. • Battery needs to be replaced.
<p>The unit operates abnormally.</p>	<p>Try in this order.</p> <ol style="list-style-type: none"> 1 Disconnect the AC adaptor. 2 After a few seconds, connect the AC adaptor again.


SPECIFICATIONS

HANDSET

Receive Frequency	925.999 ~ 927.951 MHz
Transmit Frequency	902.078 ~ 904.030 MHz
Power Source	Customer Replaceable Ni-Cd Battery 600 mA _H 3.6 V DC
Battery Life	7 days at Standby Mode, after proper initial charging cycle
Dimensions (H/W/D)	Approx. 6 1/2" X 2 1/4" X 1 1/2" (165 x 57 x 38 mm) Antenna Length 2 1/4" (54.9 mm)
Weight	Approx. 7.8 oz (220 g)

BASE UNIT

Receive Frequency	902.078 ~ 904.030 MHz
Transmit Frequency	925.999 ~ 927.951 MHz
Power Source	AC 120 V 60 Hz/DC 9 V
Dimensions (H/W/D)	Approx. 2 1/2" X 6 3/4" X 7 1/2" (63.5 x 171 x 191 mm)
Weight	Approx. 1 lb 2 oz (500 g)

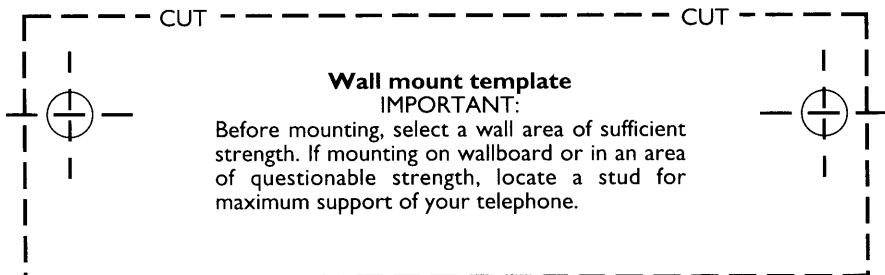

SPECIFICATIONS

SUPPLIED ACCESSORIES

Rechargeable Battery	(1)	TRB-8000	Part #. RC004931
AC Adaptor	(1)	TAC-8000BK	Part #. RC003328
Short Telephone Cord	(1)		Part #. RC001861
Long Telephone Cord	(1)		Part #. RC001872
Owner's manual	(1)		Part #. RC005093
Speed Dial Index Card for handset	(1)		Part #. RC004933
Speed Dial Index Card for base unit	(1)		Part #. RC004844
Wall Mount Screw	(2)		Part #. RC000936
Quick Reference Guide	(1)		Part #. RC005094

For purchase of accessories, please call **1-800-631-3811**.

WARRANTY/SERVICE

SERVICE REQUIREMENTS

If the cordless telephone should malfunction, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered within the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to a unit both in and out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.

It is the responsibility of users requiring service to report the need for service to the Toshiba dealer.

IMPORTANT INSTRUCTIONS TO USERS

Your FT-8507BK has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number".

It is most unlikely, but...If your FT-8507BK should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your FT-8507BK (or require changes in the FT-8507BK or its

connection), the phone company will notify you in writing, so you have the chance to take whatever action necessary to ensure uninterrupted phone service.

FCC REQUIREMENTS

You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your FT-8507BK to coin telephone services. Check with your local telephone company if you wish to connect your FT-8507BK to a party line service. Some party line service require a special adaptor or modification to your telephone.

WARRANTY/SERVICE

TELEPHONE/TELEPHONE ANSWER MACHINE LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty of Parts and Labor

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one year after the date of original retail purchase.

During this period, TACP/THI will repair a defective product or part, without charge to you. You must deliver the entire unit to a TACP/THI Authorized Service Station. You are responsible for all transportation and insurance charges for the unit to and from the Authorized Service Station. If you live in the Continental U.S.A. you may, at your option, for ward your product for exchange to:

Toshiba America Consumer Products Inc.

Returns Center

1420C Toshiba Dr.

Lebanon, TN37087

You are responsible for all transportation and insurance charges for the product to the Returns Center. Products shipped to the Return Center must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

Upon receipt we will, at our option, exchange the unit with a new or refurbished unit.

Owner's Manual

You should read the owner's manual thoroughly before operating this product.

Your Responsibility

The above warranties are subject to the following conditions.

(1) You must retain your bill of sale or provide other proof of purchase.

(2) These warranties are effective only if the product is purchased and operated within the U.S.A or Puerto Rico.

(3) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

(4) After the warranty period has expired in the U.S.A. Call 1-800-631-3811 to receive information concerning the closest Authorized Service Station in your area or receive information on an exchange price.

Payment must be enclosed with product in the form of a certified check or money order and for ward your product to:

Toshiba America Consumer Products Inc.

Returns Center

1420C Toshiba Dr.

Lebanon, TN37087

(5) Physically damaged product are not acceptable for repair or exchange within or after the warranty period expires and will be returned as received.

How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows:

(1) Arrange for the delivery of the product to the TACP/THI Authorized Service Station. Products Shipped to the Service Station must be insured and safely and securely packed, preferably in the original shipping carton, and a letter of explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed. All transportation and insurance charge must be prepaid by you.

In The Continental United States contact:



In Hawaii contact:

Toshiba Hawaii
327 Kamakee Street,
Honolulu, HA 96814
(808)-521-5377

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. With the exception of any warranties implied by state law as hereby limited, the foregoing express warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any product or parts.

In no event shall TACP or THI be liable for consequential or incidental damages. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

IMPORTANT: PACKING AND SHIPPING INSTRUCTION

When you send the product to a service center, you should use the original carton box and packing material, then insert the original carton box containing the unite into another carton, using more packing material.

For technical assistance, purchase of accessories or service, please call 1-800-631-3811.

IMPORTANT

We suggest you record the following information and retain for your records along with your bill of sale or equipment document.

Model no. _____ **Serial no.** _____
Purchase date _____ **Dealer** _____
Dealer address _____

© 1997 TOSHIBA AMERICA CONSUMER PRODUCTS, INC.