


TOSHIBA

OWNER'S MANUAL

PCM 900 MHz DIGITAL

CORDLESS TELEPHONE WITH
NAME AND NUMBER CALLER ID

FT-H986BK

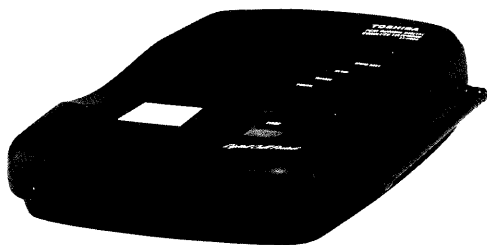

TOLL FREE CUSTOMER SERVICE 1-800-631-3811

Should your unit require service, please refer to the
"Toshiba service procedure" in your owner's manual.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
4. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on unstable cart, stand, or table. The telephone may fall, causing serious damage to the telephone.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.

IMPORTANT SAFETY INSTRUCTIONS

12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following condition:
 - A. When the power supply cord plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

CAUTION: TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS BY BATTERY, READ AND FOLLOW THESE INSTRUCTIONS.

1. Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check with State and local codes for possible special disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instructions manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

1 INTRODUCTION	4
2 CONTROLS AND FUNCTIONS	7
3 INSTALLATION	10
4 GETTING STARTED	15
5 THE LCD DISPLAY	16
6 STARTING OUT	17
7 BASIC OPERATION	19
8 ADVANCED FUNCTIONS	20
9 MEMORY DIALING	22
10 CALLER ID (CID)	25
11 MAINTENANCE	29
12 OUT OF RANGE INDICATION	30
13 IN CASE OF DIFFICULTY	31
14 SPECIFICATIONS	33
15 WARRANTY / SERVICE	34

1 INTRODUCTION

Toshiba America Consumer Products INC. takes pride in presenting the FT-H986, one of the finest telephones available. Intelligent design, superb craftsmanship, and the latest technological advances have been combined to provide you with a telephone that is easy to operate and will provide you with years of dependable service. Please take the time now to read your Owner's Manual carefully, so that you may enjoy the many convenient features of your FT-H986 telephone.

Unlike most other cordless phones, the FT-H986 digitizes your voice using advanced ADPCM digital voice coding to provide noise and distortion free performance. In most conditions you will not be able to tell you are using a cordless phone. Gone are the annoyances of static, interference and having to listen to other people's conversations on your cordless phone.

The FT-H986 scrambles your voice before it transmits it. This allows you the security of knowing that no one can tune in and eavesdrop on your conversations.

The FT-H986 decodes and displays name and number Caller ID (CID) information where available and when subscribed to. The alpha-numeric display will show both the name and number of the calling party. Up to 15 name characters or 11 phone number digits can be displayed on the LCD.

With the FT-H986 the user can easily answer a call on the handset by simply pressing any key other than the OFF,

MUTE or Volume Keys. This is very useful in a dark environment, so that the user does not have to fumble around looking for the TALK key to answer the call. Pressing either Volume Key will activate the backlighting without answering the call. This allows you to see the display and determine who is calling without answering the call.

The FT-H986 also provides a one-way Page/find. Pressing the base PAGE key will cause the handset to ring in a manner which distinguishes it from normal incoming ringing. This can be used to alert the handset user or to simply locate the handset in the event that it is misplaced.

The FT-H986 uses special memory in both the base and handset which is not susceptible to power failures. This provides permanent storage of all speed dial numbers, CID information as well as the base and handset security codes.

When a spare battery is installed in the base unit, the FT-H986 uses this battery to provide operational backup in case of power failure. In this way you have access to all normal phone functions during a total power outage. Calls can still be placed and received without interruption. More than 5 hours backup will be possible with a fully charged battery in the base unit.

The FT-H986 also informs you that another extension is currently off-hook on the same phone line. The phone will also alert you when you are Out of Range even when you not using the phone!

SPECIAL FEATURES

- 900 MHz Operation.
- Fully Digital Link between Handset and Base with ADPCM voice coding.
- Digitally-Scrambled Voice Communication.
- Digital Call Protect™
- Name / Number CID display.
- 2 row by 12 character 5x7 dot matrix alpha-numeric LCD.
- 50 CID memories.
- Backlit LCD on the handset.
- Backlit handset keypad.
- 20 location Programmable Memory for 20 Digit Phone Number.
- 10 Channel Operation with auto channel selection.
- Out-of-Range indication while the handset is in use or in standby mode.
- Removable handset battery pack.
- Spare battery charger in the base unit.
- Complete battery back-up in case of power failure (with spare battery installed in base).
- Any key answer - When the phone rings simply press any key other than OFF, MUTE, or the Volume Keys on the handset to answer.
- Auto hang up when returning the handset to the base cradle.
- Extension in use indicator.
- 24 Bit Digital Security Code for 16.8 million combinations.
- DTMF and Pulse Dialing.
- Low Battery Detect and Warning indicator.
- Handset Power Saving for 7 days Standby time.

- 7.0 Hours continuous talk time.
- Volume Adjust on Handset.
- REDIAL, HOLD/P, PAGE and MUTE.
- Hearing-Aid Compatible Receiver.
- Detachable power supply.
- Non-volatile storage of security code and speed dial memories.
- Programmable Ringer Types.

This manual is designed to make you familiar with the FT-H986. We strongly recommend you read the manual before using your phone.

IMPORTANT

Before using your new phone please follow these instructions

1. Connect the AC adaptor plug into AC outlet of home electricity in an area where the unit will not be disturbed and power will not be interrupted for 8 hours.
2. Install the battery pack in the handset.
3. Leave the handset in the base unit overnight **8 hours to ensure a full charge.**

When replacing the battery pack, please follow the same procedure.

The Digital Security Code, which enables the handset and the base unit to communicate with each other, will not activate unless the handset's battery pack is charged in the base unit.

PRECAUTIONS

- **Before initial use, charge the battery pack in the handset for approximately 8 hours without any interruption of the charge cycle whatsoever.**
- Operate the AC adaptor on 120V AC, 60 Hz.
- Use the AC adaptor supplied for this unit. Do not use any other AC adaptor.
- Unplug the AC adaptor from the wall outlet when the cordless telephone system is not to be used for an extended period of time. To disconnect the AC adaptor, pull it out by grasping the body. Never pull it by the cord.
- Do not install the base unit in a location near a heat source such as radiators or airducts, or in a place subject to direct sunlight, excessive dust, moisture, rain, mechanical vibration, or shock.



- Do not place the units on or near a TV set or a personal computer, as these units may interfere with each other.
- Should any liquid or solid object fall into the base unit, unplug the unit and have it checked by qualified service personnel before operating the unit any further.
- This unit is designed and approved for single lines only. It should not be connected to multiple lines or a coin telephone or party lines.

If you have any question or problem concerning your set that is not covered in this manual, please consult the nearest Toshiba Service Station authorized to service telephone terminal equipment.

**For Customer Service, Call
1-800-631-3811.**

2 CONTROLS AND FUNCTIONS


BASE CONTROLS AND FUNCTIONS

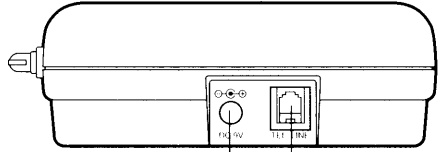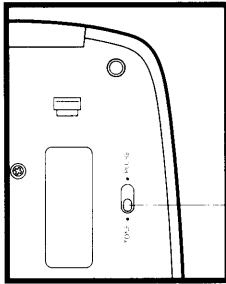

TONE/PULSE SWITCH


AC POWER JACK

PHONE CORD JACK

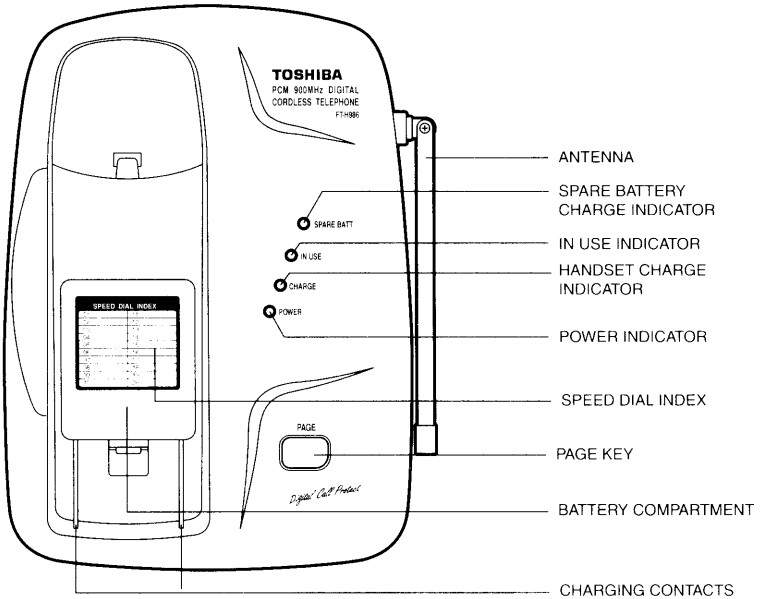


MAIN FEATURES ON BASE UNIT

HANDSET CONTROLS AND FUNCTIONS

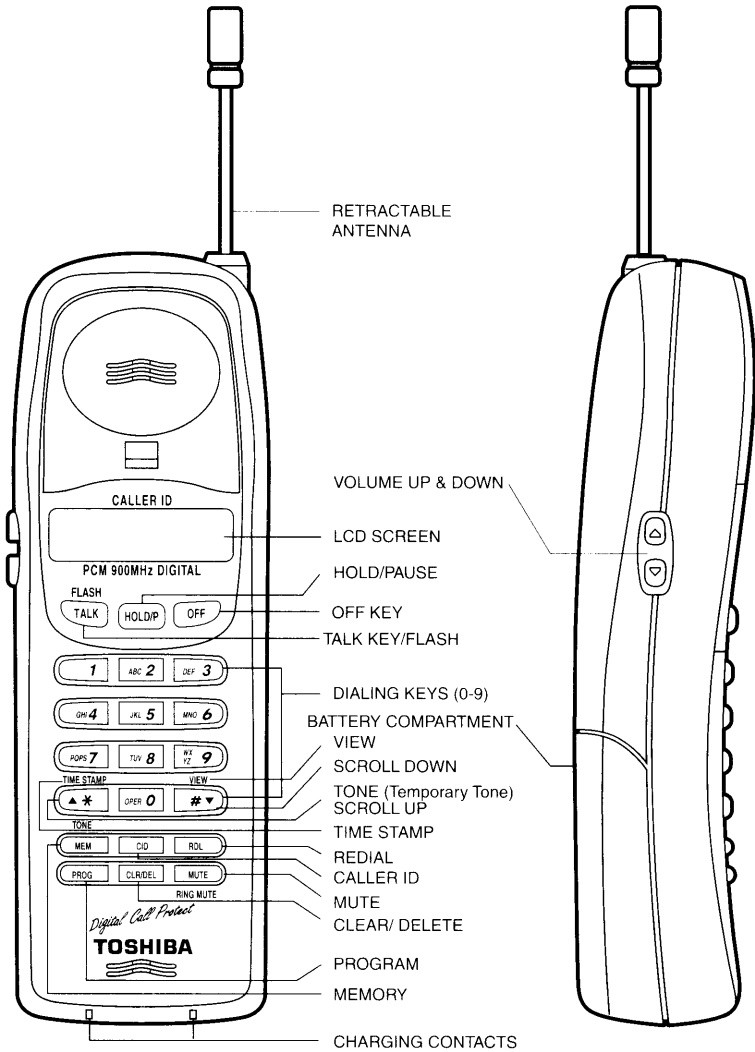


MAIN FEATURES ON HANDSET


PARTS INCLUDED

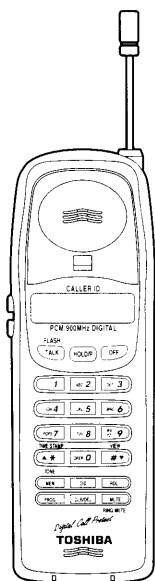


HANDSET

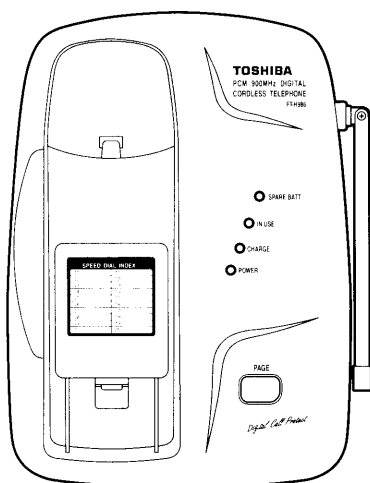

BASE UNIT

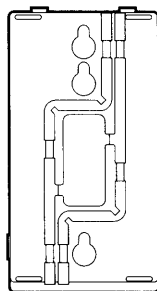


WALL MOUNTING BRACKET

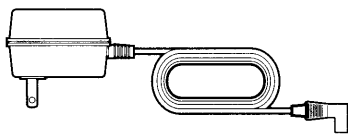


AC POWER ADAPTOR



 SPEED DIAL INDEX



BATTERY PACK

 

TELEPHONE LINE CORD



WALL MOUNTING SCREWS and CAPS

3 INSTALLATION



CONNECTING

There are three basic types of phone wall outlets you may find in your home:

- (1) Modular USOC: RJ11C jack,
- (2) 4-prong jack, or
- (3) hard-wired type

(1) If you have a modular wall jack,

- 1 Plug one end of the telephone line cord into the base modular jack on the rear of the base unit.
- 2 Plug the other end of the telephone line cord into the modular wall jack.

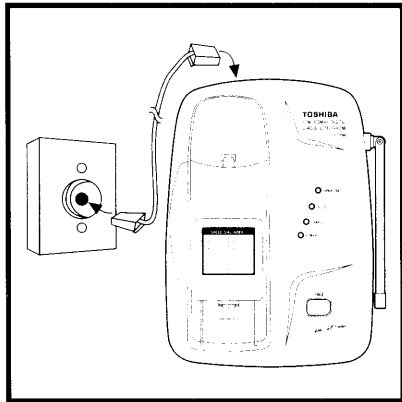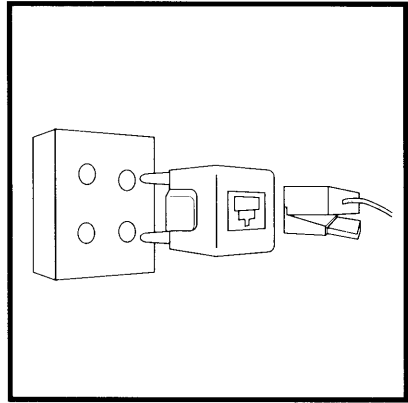


(2) If the existing receptacle is a 4-prong jack,

An adaptor (not included) is required. The adaptor plugs into the 4-prong jack and the phone's modular plug plugs into the adaptor.

(3) If your phone cord is hard-wired into an outlet and you have no jack,

A modular jack converter (not included) is required, entailing some rewiring (namely, making color-coded connections).

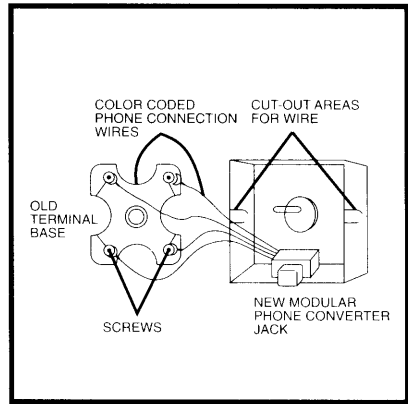

NOTE

The dealer from whom you purchased your telephone or a telephone supply store can advise you regarding the proper adaptor or converter.

CAUTION:

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- If you experience an excessive amount of noise or static, try relocating the base away from the interference source i.e. TV, radio, appliances.

CONNECTING THE AC POWER


Connect the plug at the end of the AC adaptor to a standard 120V AC outlet.

Make sure to route the AC adaptor cord where it will not create a trip hazard, or where it could become chafed and create fire or other electrical hazards.

Connect power to the base unit before placing handset in the cradle.

Notes

- Do not attach the AC power supply cord to building surfaces using metal fittings.
- Use only with Toshiba TAC-9100BK, class 2 power supply, DC 9V 300mA.

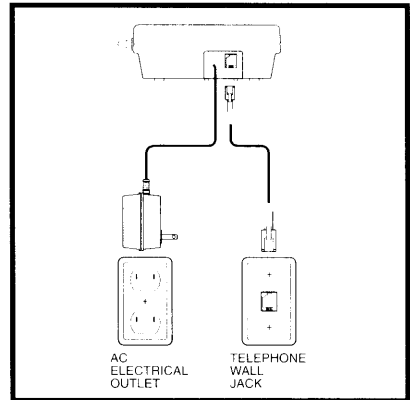

CHARGING THE HANDSET BATTERIES

The handset of your FT-H986 cordless telephone is powered by a rechargeable battery pack. It charges automatically whenever the handset is in the base. You should charge the battery pack for 8 hours when you first receive your phone. You'll know the battery pack needs charging when:

- The phone beeps when you press the TALK key.
- The low battery message is displayed:



LOW BATTERY

- The handset seems completely discharged, the LCD is completely clear and the handset does not beep when you press the keys.


To Charge The Battery Pack

To charge the battery pack, place the handset in the base unit. The CHARGE indicator will light to show the handset is seated properly and the battery pack is charging. It is recommended that the battery pack be charged for at least 8 hours. You can use your telephone before that with diminished capacity, but it is best to charge the battery fully. It will take several recharge cycles to maximize the charge capacity of your battery pack. The maximum battery life between charges is 7 hours of continuous talk time or 7 days of stand by.


Replacing The Handset Battery Pack

Follow the steps below:


1. Remove the battery case cover by pressing on the ridged lines and sliding downward.

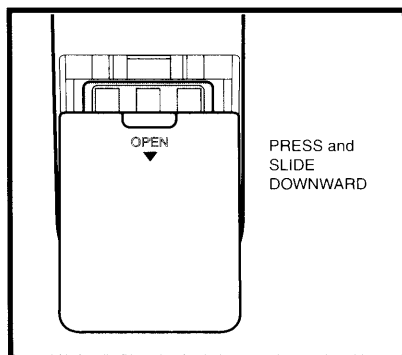

2. Discard the old battery pack. Don't put the old battery pack in a trash compactor or a fire - it could burst.
3. Place the new battery pack in its housing with the metal contacts facing down.

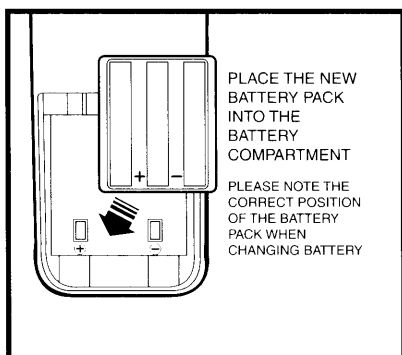

4. Replace the battery case cover by sliding the cover upwards.

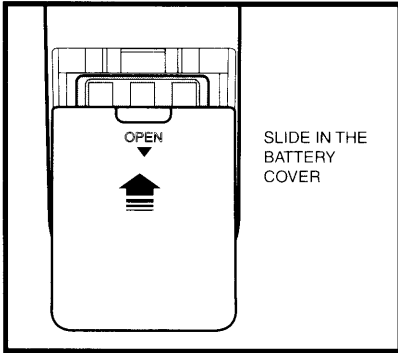

5. If the new battery pack is not already charged, place the handset in the cradle of the base unit to allow it to charge for 8 hours.

BATTERY FOR THE BASE UNIT

Alternatively, if you have purchased a spare battery pack and it has been charging in the base unit, simply exchange the drained handset battery pack with the fully charged replacement battery pack from the base charger. Place the drained handset battery pack into the base charger so that it will charge.

The base spare battery charger does not charge a battery pack as quickly as the main handset battery charger. A full charge requires 24 hours.

CAUTION:

To Reduce the Risk of Fire or Injury to Persons, Read and Follow the Instructions

1. Use only TOSHIBA TRB-9100 rechargeable battery pack.
2. Do not dispose of the battery in a fire. The cell may explode.

IMPORTANT: Do not dispose of this battery into household garbage. For information on recycling or proper disposal, consult your local solid waste collection or disposal organization.

3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

NOTES

- The handset's battery pack does not charge properly if the charging contacts are dirty or tarnished. Clean the contacts occasionally with a dry cloth.
- The supplied rechargeable battery pack should last for several years, however, it eventually loses its ability to fully charge and you will need to replace it with a new one. You can order a replacement rechargeable battery pack at your local Toshiba dealer or authorized parts distributor. Call **1-800-631-3811**

USING THE WALL MOUNT BRACKET

1. Position the wall mount bracket on the base.

Line up the tabs on the wall mount bracket with the holes on the bottom of the base (Figure 1). Snap the wall mount bracket firmly in place.

2. Mount the base on the wall.

Position the base so the mounting studs will fit into the holes on the bottom of the base. Position the power cord to extend down the wall the phone is to be mounted on. Slide the base down on the mounting studs until it locks into place.

3. Connect the telephone line cord.

The telephone line cord has a snap-in plug at each end. Insert one of the plugs into the jack on the bottom of the base. Insert the other end of the plug into the wall jack.

4. Plug the AC adaptor on the power cord into an electrical outlet (Figure 2).

5. Set the TONE/PULSE SWITCH on the base unit.

If you have touch tone service on your phone line, set the switch to TONE. If you have rotary service, set the switch to PULSE (Figure 3).

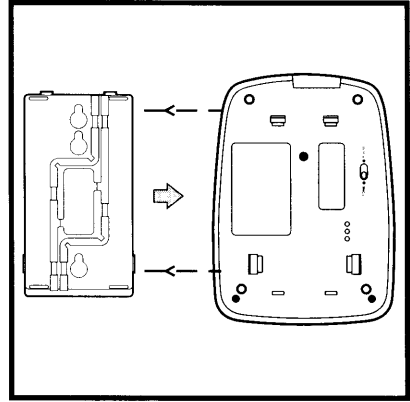


Figure 1

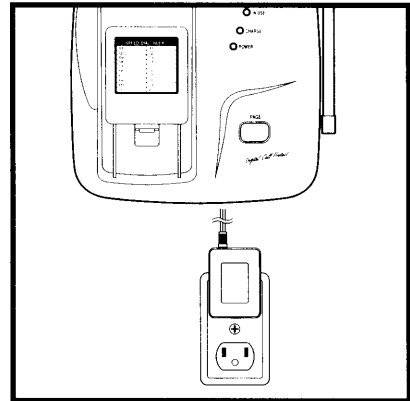


Figure 2

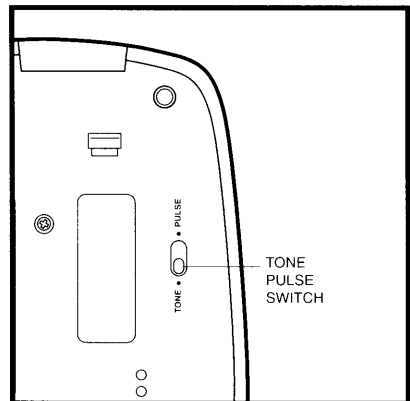


Figure 3

4 GETTING STARTED

SETTING UP YOUR FT-H986

1. Choose an area near an electrical outlet and a telephone wall jack.
2. Connect your telephone line cord.

AC POWER ADAPTOR


Plug the AC power adaptor into an electrical outlet and the DC connector to the back of the base unit.

HANDSET RINGER

The handset ringer is programmed ON as the factory default setting. Refer to **PROGRAMMING THE RINGER** for more information.


SETTING THE TONE/PULSE SWITCH

The **TONE/PULSE** switch is located on the bottom of the base unit and is factory set to **TONE**. If you have touch tone service, do not change the switch setting. If you have rotary (Pulse) service, set the switch to **PULSE**.

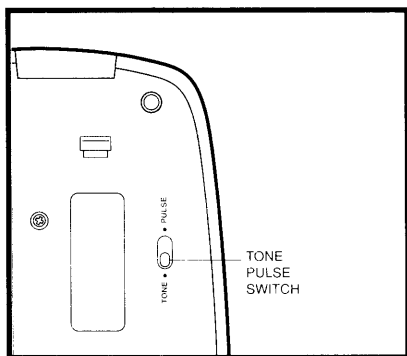


CHARGE THE HANDSET BATTERY PACK BEFORE USE

The battery pack recharges automatically whenever the handset is in the base unit. The batteries must be charged for 8 hours before using your phone for the first time.

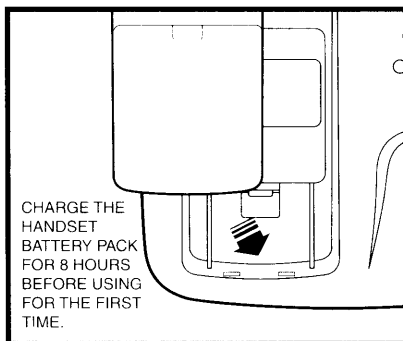

Fill in the telephone number card on the base unit.

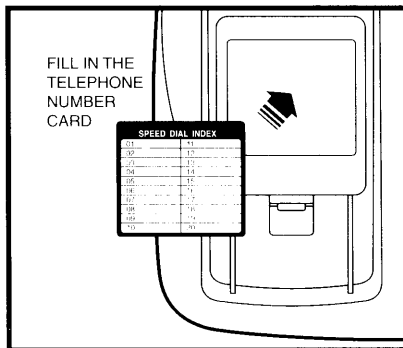

CHECK FOR A DIAL TONE.

After the batteries are charged, pick up the handset. Now press **TALK** on the handset, you should hear dial tone. If not, see 'IN CASE OF DIFFICULTY'

5 THE LCD DISPLAY



LCD Display Messages



The OFF HOOK Indicator is displayed when the phone is off hook.




shows the handset volume setting.



is displayed when the unit is in a low-battery condition. The handset typically operates for at least 5 minutes after the low battery indication is given.



is displayed when the base pages the handset.

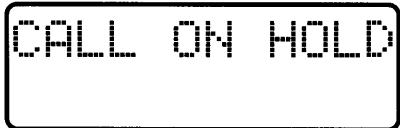

is displayed when the handset is on hold.



is displayed when the handset microphone has been muted.




is displayed when the handset ringer has been muted.



is displayed when the handset has lost communication with the base unit and is attempting to reestablish a link by scanning all channels.



is displayed if communication with the base is reestablished.

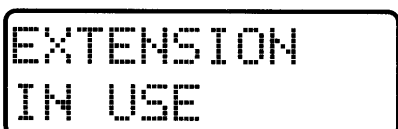

is displayed while in standby mode, if another phone is currently using the same line.



is displayed when flash key is pressed when the phone is off hook.

6 STARTING OUT

Here's a brief guide to the features and functions of your FT-H986 cordless telephone:

SET-UP

- Connect telephone line cord to base unit and telephone jack.
- Plug AC adaptor into a standard electrical outlet
- Set **TONE/PUSE** switch to **PULSE** or **TONE**. The unit is factory set to **TONE**.
- Let handset batteries charge for 8 hours before first use.

MAKING CALLS

- 1 Fully extend the handset antenna to keep maximum range.
- 2 Press the **TALK** key on the handset. When the "PHONE ON" indicator is displayed and you hear a dial tone, dial the number.

Or

- 3 Enter the number to be dialed on the **LCD** and then press the **TALK** key.

ANSWERING CALLS

- 1 To answer a call on the handset, press any key other than **OFF**, **MUTE**, or the Volume Keys on the handset. The handset will not auto-answer when lifted off the base cradle.
2. Fully extend the handset antenna to keep maximum range.

HANGING UP

- Press **OFF** on the handset or place the handset in the base cradle to hang up a call.

TO PLACE A CALL ON HOLD

- Press **HOLD/P** on the handset to place an active call on hold. Press **HOLD/P** again to return to the call.

TO MUTE A CALL


- Press **MUTE** on the handset to disable the handset microphone.
- Press **MUTE** again to return to normal operation.

TO PAGE THE HANDSET

- To page from the base, press **PAGE**.
- To cancel the **PAGE** either press **PAGE** again on the base or press **OFF** on the handset.


STORING:

- 1 The phone should be **OFF**.
- 2 Enter the number you wish to store on the LCD up to a maximum of 20 digits.
- 3 Press **PROG**.
- 4 Enter the two digit memory location (01 .. 20), the unit will store the number, emit a happy tone to confirm successful programming and exit program mode.

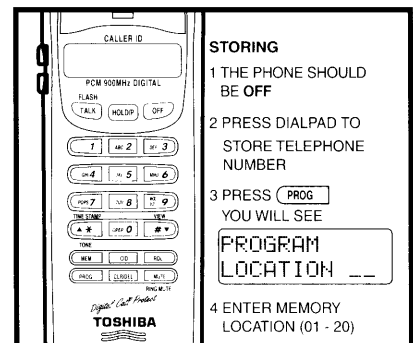


MEMORY DIALING:

- 1 Press the **TALK** key.
- 2 Press **MEM**.
- 3 Enter the memory location of the numbers you wish to dial (01...20). The number will be displayed on the LCD and will be dialed.

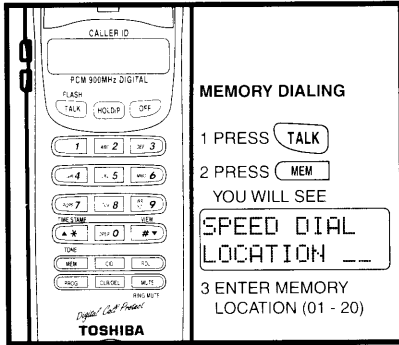

CALLER ID (CID)

- To view information stored in CID memory, press **CID** on the handset.

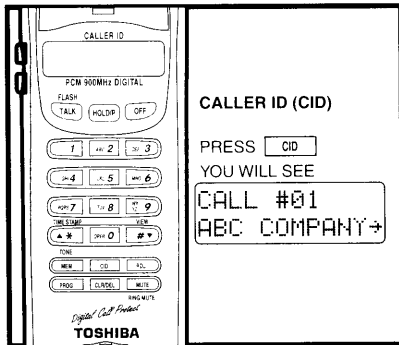

- The display will show the most recent call received.

- To view the time and date of the call press and hold the **TIME STAMP** key. The time and date will be shown along with the phone number. You will see something like:

503-6438981
8:3A AUG31

As long as the key is held down.

- To view other calls, scroll backwards and forwards by using the **#** and ***** keys.
- To view additional letter not shown on the display, press the **VIEW** key
- To exit press **OFF**.

USING REDIAL

- Press the **TALK** key, then **RDL** to automatically redial out the last number you dialed.

Or

- Press **RDL** so that the number is shown on the display and then press the **TALK** key.

HOLD

- Press **HOLD/P** to put a call on hold.
- To return to the call, press **HOLD/P** key again

7 BASIC OPERATION

MAKING CALLS

You can make calls directly from the handset whether you are at the base or away from it.

NOTE: There are two different ways to dial a number:

1. Press the **TALK** key and wait for dial tone. Then dial the number you want. Antenna should be extended.

Or

2. Enter the number onto the display first, then press the **TALK** key. This will dial the number that is displayed on the LCD after 2 seconds. See "ADVANCED DIALING" on Page 21

If you make a mistake when dialing, press **OFF** to hang up, then press the **TALK** key to get the dial tone again.

DISCONNECTING

To end a call, either place the handset back in the base, or press **OFF** on the handset.

OFF MODE (STANDBY)

When the unit is **OFF** the display will be clear.

VOLUME CONTROLS

The handset has a digital volume control.

The volume controls for the handset are located on the side of the unit. Press the Δ (up) or ∇ (down) keys to increase or decrease the volume. Holding either key down will continuously change the volume setting. The ear piece volume level indicator will change accordingly.

FLASH

You can use your FT-H986 cordless phone with services such as Call Waiting. Instead of pressing the switch-hook (as you would on a regular phone) press the **TALK** key.

REDIAL

To **REDIAL** the last number you dialed, press the **TALK** key, then press **RDL**. The phone will automatically dial the number. The number will be shown on the display.

CLEARING THE DISPLAY

During the pre-dial mode, the display can be cleared by pressing and holding the **CLR/DEL** key down until the display clears.

MUTE

- Pressing **MUTE** on the handset to disable the handset microphone.
- Press **MUTE** again to return to normal operation.
-

RINGER MUTE

- Pressing **MUTE** on the handset during incoming ringing will disable the ringer for the duration of the call.

8 ADVANCED FUNCTIONS


CALLER ID (CID) WITH CALL WAITING

If during a normal phone call another call comes in with CID information, notification beeps will be heard in the handset earpiece.

The new CID information will be displayed on the LCD for 10 seconds and will then be stored in memory.

SWITCHING CALLS

- To switch over to the new call, press the **TALK** key, the first call is put on hold.
- To switch back to the first call, press the **TALK** key again.

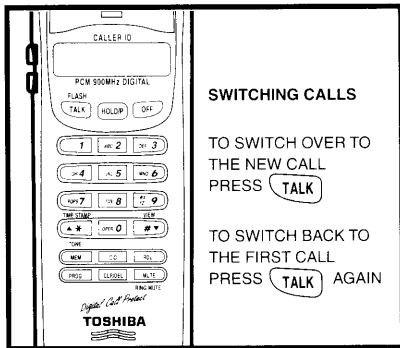


TEMPORARY TONE

If you have a rotary (dial-pulse) telephone service, (**tone/pulse** switch is set to **PULSE**), this feature allows you to enter special codes and tones to operate answering machines, use electronic banking services, calling cards, or other special services.

First, dial the call normally. Then activate the Temporary Tone feature by pressing **tone** (**A ***) key. You can then press the numbers or symbols you need, and your phone will send the proper signals.

To end the call, press **OFF** or place the handset back in the base. The

phone will automatically go back to rotary (dial-pulse) service.

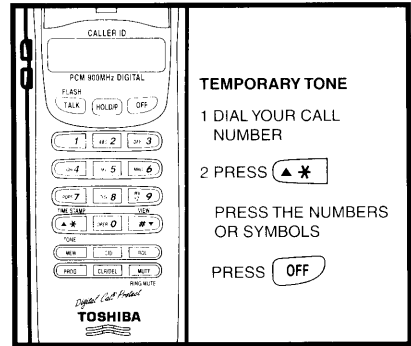

PROGRAMMING THE RINGER

The handset ringer is capable of four different types of ringer tones. The following section details how to select different ringer types and how to turn off the handset ringer.

CHANGING RINGER TYPES

To program, the handset must be **OFF**.

To select a different ringer type do the following:

Press: **PROG**

Press: **#**

Press: **1** for ringer type 1

ABC 2 for ringer type 2

DEF 3 for ringer type 3


POPS 4 for ringer type 4

OPER 0 for ringer off (ringer disabled)

The handset LCD will show the ringer type selected:



Press **PROG** or **OFF** to exit.

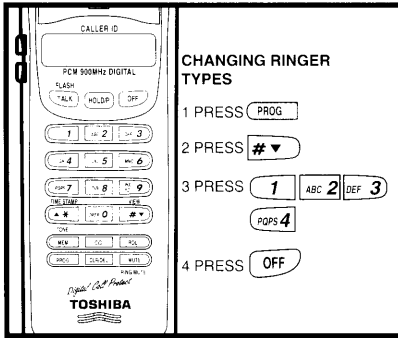


CHANGING RINGER TYPES

- 1 PRESS **PROG**
- 2 PRESS **#**
- 3 PRESS **1** **2** **3**
- 4 PRESS **OFF**

TURNING OFF THE RINGER

To turn off the ringer do the following:

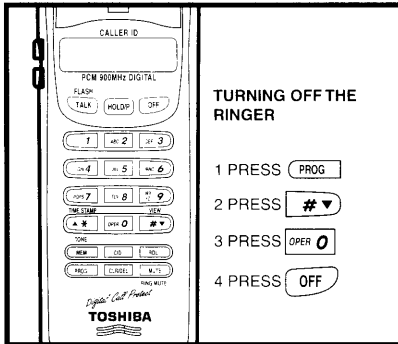


TURNING OFF THE RINGER

- 1 PRESS **PROG**
- 2 PRESS **#**
- 3 PRESS **0**
- 4 PRESS **OFF**

CHECKING THE RINGER TYPE

To test the present ringer type, do the following:

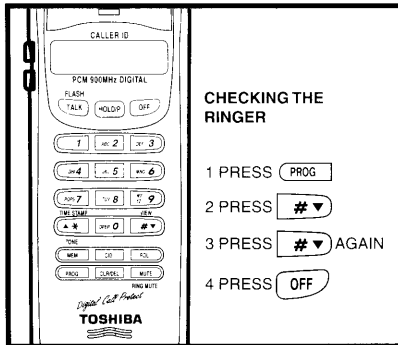

CHECKING THE RINGER

- 1 PRESS **PROG**
- 2 PRESS **#**
- 3 PRESS **#** AGAIN
- 4 PRESS **OFF**

Press **PROG** or **OFF** to exit.

CLEAR/DELETE (CLR/DEL) KEY FUNCTION

The **CLEAR** and **DELETE** functions can be accessed separately depending on how long the key is held down. For example, to clear the last digit entered on the display, hit the **(CLR/DEL)** key for less than 1 second. Press and hold the **(CLR/DEL)** key for more than 1 second to completely clear the LCD.

The delete function is also used to delete CID and speed dial memories, see **DELETING STORED NUMBERS** on page 24, and **DELETING CID** on page 28.

ADVANCED DIALING

There are two different ways to dial a number:

1. Press the **(TALK)** key and wait for a dial tone. Then dial the number you want either manually, using **MEMORY (MEM)** dialing, **CID** dialing or **REDIAL**.
2. Enter the number you wish to dial on the display first. Then press the **(TALK)** key. This will dial the number which is displayed on the LCD after 2 seconds.

NOTE: The phone will dial any number which is shown on the display. If you do not want to dial the number shown on the LCD, it can be changed by:

- Press and hold **(CLR/DEL)** until the display is cleared, then dial normally.
- Wait for the display to clear, then press **(TALK)** and enter the number you wish to dial.

9 MEMORY DIALING

The FT-H986 is capable of memory dialing. You can dial by pressing the memory location in which the number was stored.

STORING SPEED DIAL NUMBERS


To program a speed dial location, do the following:

- 1 With the phone **OFF**, enter the telephone number you wish to store. (20 Digits Maximum).
- 2 Enter program mode by pressing **(PROG)**. The display will show the following:



PROGRAM
LOCATION ____

- 3 Enter the memory location (01..20) you wish to store the number in. As soon as the second memory location digit is entered, the unit will emit a happy tone (a short series of beeps) to confirm successful programming and exit program mode.

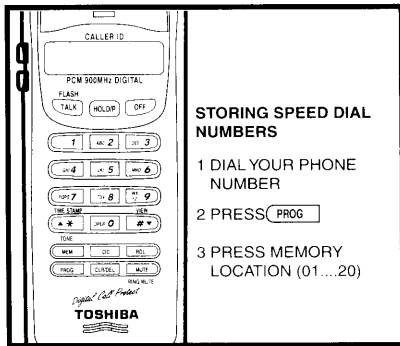

If programming is unsuccessful the unit will display:



PROGRAMMING
INCOMPLETE


Unsuccessful programming can result from not correctly completing the programming sequence. For example, if after entering a number on the LCD and entering program mode, the **OFF** key were pressed instead of entering a valid memory location, the programming incomplete message would appear. If this message appears, simply repeat the programming sequence.

REVIEW MEMORY LOCATIONS


1. With the telephone off.
2. Press **(MEM)**.
3. Press **(▲ *)** or **(# ▼)** key can scroll through the memory locations.
4. Press and hold **(9)** (**VIEW**) to display all digits.
5. Press **(OFF)** to exit **MEMORY** mode.

DIALING FROM MEMORY

- 1 Press **TALK** to get a line.
- 2 Press **MEM**, you're prompted to enter a speed dial location number:

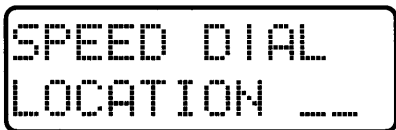


- 3 Enter a 2 digit location number (01-20)
- 4 The number stored in that location will be displayed and immediately dialed.

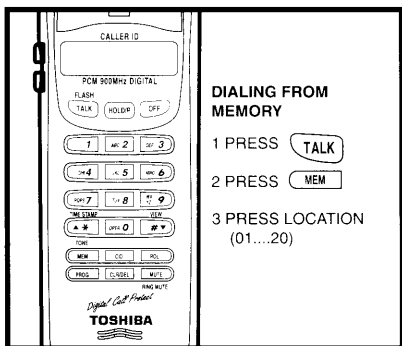

Or

- 1 Beginning from standby mode, press **MEM** followed by a 2 digit location number (01-20).
- 2 Press **MEM** again to exit mem mode and leave the number on the display or press **TALK** to dial out.

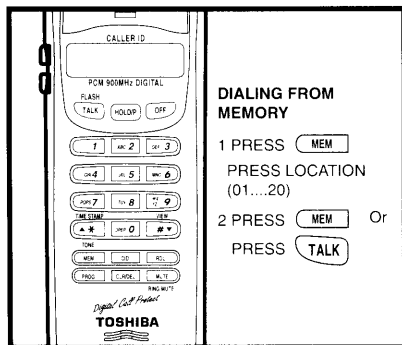

Note that if digits were on the display prior to entering mem mode, the contents of the speed dial memory will be appended to those digits. For example, if **1503** was on the LCD and the contents of the memory location is 6438981, then the display would show the following upon exiting mem mode:



Press **TALK**, the number on the display will be dialed after a 2 second pause.

NOTE:

The ability to temporarily add memory contents to digits already entered on the display operates in the same way for CID and speed dial memories.

In this way, long distance and area codes (for example, **1503**) can be entered on the LCD and can preface numbers recalled from CID memory before dialing. This is important because only the last 7 digits of any number are displayed when dialing from CID memory.

CHANGING STORED NUMBERS

To change or replace a stored number simply enter the new number on the display and store it in the memory location you wish to change.

DELETING INDIVIDUAL MEMORY

- 1 Press **MEM**. The display will change to "SPEED DIAL LOCATION _".
- 2 Enter memory location number (01-20).
- 3 Hit **CLR/DEL** key once. The display will change to "LOCATION XX DELETED".

LOCATION XX
DELETED

- Press **OFF** to finish.

NOTE:

Stored numbers are retained in memory even if the base loses its power or the handset battery is removed.

DELETING ALL MEMORY

1. Press **MEM**. The display will change to " SPEED DIAL LOCATION --"
2. Enter any memory location number (01-20)
3. Press and hold the **CLR/DEL** key for more than 1 seconds to delete the entire contents of memory. The display will show the following, for a final confirmation, before the entire memory is erased:

DELETE ALL?
DEL TO ALLOW

- 4 Pressing any key other than **CLR/DEL** will cancel the operation. Pressing **CLR/DEL** will confirm the operation and the display will then show:

DELETING ALL
LOCATIONS

STORING SPECIAL CODES

To insert a pause in a phone number, press **HOLD/P** at the appropriate point when entering the number on the LCD. This inserts a 1.5 second pause. A "p" appears in the display to show the pause. For longer pauses, press **HOLD/P** two or more times. Each press makes the pause 1.5 seconds longer and is treated as a stored digit.

If your phone is connected to a PBX you can store the PBX access number and a pause before the phone number. For example, to store 9-P-555-1234 in memory location 08, do the following:

1. Press **9**
2. Press **HOLD/P**
3. Dial 5551234
4. Press **PROG**
5. Enter 08

10 CALLER ID (CID)

CALLER ID (CID)

Your FT-H986 cordless phone has an additional feature in that it can display both the name and the number of the person calling before you answer the phone.

The unit is designed to store and display specific information provided by your local telephone company to subscribers of the "Caller Information and Identification Service" (CID). When CID service is active, your telephone company transmits to you certain information between the first and second rings of each call. This information includes the telephone number and name of the caller, as well as the date and time of the call.

This information is immediately displayed on the unit's LCD screen, enabling you to identify the calling party without having to answer the call. Simultaneously, this information is stored in memory for review at a later time.

NOTE:

You must be in an area where CID service is available and you must subscribe to it to use this feature.

If you do not subscribe to the CID service, the phone will still operate normally except that the CID information is not received or displayed.

RECEIVING AND STORING CALLS

This unit receives and displays all CID information, the caller's telephone number, the caller's name and the exact date and time of the call.

The phone sequentially numbers these call records and retains them in the unit's CID memory for later review. These call record numbers are displayed as the first two digits in the display. The unit can store up to 50 numbers in its memory.

Note, once the unit's memory is full, any new call forces a deletion of the oldest call record.


DIALING FROM CALLER ID MEMORY (LOCAL CALLS ONLY)

To dial a CID memory location, do the following :

1. To dial a **(CID)**.
2. Using the **(▲*)** and **(#▼)** key, scroll through the received calls to locate the number you wish to dial.
3. Press **(TALK)**. The number stored in that location will be displayed and immediately dialed.

NOTE :


When calling a number using the Caller ID list, only the last seven digits are dialed.

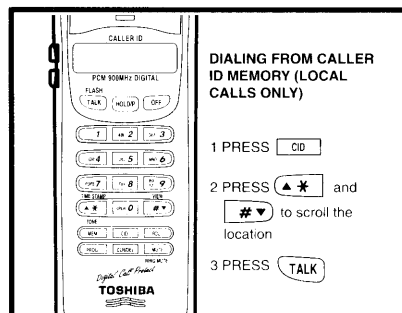



CALLING FROM CALLER ID MEMORY (LONG DISTANCE CALL)

If you need to temporarily add a long distance and/or area code (such as 1503) before the CID number, do the following:

1. With the phone OFF, key in the necessary digits.

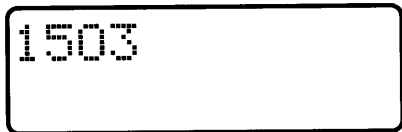


2. Press **CID**.
3. Using the **▲ *** and **# ▼** keys, scroll through the received calls to locate the number you wish to dial.
4. Press **TALK**. The whole number shown below will be automatically dialed.

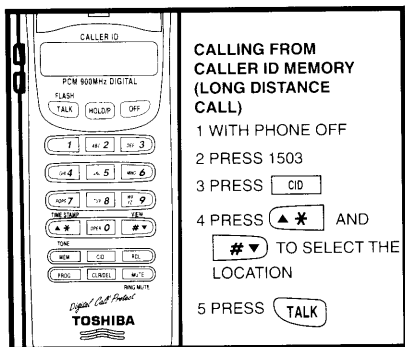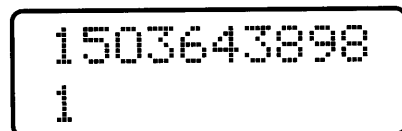


SPECIAL MESSAGE INDICATORS OUT OF AREA CALLS

If for any reason the telephone number of the caller is unavailable, or if the caller is outside the CID service area, the message UNAVAILABLE is displayed on the LCD.

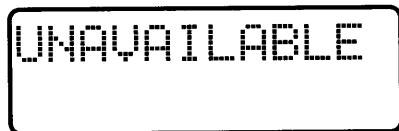


"PRIVATE" CALLS

If the caller has exercised the option to block his or her number from being sent, then the display will show PRIVATE.

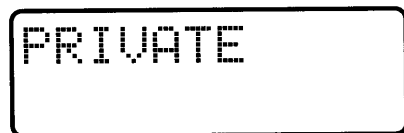

TRANSMISSION ERROR


If an error is detected then the CID information is incomplete and will not be displayed. "TRANSMISSION ERROR" will be displayed on the LCD screen.

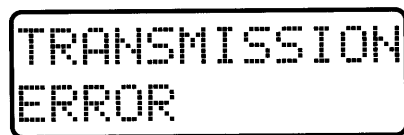



The occasional appearance of "TRANSMISSION ERROR" on your display does not indicate a problem with your unit or your telephone line. However, if this appears frequently, you may want to notify your local telephone service provider.

REVIEWING NUMBERS

Calls stored in memory can be reviewed by pressing **CID**. The display will show the number of the most recent call. The top line of the display is used to indicate the memory location number and the bottom line of the display shows the name, see below:

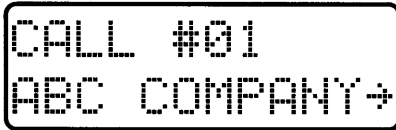


There may be additional characters in the name which cannot be shown on the current display. Press the **VIEW** key. This will overwrite the CID memory location on the top line to show up to a maximum of 15 alpha characters for the duration of the key press. The first 12 alpha characters will be on the top line with up to 3 additional characters on the second line.

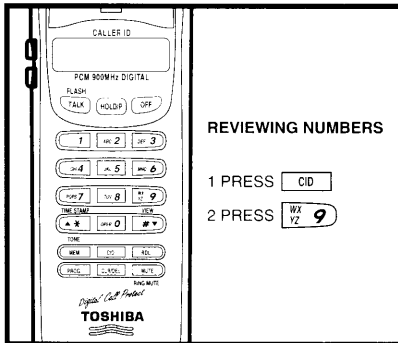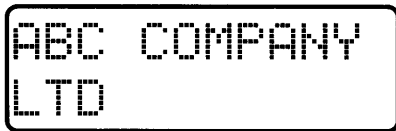

Once the view key is released, the display returns back to normal.

To find out the corresponding phone number as well as the date and time of the call, press and hold the **TIME STAMP** key. The date and time will be shown. Releasing the key will again show the caller's name.

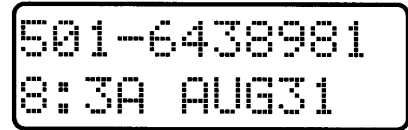

Pressing the **▲ *** key displays the next lower (older) call record. Likewise, pressing the **# ▼** key displays the more recent (and next-higher in sequence) call record from the currently displayed one.

To save your time in reviewing call records, you can "wrap-around" the call history log. For example, if you press the **▲ *** key enough to scroll back to the first record, pressing it again will force the display to go to the very end of the call record.


DELETING INDIVIDUAL NUMBERS

Pressing the **CLR/DEL** button deletes the CID number displayed.

- 1 While the phone is in CID mode, hit the **CLR/DEL** key once to delete the current call and the display will show:




- 2 The older CID number will be moved forward by one location .

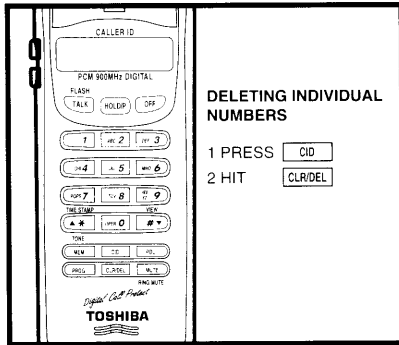

DELETING ALL CID


- 1 Press and hold the **CLR/DEL** key for more than 2 seconds to delete the entire contents of CID memory. The display will show the following, for a final confirmation, before the entire CID memory is erased:

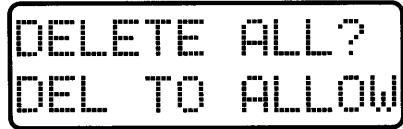

- 2 Pressing any key other than **CLR/DEL** will cancel the operation. Pressing **CLR/DEL** will confirm the operation and the display will then show:



- 3 The message will remain on the display for 2 seconds.

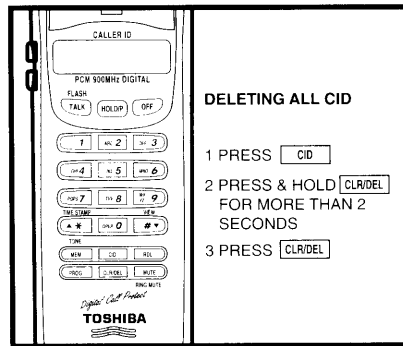

11 MAINTENANCE

TAKING CARE OF YOUR TELEPHONE

This cordless telephone contains sophisticated electronic parts so it must be treated with care.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install your base unit near a sink, bathtub or shower.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If your base unit should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL.** Then pull the unit out by the unplugged cords.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment.

For your own safety, use caution when using electric appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

12 OUT OF RANGE INDICATION

NOISE OR INTERFERENCE

Your FT-H986 cordless telephone has auto-channel scan circuitry which will detect excess noise and change the channel of the phone to reduce it. This is done automatically.

Since the FT-H986 is a fully digital phone, it does not suffer from noise associated with regular cordless phones. At times you may experience occasional "drop outs" especially at the extreme edges of the phone's range. Simply move closer to the base unit and this will disappear.

OUT OF RANGE INDICATION

If the handset is moved to a point where the base and handset can no longer communicate, the handset will make a quick series of beeps to signal Out of Range.

If the handset is active when taken out-of-range, it will beep twice a second and enter standby mode after 25 seconds if the link is not reestablished. If the handset is brought back within range, it will automatically re-link.

For out-of-range in standby mode, the handset will beep once and then at 15 second intervals, will display "**CHANNEL SEARCHING**" on the LCD, and scan all channels in an attempt to re-link with the base.



CHANNEL
SEARCHING . . .

OUT OF RANGE WHEN PHONE IS ON

If you are presently engaged in a phone conversation and the handset is moved to a point where the base and handset can no longer communicate, the handset will produce an 'out of range' indication.

You should move closer to the base to restore normal operation.

If the base unit does not communicate with the handset within 25 seconds of losing contact, it will automatically hang up.

OUT OF RANGE WHEN PHONE IS OFF

If the phone is **OFF**, the handset and base still monitor each other to make sure that they can communicate. If the handset is moved out of range, the handset will make a series of beeps, and will then display "**CHANNEL SEARCHING**" on the LCD. At 15 second intervals the handset will scan all channels in an attempt to reestablish communication with the base. This process does not require user intervention; the handset will re-link with the base automatically once it is brought back within range. The unit will then be able to receive and place calls.

When the base unit is unplugged from the power supply, the handset will give the "Out of Range" warning beep. Plug the base in again and this will stop.

NOTE:

Fully extended the handset antenna to keep maximum range.

13 IN CASE OF DIFFICULTY

If you have difficulty operating your phone, the suggestions below should solve the problem. If you still have difficulty after trying these suggestions, **call 1-800-631-3811**

THE PHONE DOESN'T WORK AT ALL.

- Make sure the Power Cord is plugged into a working jack.
- Make sure the telephone line cord is plugged firmly into the base unit and the telephone wall jack.
- Make sure the batteries are properly charged. If the 'LOW BATTERY' message is shown, the battery pack needs charging.

NO DIAL TONE.

- First check all the suggestions above.
- If you still don't hear a dial tone, disconnect the base unit from the telephone jack and connect a different phone. If there is no dial tone on that phone either, the problem is in your wiring or local service. Call your local telephone company.

YOU GET NOISE, STATIC, OR A WEAK SIGNAL EVEN WHEN YOU'RE NEAR THE BASE UNIT.

- Household appliances plugged into the same circuit as the base unit can sometimes cause interference. Try moving the appliance or the base unit to another outlet.
- Handset antenna is not fully extended.

YOU GET NOISE, STATIC, OR A WEAK SIGNAL WHEN YOU'RE AWAY FROM THE BASE UNIT.

- You may be out of range. Either move close to the base, or relocate the base unit.
- The layout of your home may be limiting the range. Try moving the base unit to another position.

THE HANDSET DOES NOT RING WHEN YOU RECEIVE A CALL.

- Make sure you have the handset ringer activated. To set the ringer see page "PROGRAMMING THE RINGER" on page 20.
- Make sure the telephone line cord is plugged firmly into the base unit and the telephone jack. Make sure the power cord is plugged in.
- You may be too far from the base unit.
- You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones.

YOU HEAR OTHER CALLS WHILE USING YOUR PHONE.

- Disconnect your base unit from the telephone jack, and plug in a regular telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local telephone company.

YOU HEAR NOISE IN THE HANDSET, AND NONE OF THE KEYS OR BUTTONS WORK.

- Make sure the power cord is plugged in.

COMMON CURE FOR ELECTRONIC EQUIPMENT

Electronics, like people, can sometimes get confused. If the unit does not seem to be responding normally, then try putting the handset in the cradle. If it does not seem to respond after trying this a few times, do the following (in the order listed):

1. Disconnect the power to the base.
2. Disconnect the handset battery.
3. Wait a few minutes.
4. Connect power to the base.
5. Connect the handset battery.
6. Put the handset in the base.

14 SPECIFICATIONS

FREQUENCY CONTROL

Crystal Controlled Dual PLL Synthesizer

TRANSMIT FREQUENCY

Handset : 925.05 MHz to 927.75 MHz
(All ten channels within this range)

Base : 902.3 MHz to 905.0 MHz
(All ten channels within this range)

RECEIVE FREQUENCY

Handset : 902.3 MHz to 905.0 MHz
(All ten channels within this range)

Base : 925.05 MHz to 927.75MHz
(All ten channels within this range)

NOMINAL EFFECTIVE RANGE

Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.

SIZE

Handset : 188 x 62 x 35mm

Base : 210 x 145 x 48mm

WEIGHT

Handset : 282g

Base : 428g

POWER REQUIREMENTS

Handset : Self-contained nickel-cadmium rechargeable battery supply, 3.6V nominal, 600mAh capacity.

Base: 9VDC @ 300mA

MEMORY

Speed Dial:20 Memory locations, 20 digits per location.

CID : Alpha Numeric Display 50 Memory locations

SPECIFICATIONS ARE TYPICAL AND MAY CHANGE WITHOUT NOTICE.

PARTS INCLUDES

Rechargeable Battery Pack
(1)TRB-9100 (Part #. RC006495)

Wall Mount Bracket
(1)Part #. RC005936

Telephone Cord (6 ft long)
(1) Part #. RC005985

Owner's Manual
(1) Part #. RC006225

Speed Dial Index
(2) Part #. RC006561

Wall Mount Screw
(2) Part #. RC005735

Screw Cap.
(2) Part #. RC005935

AC Adaptor
(1) TAC-9100BK (Part #. RC006606)

For purchase of
Accessories, please
call **1-800-631-3811.**

15 WARRANTY / SERVICE

SERVICE REQUIREMENTS

If the cordless telephone should malfunction, all repairs will be performed by an authorized Toshiba Service Station. This unit has been registered within the FCC for direct connection to the telephone network. Under the FCC program, no customer is authorized to repair this unit. This applies to a unit both in and out of warranty. If an unauthorized repair is performed, the registration of the unit for direct connection to the network will be null and void. If the unit is still in warranty, the remainder of the warranty period will also be null and void.

It is the responsibility of users requiring service to report the need for service to their Toshiba dealer.

IMPORTANT INSTRUCTIONS TO USERS

Your FT-H986 has been designed and constructed to conform to federal regulations and can be connected to the phone line as described in this manual.

Please note that each product connected to the telephone line places a certain load on the line. We designate this as the unit's "Ringer Equivalence Number."

The ringer equivalence (REN) is used to determine how many devices can be connected to your telephone line. In most areas, the sum of the RENs of all devices on any one line should not exceed five (5.0) . If too many devices are attached, they may not ring properly.

It is most unlikely, but . . . If your FT-H986 should cause problems on the phone line, the phone company has the right to temporarily discontinue your service. If this happens, the phone company will notify you and give you the opportunity to correct the problem. Also, you need to know that the phone company does have the right to make changes in their lines and/or equipment.

If these changes might affect your FT-H986 (or require changes in the FT-H986 or its connection), the phone company will notify you in writing, so you have the chance to take whatever action necessary to ensure uninterrupted phone service.

FCC REQUIREMENTS

Your FT-H986 complies with Part 68 of the FCC rules. You are no longer required by the FCC to notify your local telephone company of your intent to connect a new telephone. Your local telephone company may call you and request information about your phone such as: the brand name, model number, registration number, and ringer equivalence number. This information is provided on a label located at the bottom of the base unit and handset.

You may not directly connect your FT-H986 to coin telephone services. Check with your local telephone company if you wish to connect your FT-H986 to a party line service. Some party line services require a special adaptor or modification to your FT-H986 telephone.

TELEPHONE/900MHz LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty of Labor and Parts

TACP/THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP/THI will repair or replace your defective product with a new or refurbished unit at our option. For those products purchased within the Continental U.S.A. from a TACP Authorized Dealer or you may forward your product for exchange to:

Toshiba America Consumer
Products, Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087

You are responsible for transportation and insurance charges for the product to the Returns Center. Products shipped to the Return Center must be insured and safely and securely packed, preferably in the original shipping carton, and a letter explaining the defect and also a copy of the bill of sale or other proof of purchase must be enclosed.

Upon receipt we will, at our option, exchange the unit with a new or refurbished unit.

Owner's Manual

you should read the owner's manual thoroughly before operating this product.

Your Responsibility

The above warranties are subject to the following conditions.

1. You must retain your bill of sale or provide other proof of purchase.
2. These warranties are effective only if the product is purchased and operated within the U.S.A. or Puerto Rico.
3. Within the Continental U.S.A., if you should find a defective product within the warranty period forward to:
Toshiba America Consumer
Products, Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087
4. After the warranty period has expired in the U.S.A. only call 1-800-631-3811 to receive information concerning an exchange price. Payment must be enclosed with product in the form of a certified check or money order and forward your product to:

Toshiba America Consumer
Products, Inc.
Returns Center
1420C Toshiba Dr.
Lebanon, TN 37087

5. Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, damage caused by Acts of God, such as lightning or fluctuations in electric power, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.
6. Physically damaged product are not acceptable for repair or exchange within or after the warranty period expires and will be returned as received.

How to Obtain Warranty Service

In the event a problem should develop with your product, please proceed as follows:

<p>In The Continental United States contact:</p>  <p>Toll Free 1-800-631-3811</p>	<p>In Hawaii contact:</p> <p>Toshiba Hawaii 327 Kamakee Street, Honolulu, HA 96814 (808)-521-5377</p>
---	---

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties

set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall TACP/THI be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of TACP/THI arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to ninety (90) days from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law.


This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

IMPORTANT: PACKING AND SHIPPING INSTRUCTION

When you send the product to a Service Station, you should use the original carton box and packing material, then insert the original carton box containing the unite into another carton, using more packing material.

IMPORTANT: PACKING SHIPPING INSTRUCTIONS

When you send the product to a service center, you should use the original carton box and packing material, then insert the original carton box containing the unit into another carton, using more packing material.

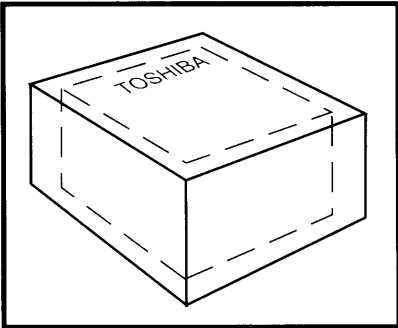

ALL WARRANTIES IMPLIED BY STATE LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. **WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY STATE LAW AS HEREBY LIMITED, THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS AND SIMILAR OBLIGATIONS OF MANUFACTURER OR SELLER WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PARTS.**

IN NO EVENT SHALL TACP OR THI BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

WALL INSTALLATION USING MOUNTING SCREWS PROVIDED

Tools You Will Need: A hammer, a nail, a pencil or ballpoint pen, a Phillips head (+) screwdriver, and the Wall Mounting Template included in the back of this booklet.

1. Choose a spot near an electrical outlet and a telephone jack.

Your phone requires a modular telephone jack and a standard electrical outlet (120V AC). The power cord is six feet long; make sure there is an electrical outlet within reach of the base. The outlet should not be controlled by a wall switch. If the switch is ever turned off, the phone will not operate.

2. Choose and mark the mounting position.

The mounting screws should screw into a wooden stud within the wall they will not hold securely in wallboard alone. Locate a wall stud in the area where you want to install your telephone. Use the Wall Mounting Template and a pencil to mark the screw positions on the wall over the stud (Figure 1). Put the template aside.

3. Install the mounting sleeves and screws.

Start the screw holes by lightly tapping a nail into the marks you made on the wall. Remove the nail from the wall. Now slip the mounting sleeves onto the screws as shown, with the smaller end of

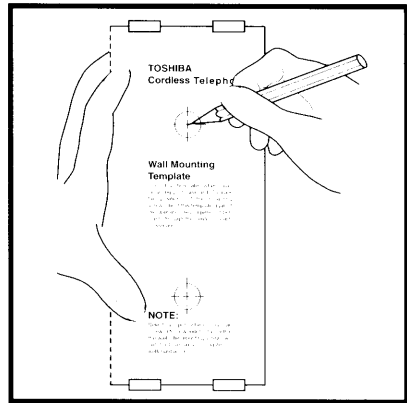


Figure 1

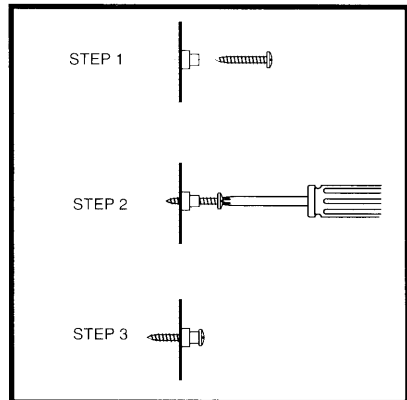


Figure 2

the sleeve toward the screw head. Insert the screws into the holes you started. Tighten the screws until the larger end of the mounting sleeve is flat against the wall (Figure 2).

The RBRC™ Seal

The RBRC™ Seal on the (easily removable) nickel-cadmium battery (contained in our product) indicates that Toshiba America Consumer Products, Inc. (TACP) is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States. The RBRC™ program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste, which is illegal in some areas.


TACP's payments to RBRC™ make it easy for you to drop off the spent battery at local retailers of replacement nickel-cadmium batteries, or at authorized TACP product service centers. You may also contact your local recycling center for information on where to return the spent battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. TACP's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Remove the nickel-cadmium battery pack by pressing on the lock knob and sliding downward as mentioned on page 12 of this manual.




RBRC™ is a trademark of Rechargeable Battery Recycling Corporation.

TOSHIBA Cordless Telephone

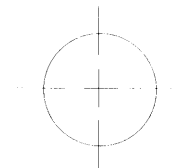

Wall Mounting Template

Use this template when wall mounting your base unit. To mark the positions of the mounting screws, hold this template against the wall, and press a pencil or pen point through the center of each crossmark.

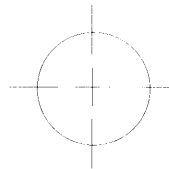

NOTE:

Select a spot where you can screw into a wooden stud within the wall. The mounting screws will not hold securely in plaster or wallboard alone.

For technical assistance, purchase of accessories or service,
please call 1-800-631-3811

IMPORTANT

We suggest you record the following information and retain for your records along with your bill of sale or equivalent document.

Model no. _____ Serial no. _____
Purchase date _____ Dealer _____
Dealer address _____

©1996 TOSHIBA AMERICA CONSUMER PRODUCTS, INC.