

For US/Canada only

IMPORTANT SAFETY INSTRUCTIONS - Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

EL 6475-E004: 02/8

Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or \pm) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontaktten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

Deutschland

Hiermit wird bescheinigt, daß dieses Gerät in Übereinstimmung mit den Bestimmungen der Amtsblattverfügung 1046/1984 funkenstört ist. Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Class II equipment symbol



This symbol indicates that the unit has a double insulation system.

PHILIPS



Tested To Comply
With FCC Standards

FOR HOME OR OFFICE USE

MMS 223 / 17

Philips Consumer Electronics North America
One Philips Drive, P.O. Box 14810, Knoxville, TN 37914-1810
Phone: 1-800-531-0039

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.



PHILIPS



PHILIPS

Multimedia Speaker System

This Quick Set-up Guide is applicable for :

➤ MMS 223




MMS 223

MMS 223

Convenient FM radio and multimedia speaker in one!

The MMS 223 is ideal for consumers who demand dependable PC audio output for games, music CD's, MP3 or other entertainment, and want the convenience of an FM radio built in. Designed by Philips, the leader in innovative and quality sound solutions, these speakers do not only reproduce excellent sound, but also are fun to operate and great to look at.

Installation

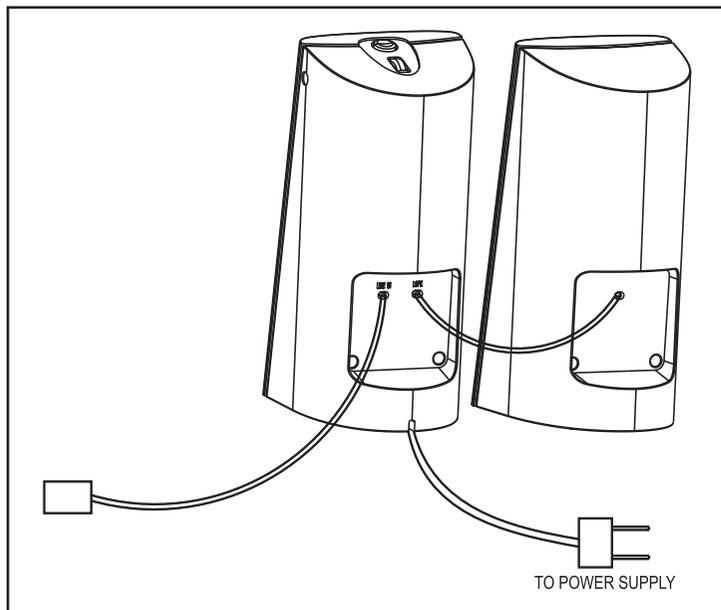

English

- 1 Connect soundcard.
- 2 Connect the power supply.
- 3 Tune the system using sound card/sound source and speaker controls.

Note: Do not insert the power plug into the AC outlet until all connections are made!

Français

- 1 Connectez la carte sonore.
- 2 Branchez l'alimentation.
- 3 Accordez le système à l'aide de la carte sonore/source sonore et des commandes des enceintes.

Note: N'introduisez pas la fiche d'alimentation dans la prise CA tant que tous les branchements ne sont pas effectués!

Swedish

- 1 Anslut ljudkortet.
- 2 Anslut strömförsörjningen.
- 3 Ställ in systemet med hjälp av ljudkort/ljudkälla och högtalarkontroller.

Obs: Anslut inte nätkontakten till nätuttaget förrän alla anslutningar har gjorts!

Danish

- 1 Tilslut lyd kort.
- 2 Tilslut strømforsyning.
- 3 Indstil systemet ved hjælp af lyd kort/lydkilde og højttalerreguleringen.

Bemærk: Sæt ikke stikket i kontakten til elnettet før alt er tilsluttet!

中文



連接聲卡
連接電源
利用聲卡/聲源及揚聲控制調校系統

注意: 除非所有接線都連接妥當, 否則勿勿AC電源線連接上

Portuguese

- 1 Ligue a placa de som.
- 2 Ligue a alimentação eléctrica.
- 3 Ajuste o sistema utilizando a placa de som/fonte de som e controlos das colunas.

Note: Não introduza a ficha eléctrica na tomada antes de fazer todas as ligações!

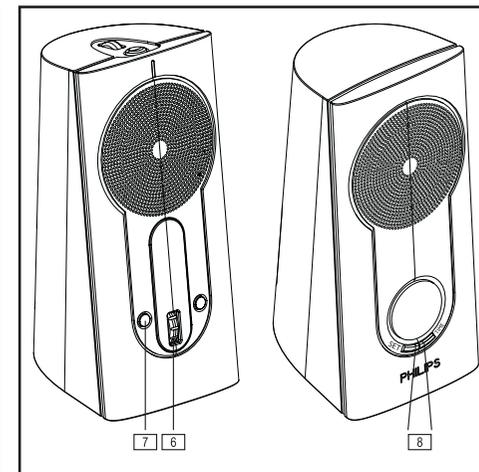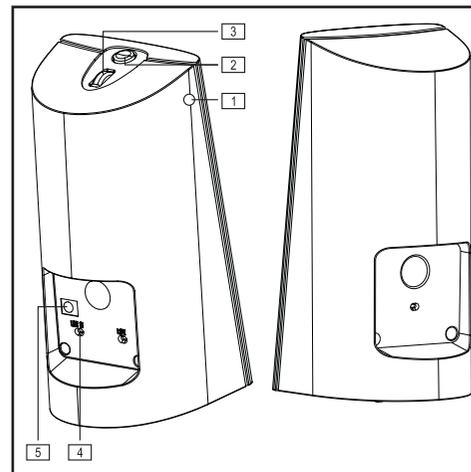

~ EXPLANATION ~

- 1) Headphone**
For private listening a headphone can be connected
- 2) Power ON/OFF**
To switch on or off power
- 3) Rotary Volume Control**
To adjust the volume higher or lower
- 4) Line In**
To connect the fixed Line In cable to the soundcard/ sound source

- 5) Power**
To connect to power supply
- 6) Radio Turner**
Change the FM wavelength using the rotary controller
- 7) Radio ON/OFF**
To turn just the radio on or off
- 8) Set Time Button**
To set the time on the clock (see below)

Deutsch

- 1 Schließen Sie die Soundkarte an.
- 2 Schließen Sie das Netzteil an.
- 3 Stellen Sie das System mit Hilfe der Soundkarte oder einer anderen Klangquelle und den Bedienungselementen der Lautsprecher ein.

Hinweis: Den Netzstecker nicht in die Steckdose stecken, bis alle Verbindungen hergestellt worden sind!

Italiano

- 1 Collegare la scheda audio.
- 2 Collegare l'alimentazione.
- 3 Sintonizzare il sistema utilizzando la scheda audio/ sorgente e i comandi delle casse acustiche.

Nota: Non inserire il connettore di alimentazione nella presa di rete in c.a. prima di avere completato tutti i collegamenti!

Turkish

- 1 Ses kartını bağlayınız.
- 2 Güç kaynağını takınız.
- 3 Ses kartı/ses kaynağı ve hoparlör kontrolerini kullanarak sistemi ayarlayınız.

Not: Bütün bağlantıları yapmadan elektrik fişini AC çukubına takmayınız!

Nederlands

- 1 Sluit de geluidskaart aan.
- 2 Sluit de voeding aan.
- 3 Stel het systeem in met de regelars voor de geluidskaart/ geluidsbron en de luidsprekers.

Opmerking: Steek de stekker van het netsnoer pas in het stopcontact als alle aansluitingen gereed zijn!

Russian

- 1 Подсоедините звуковую карту.
- 2 Подсоедините источник питания.
- 3 Настройте систему при помощи звуковой карты/источника звука и органов управления акустической системой.

Примечание: Не подсоединяйте вилку сетевого шнура к розетке сети, пока не будут полностью выполнены все необходимые соединения!

Finnish

- 1 Yhdistä äänikortti.
- 2 Kytke virta.
- 3 Virittä järjestelmä äänikortin, äänilähteen ja kaiuttimien säätimillä.

Huom: Älä yhdistä pistotulppaa pistorasiaan, ennen kuin kaikki kytkennät ovat valmiit!

Español

- 1 Conecte la tarjeta de sonido.
- 2 Conecte el suministro de alimentación.
- 3 Ajuste el sistema con los controles del altavoz y de la tarjeta/fuente de sonido.

Observación: No inserte el conector de alimentación en la toma de corriente mientras no haya completado todas las conexiones.

Polish

- 1 Przyłączyć kartę dźwiękową
- 2 Włączyć do sieci
- 3 Dostosować za pomocą karty dźwiękowej, układu doboru źródła sygnału oraz ustawiania barwy i siły dźwięku


Uwaga: Nie włączaj wtyczki zasilania do gniazda sieciowego przed dokonaniem wszystkich połączeń!

Norwegian

- 1 Kople til lyd kortet.
- 2 Kople til strømforsyningen.
- 3 Finjuster systemet ved å regulere innstillingene for lyd kortet/lydkilden og høyttalerne.

Merk: Ikke sett støpselet i en stikkontakt for alle tilkoplingene er gjort!

Diagram of the clock and the setting button

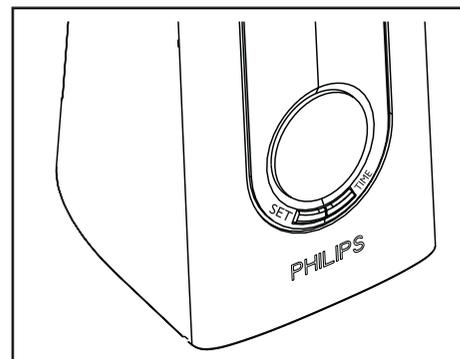

English

To set the clock:-

- 1 Press "set time" button for less than 1 second to advance the minute hand.
- 2 Press and hold "set time" button for more than 1 second to advance time setting.

French

Pour régler l'horloge

- 1 Appuyez sur la touche "set time" (réglage heure) pendant moins d'1 seconde pour régler les minutes.
- 2 Appuyez sur la touche "set time" et maintenez-la enfoncée pendant plus d'1 seconde pour régler les heures.

German

Zum Einstellen der Uhr

- 1 Die Taste "set time" (Uhrzeit einstellen) weniger als 1 Sekunde drücken, um die Minuten einzustellen.
- 2 Die Taste "set time" (Uhrzeit einstellen) länger als 1 Sekunde gedrückt halten, um die Stunden einzustellen.

Italiano

Per impostare l'orologio

- 1 Premere il pulsante "set time" (imposta ora) per meno di 1 secondo per fare avanzare la lancetta dei minuti
- 2 Tenere premuto il pulsante "set time" per più di 1 secondo per fare avanzare l'impostazione dell'ora.

Nederlands

De klok instellen

- 1 Druk kort op de knop "set time" om de minuten gelijk te zetten.
- 2 Houd de knop "set time" langer dan 1 seconde ingedrukt om de uren gelijk te zetten.

Español

Para poner en hora el reloj

- 1 Pulse el botón de puesta en hora menos de 1 segundo para avanzar minuto a minuto
- 2 Mantenga pulsado el botón de puesta en hora durante más de 1 segundo para avanzar de forma continua.