


## Remote Control Operation Guide

Model No. **EUR7722KM0**

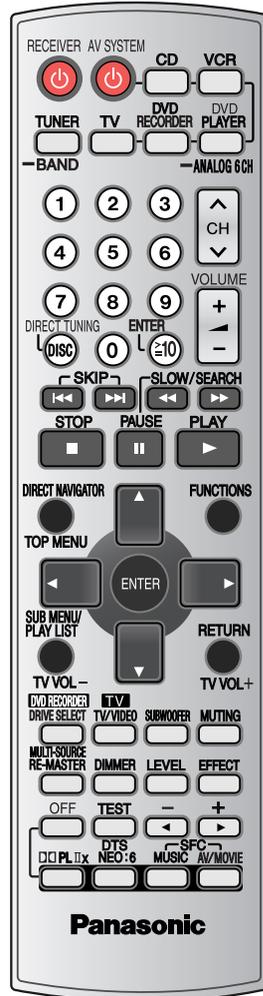

Welcome to the world of Home Theater.

This remote control is the key to your home theater experience.

RECEIVER



 
**First,  
turn on the receiver.**

**Now, you can operate  
other Home Theater  
components.**

You may need to enter  
a code to operate  
some equipment.



**CODES**  
➔ Page 6

 <p><b>TV</b> ➔ Page 2</p>	 <p><b>VCR</b> ➔ Page 4</p>
 <p><b>DVD PLAYER</b> ➔ Page 2</p>	 <p><b>CD PLAYER</b> ➔ Page 4</p>
 <p><b>DVD RECORDER</b> ➔ Page 3</p>	 <p><b>RECEIVER</b> ➔ Page 5</p>

Actual operations depend on your equipment and software.

Be sure to read the instructions for the receiver and your other components.




# TV



# DVD PLAYER


## Watching TV

### Switch on

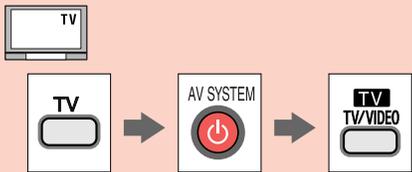


Switch on the television and select input


### Switch off

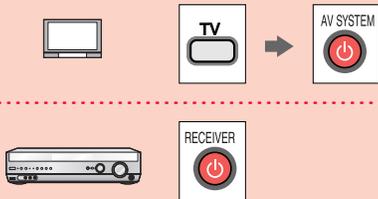

## Operating the TV

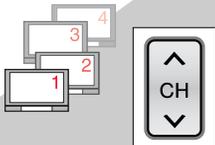

Change the channels sequentially

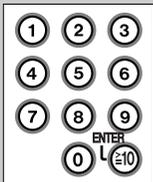

Select the channel directly




Adjust the volume



## Watching DVDs


### Switch on

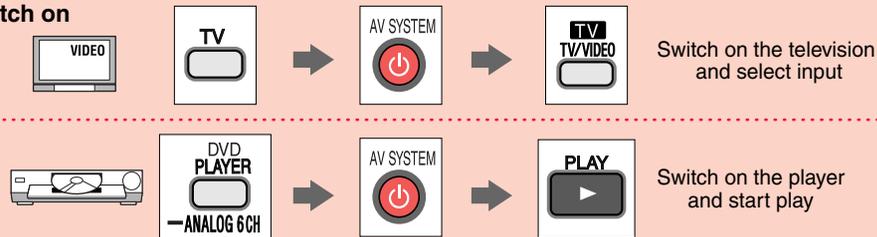


Switch on the television and select input

Switch on the player and start play

### Switch off

 

## Operating the DVD player

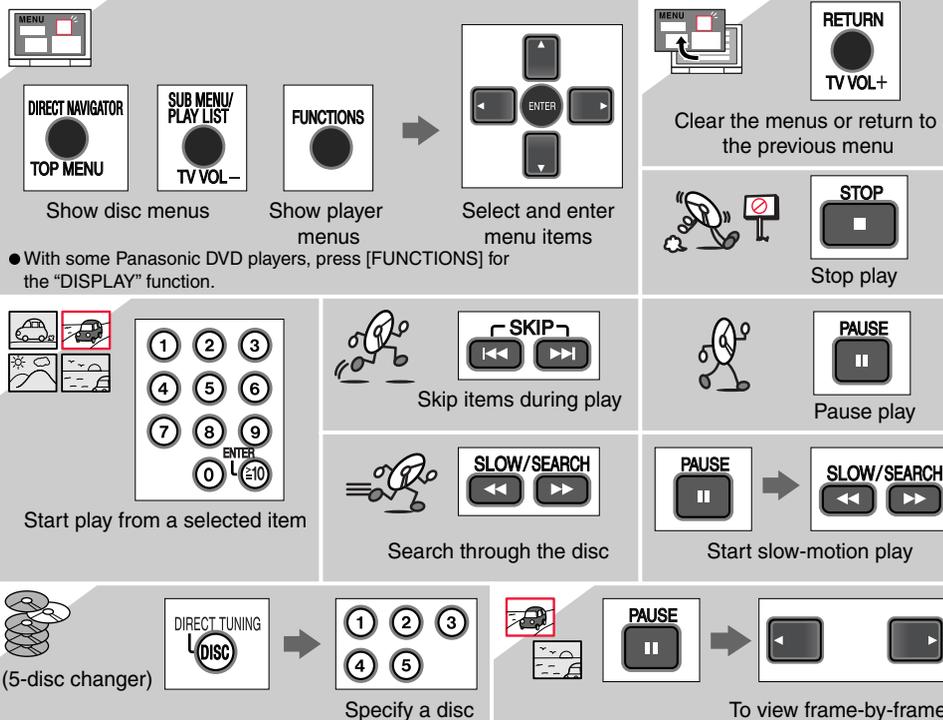




# DVD RECORDER

## Watching DVDs

### Switch on


 
### Switch off



## Operating the DVD recorder

**MENU**

**DIRECT NAVIGATOR**  
TOP MENU

**SUB MENU/PLAY LIST**  
TV VOL-

**FUNCTIONS**

→

↑  
ENTER  
↓

←

**RETURN**  
TV VOL+

Clear the menus or return to the previous menu

**STOP**

Stop play

**SKIP**

Skip items during play

**PAUSE**

Pause play

**PAUSE** → **SLOW/SEARCH**


Start slow-motion play

**1 2 3**  
**4 5 6**  
**7 8 9**  
ENTER L E10

Start play from a selected item

**PAUSE** → **←** **→**

To view frame-by-frame

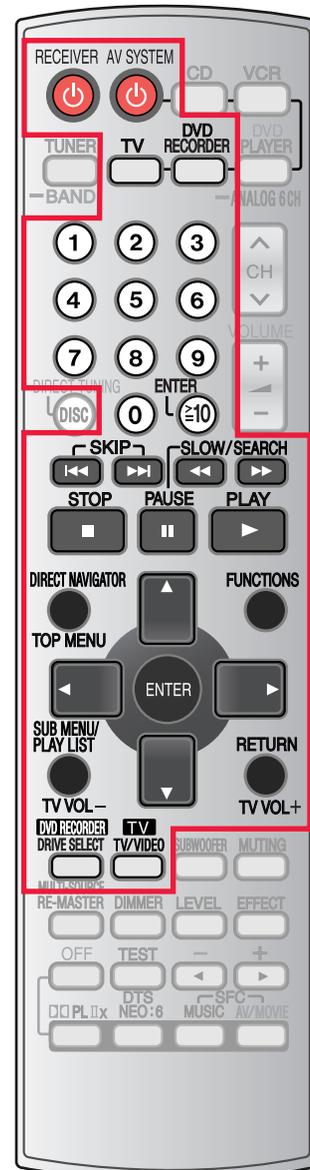

## Operating the DVD recorder



### If it does not change

After performing the following operations, press this button again.

1. Press [DVD RECORDER].
2. While pressing [ENTER], press and hold [8] for approximately 2 seconds.

### To return

In step 2 above, while pressing [ENTER], press and hold [9] for approximately 2 seconds.

The factory setting is [9].

### When using a Panasonic DVD recorder

Change the unit's remote control code to match the remote control code of the DVD recorder.

Preparations: Check the remote control code of the DVD recorder.

For about one second press [ENTER] and the button ([1], [2] or [3]) which is the same number as the remote control code set by the DVD recorder.

The factory setting is [1].



# VCR

## Watching videotapes

### Switch on




Switch on the television and select input




Switch on the player and start play

### Switch off

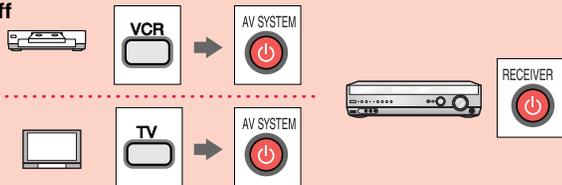

## Operating the video deck

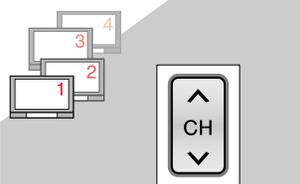

Change the channels sequentially



Select the channel directly



Stop play



Pause play



Rewind or fast-forward



# CD PLAYER

## Listening to CDs

### Switch on




Switch on the player and start play

### Switch off




## Operating the CD player

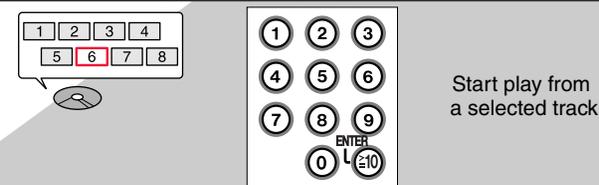

Start play from a selected track



Specify a disc [3- or 5-disc changer]

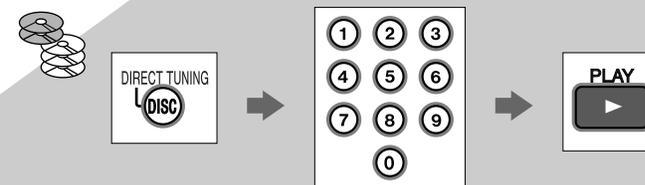

Start play from a specified disc [MEGA CD changer] (holds more than 50 discs)



Stop play



Skip tracks during play



Pause play



(Press and hold) Search through the disc





# RECEIVER

## Listening to the radio

 


Select FM or AM  
(Press and hold)

### Switch off




## Operating the radio



Change the preset  
channels sequentially




Select the preset channel directly

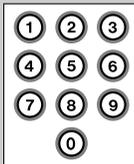

Select radio stations by frequency

## DOLBY PRO LOGIC IIx MODE

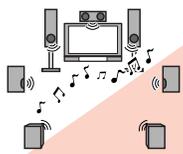

Select MOVIE (DOLBY EX), MUSIC or  
GAME when Dolby Pro Logic IIx mode  
or Dolby Pro Logic II mode is on



To cancel



When you select MUSIC



Change  
the sound effect

## DTS NEO:6 MODE



Select a DTS NEO:6 mode:  
CINEMA or MUSIC



To cancel




When you select MUSIC



Change  
the sound effect

## SFC MODE

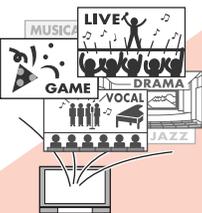

Select an SFC mode



To cancel



Select the speaker channel  
and adjust its output level



Change the sound effect



## Adjusting speaker channel balance

Start a test signal



Select the speaker  
channel and adjust  
its output level



Stop the test signal



## Other functions



To mute the volume



To adjust the volume



To select  
DVD ANALOG 6CH



(Press and hold)

To adjust subwoofer  
output level



Dim the display



For selecting  
a re-master mode




# CODES

This remote control can operate Panasonic and Technics audio-visual equipment that has remote control sensors. You may need to change the remote control code.

It can also operate some other brands of televisions, video cassette players, and DVD players. Check the table for the brand and enter the code as follows.

## Changing the codes

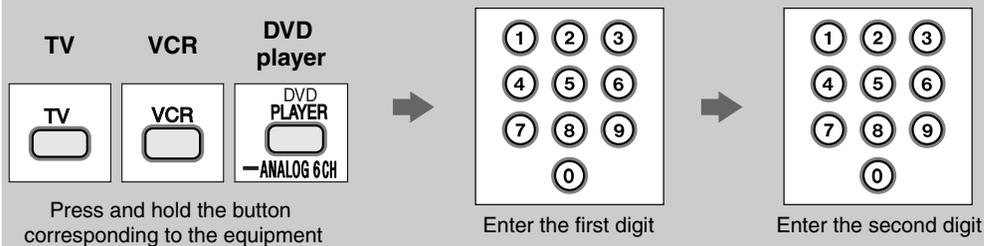

The remote control outputs the on/off signal. If the code is correct, the equipment turns on or off. If it doesn't, try entering another code.

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Re-enter the codes after you change the batteries.

## Code table

	TV	VCR	DVD player
Panasonic	01/02/26	01/02/09/33	01/40
Denon	–	–	01/17
Ferguson	–	–	02
Fisher	14	13/14/15/18/34	–
Funai	–	08/30	–
G.E.	02/03/07/09	02/03/11	–
GoldStar	07/15	27	–
Go-Video	–	–	12
Hitachi	05/07	09/10/11	11
JVC	12	19/25/31/38/39/40	09
Kenwood	–	–	15
LXI	03/06/07/10/14/15	10/13/14/15/18/27/30	–

	TV	VCR	DVD player
Magnavox	06/07/11/15/22	02/09/12	–
Mitsubishi	07/15/16/21	21/22/28/29	06
NEC	07/15	19/25/31/38	–
Nordmende	–	–	02
Philco	06/07	02/09/12/30	–
Philips	06	02/09/12	04/16
Pioneer	02/10/19	09	03
Polkaudio	–	–	16
Quasar	02	01/02/09/33	–
Raite	–	–	13
RCA	03/07/09/13/23/24/25	02/03/04/09/10/11/12/23/24/26	02
Saba	–	–	02

	TV	VCR	DVD player
Sampo	–	–	14
Samsung	–	–	10
Sanyo	14	14/18/34	–
Sharp	08/21	16/17	08
Shintom	–	32	–
Sony	04	05/06/07/35/36/37	05
Sylvania	06/07/15	02/09/12/30	–
Symphonic	17	30	–
Technics	–	–	01
Thomson	–	–	02
Toshiba	10/21	23/24	04
Yamaha	–	–	01
Zenith	18/20	20	07/12