



SCH-V122 Quick reference card

Basic Operation

Make a call	Phone number +
End a call	or close the phone
Receive a call	or open the phone
Adjust keypad tone and function volume	(in Standby mode) / on the left side
Adjust the voice volume	(during a call) / on the left side
Redial the last call	twice or Hold .
Switch to Silent mode	(in Standby mode) Hold
Take a photo	Hold + + Enter a photo name +

Internal Phonebook

Store a new number into memory in Standby mode	Enter phone number + + select a category + + / (Name/Home/Mobile/Office/Other/FAX/E-mail/Group/Memo) + / to select an option or enter Information + + Yes +
Speed dial	One-Touch (001-009): Hold down the third digit. Two-Touch (010-099): Press the second digit briefly, then hold down the third digit. Three-Touch (100-999): Press the first two digits briefly, then hold down the third.