


# JLDV 09 Tumble Dryer

Instruction manual

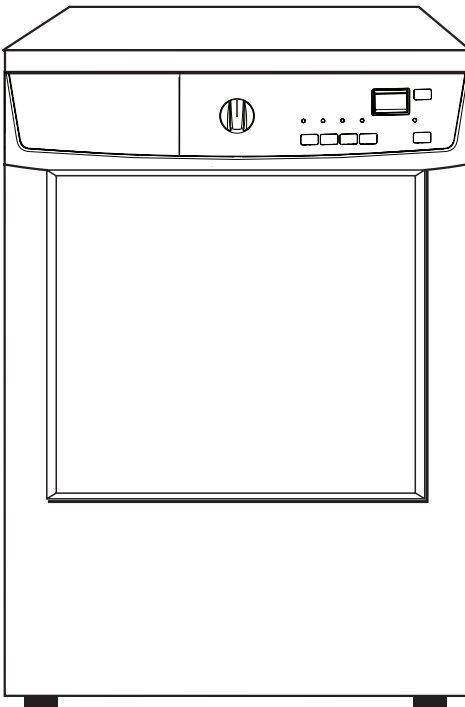

**John Lewis**



# Important safety information

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. If you are unsure of the meanings of these warnings contact the John Lewis branch from which you purchased the appliance.

---

**Important! In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**

---

- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items; cushions, quilts etc and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

## General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.

- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance



**Warning! Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire!**



**Warning! Risk of electric shock!**  
Do not spray down the appliance with jets of water.


- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- Ensure you have adequate ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable or/and inlet hose.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.



- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is not accessible.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
- **Caution - hot surface** : Do not touch the door light cover surface when the light is switched on.<sup>1)</sup>
-  **Hot surface:** Do not touch the back of the appliance while it is operating!

## Child safety

- This appliance is designed to be operated by adults.
- This machine is not intended for use by young children or infirm persons without supervision.
- Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

1) Only dryers equipped with internal drum light.

# Contents

<b>Important safety information</b>	2	<b>For the installer</b>	
<b>Product description</b>	7	<b>Technical data</b>	23
<b>Control Panel</b>	8	<b>Installation</b>	23
1. PROGRAMME KNOB	8	Appliance positioning	23
2. HALF POWER	8	Removing transport safety packaging	24
3. LONG ANTICREASE	8	Fitting the vent hose	24
4. ALARM	8	Changing door stop	26
5. TIME	8	Electrical connection	27
6. START / PAUSE BUTTON	9	Special accessories	29
7. FILTER LIGHT	9		
8. DELAY START	9		
9. DISPLAY	9		
<b>Before first use</b>	10		
<b>Sorting and preparing laundry</b>	10		
Sorting laundry	10		
Laundry weights	10		
<b>Programme chart</b>	11		
<b>Daily use</b>	14		
Switching machine on	14		
Door opening and laundry loading	14		
Selecting the programme	15		
Selecting additional functions	15		
Setting child lock	15		
Starting the programme	15		
Changing programme	15		
Drying cycle complete / removing laundry	16		
<b>Cleaning and maintenance</b>	17	<b>Guide to use the instruction manual</b>	
Cleaning fluff filter	17		
Cleaning the door	17		
Cleaning the drum	18	The following symbols will be found in the text to guide you throughout the instructions:	
Clean operating screen and housing	18		
<b>What to do if ...</b>	18		
Troubleshooting by yourself	18	 Safety instructions	
<b>Machine settings</b>	20	 Hints and tips	
ALARM SIGNAL permanent off	20		

Water hardness

20

**Environment**

20

Environmental tips

21


**Service**

22



Environmental information

# Product description

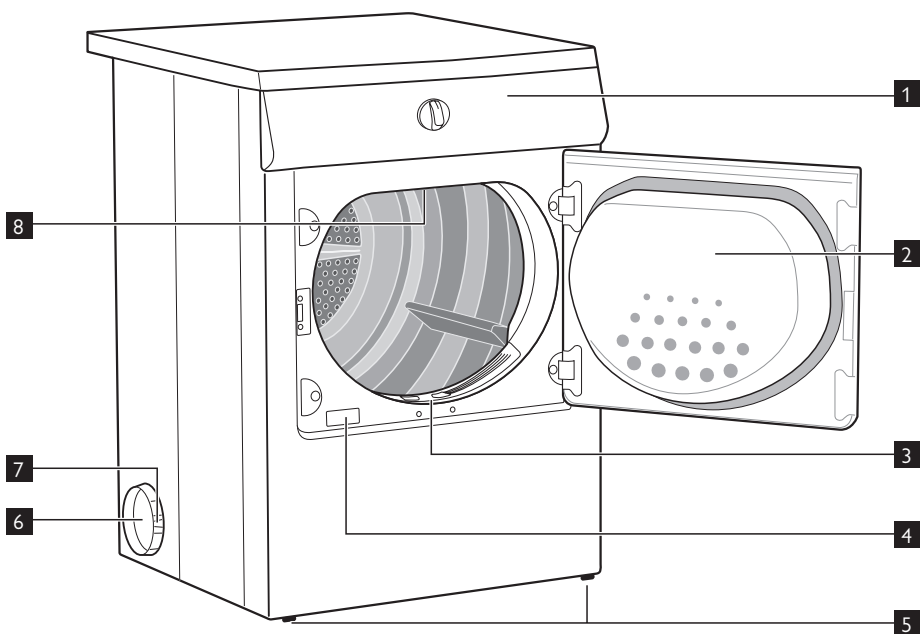

**1** Control panel

**2** Door

**3** Fluff filter

**4** Rating plate


**5** Adjustable feet

**6** Sideways vent outlets / back vent outlet

**7** Ring nut

**8** Lamp for inside light

# Control Panel

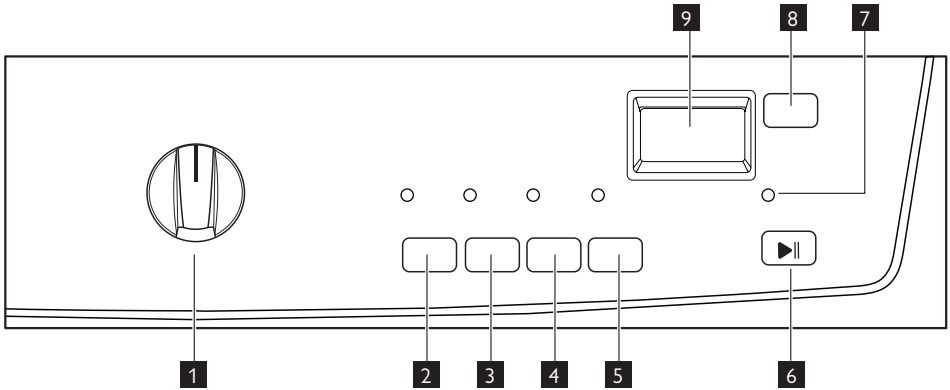

## 1. PROGRAMME KNOB

By operating the knob you can select the proper drying program or turn the appliance off.

## 2. HALF POWER

Pressing this button allows drying to be performed at a lower temperature, for delicate items. The corresponding pilot light comes on. This option can also be used for time controlled drying.

## 3. LONG ANTICREASE

A long anti-crease phase lengthen the anti-crease phase (30 min.) at the end of the drying additionally by 60 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. Phase lasts in total 90 minutes. The laundry can be removed at any time during the anti-crease phase.

When the option is active, the LONG ANTICREASE light is on.

## 4. ALARM

When the drying cycle has finished, an intermittent audible signal will sound. By depressing button ALARM the acoustic signal is switched off in the following cases:

- when selecting the programme
- when depressing the buttons
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme.

The corresponding light comes on.

## 5. TIME

Use the Time button to select the programme duration after setting the TIME programme. You can select a programme duration from 20 min. to 3 hours in 10-minute steps.

1. Turn the programme selector to the TIME programme.



2. Press the TIME button repeatedly until the desired programme duration is shown in the display, e.g. **0 . 2 0** for a programme of 20 minutes.

If the programme duration is not selected, the duration is automatically set to 10 mins.

## 6. START / PAUSE BUTTON

With the START PAUSE button you can start or pause the drying program.

## 7. FILTER LIGHT

The warning light FILTER is on after every drying cycle to remind you about filter cleaning.

## 8. DELAY START


**i** With the DELAY START button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 20 hours (20h).

1. Select the programme and additional functions.
2. Press the DELAY START button as many times as necessary until the required time of the delay appears on the display, e.g. **1 2 H** if the programme is to be started in 12 hours.

**i** If the display is showing **2 0 H** and you press the button again, the time delay will be cancelled. The display will show 0 and then the duration of the selected programme.

3. To activate the delay timer, press the START PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 15h, 14h, 13h, ... 30' etc).

## 9. DISPLAY

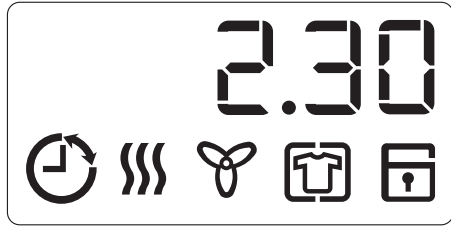

SYMBOL	DESCRIPTION
<b>2 . 3 0</b>	Time to end (time of time programm, time of start delay)
	Child lock
	Delay start
	Drying phase
	Cooling phase
	Antcrease guard phase
<b>E r r</b>	Error, wrong selection

# Before first use

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out

a brief drying cycle (ca. 30 min.) with damp cloths in the machine.

## Sorting and preparing laundry

### Sorting laundry

- Sort by fabric type:
  - Cotton/linen for programmes in COTTONS programme group.
  - Mixtures and synthetics for programmes in SYNTHETICS programme group.
- Sort by care label: The care labels mean:

<input type="checkbox"/>	Drying in the tumble dryer possible in principle
<input type="checkbox"/>	Drying at normal temperature
<input type="checkbox"/>	Drying at reduced temperature (press HALF POWER button!)
<input checked="" type="checkbox"/>	Drying in the tumble dryer <b>not</b> possible

**Important!** Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying. This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the EXTRA DRY programme. Items may shrink!

### Preparing laundry

- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

**Important!** Do not overload the appliance. Observe max. loading volume of **7** kg.

### Laundry weights









Type of laundry	Weight
Bathrobe	1200 g
Napkin	100 g













Type of laundry	Weight
Quilt cover	700 g
Sheet	500 g





Type of laundry	Weight
Pillow case	200 g
Tablecloth	250 g
Towelling towel	200 g
Tea cloth	100 g
Night dress	200 g
Ladies' briefs	100 g


Type of laundry	Weight
Man's work shirt	600 g
Man's pyjamas	500 g
Blouse	100 g
Men's underpants	100 g

# Programme chart

Programmes	max. load (weight when dry)	Additional functions/ options	Application/properties	Care mark
COTTONS EXTRA DRY	7 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	Thorough drying of thick or multi- layered fabrics, e.g. terry towelling items, bathrobes.	 
COTTONS STORE DRY	7 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	Thorough drying of thick or multi- layered fabrics, e.g. terry towelling items, bathrobes.	 
COTTONS CUPBOARD DRY <sup>1)</sup>	7 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	 
COTTONS IRON DRY <sup>1)</sup>	7 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	 

Programmes	max. load (weight when dry)	Additional functions/ options	Application/properties	Care mark
SYNTHETICS EXTRA DRY	3 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	  2) 
SYNTHETICS CUPBOARD DRY 1)	3 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	  2) 
SYNTHETICS IRON DRY	3 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	  2) 
DELICATE	2 kg	HALF POWER <sup>Automatic</sup> ), LONG ANTICREASE , ALARM , DELAY START	Delicate cycle is a special programme for synthetics or mixed fabrics which do not require ironing, and need to be "Store dry" (e.g. curtains).	
DUVET	3 kg	HALF POWER <sup>Automatic</sup> ), LONG ANTICREASE , ALARM , DELAY START	Bed linen (single and double sheet, pillowcase, bedspread, duvet cover).	  

Programmes	max. load (weight when dry)	Additional functions/ options	Application/properties	Care mark
EASY IRON	1 kg (or 5 shirts)	HALF POWER <sup>Automatic</sup> , LONG ANTICREASE , ALARM , DELAY START	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.	
MIXED LOAD	3 kg	HALF POWER <sup>3)</sup> , LONG ANTICREASE , ALARM , DELAY START	For drying cotton and synthetic fabrics, uses low temperature.	
HEAVY COTTON	7 kg	HALF POWER, LONG ANTICREASE , ALARM , DELAY START	For leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	
20 MINUTE DRY	1kg or 5 shirts	, LONG ANTICREASE , ALARM , DELAY START	Special program with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The result depends on the type of fabric and its finish. Place fabrics in the dryer straight after spinning. Once dried, immediately remove fabrics and place on a clothes hanger	

Programmes	max. load (weight when dry)	Additional functions/ options	Application/properties	Care mark
TIME	7 kg	HALF POWER , LONG ANTICREASE , ALARM , DELAY START , TIME	For further drying of individual items of laundry.	

- 1) In accordance with IEC61121
- 2) select HALF POWER option
- 3) Automatic


# Daily use

## Switching machine on

Turn the programme selector to any programme. The machine has been switched on.

## Door opening and laundry loading

1. Open loading door:  
Push against the loading door (push point)

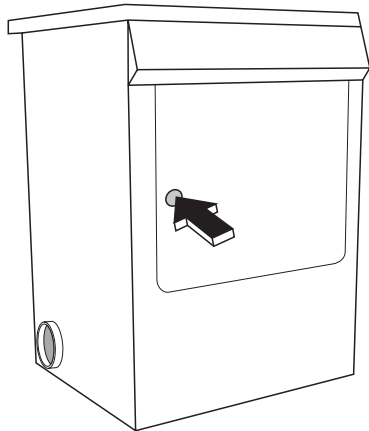


2. Load your laundry (do not force it in).



**Caution!** Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.


## Selecting the programme

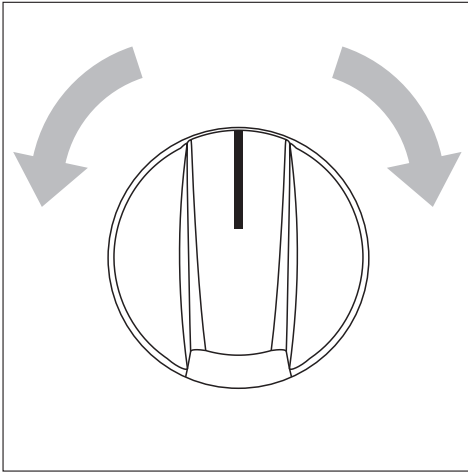

Use the programme selector to set the programme you require. The estimated time to end of the programme appears in the LCD in h:mm format (hours:minutes). during the cycle time elapses by steps of one minute; less than 1 hour the leading zeros are not shown (ex. "59", "5", "0");

## Selecting additional functions

You can choose from the additional functions:

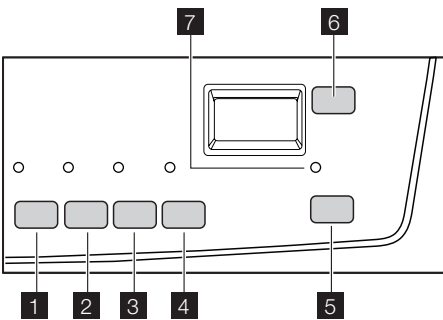



button 1 -HALF POWER  
button 2 -LONG ANTICREASE  
button 3 -ALARM

button 4-TIME  
button 6-DELAY START

## Setting child lock




The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed. The child lock function locks all buttons and the programme knob. The child lock can be activated or deactivated by holding down the ALARM and TIME buttons simultaneously for 5 seconds.

-  – Before programme is started:  
Appliance cannot be used
- After programme is started:  
Programme in operation cannot be changed

The  icon appears in the display to indicate that the child safety device is activated. The child safety device is not deactivated once the programme comes to an end. If you want to set a new programme, you must first deactivate the child safety device.


## Starting the programme

Press the START PAUSE button. The programme is started.


The programme phase is shown in display by appropriate icons. From left to the right, from drying  , anticrease  , to cooling  .



## Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to **OFF** position. The programme is cancelled.

 The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob or if an function button (excluding the **ALARM** button) is pressed, led above START/PAUSE button starts flashing temporarily in yellow. The drying programme is not however affected by this (laundry protection).

## Drying cycle complete / removing laundry

Once the drying cycle is complete, display shows a blinking "0", under anti-crease  and FILTER light appear dash. If the **ALARM** button has been pressed, an acoustic signal sounds intermittently for about one minute.

 The drying cycles are automatically followed by an anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.) If **LONG ANTICREASE**  function has been selected, the anti-crease phase is lengthened by 60 minutes.

1. Open door.
2. Remove laundry.
3. Remove filter after clothes has been removed. Clean the filter.



**Warning!** Before you replace the filter, please check if there is anything inside the filter seat.

---

4. Turn the programme selector to OFF .
- 

**Important!** Clean the filter after each drying cycle.

---

5. Close the door.



# Cleaning and maintenance



**Warning!** The tumble dryer is not to be used if industrial chemicals have been used for cleaning!


## Cleaning fluff filter

The filter collect all the fluff which accumulates during drying. To ensure that the dryer works perfectly, the fluff filter must be cleaned after every drying cycle.

The warning light FILTER , is on to remind you of this operation.




**Caution!** Never operate the dryer without fluff filter or with damaged or blocked fluff filter.

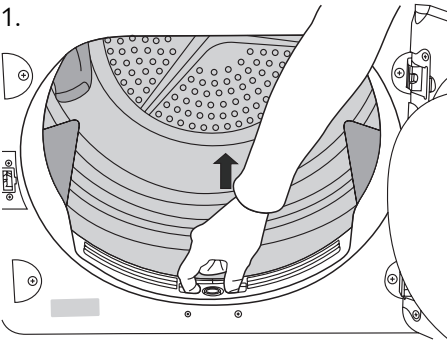

1. Open loading door and remove laundry.
2. Remove the filter which is built into the lower part of the loading aperture.

3.

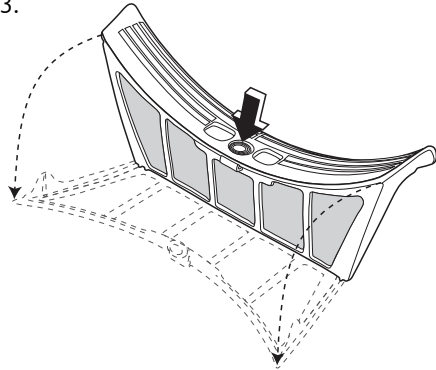

Open the filter pressing the button, among two slots on fingers. Clean the filter using damp hand or cloth. After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filter with warm water using a brush. Close the filter and do not forget to put it back.



**Warning!** Before you replace the filter, please check if there is anything inside the filter seat.

4. The filter can be positioned only to one side. If position is wrong, the filter overhangs.



If the filter will not snap into place, the loading door cannot be closed.

## Cleaning the door

Clean periodically the interior part of the door to remove any fluff. Accurate cleaning ensures correct drying.

## Cleaning the drum



**Caution!** Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

## Clean operating screen and housing



**Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

# What to do if ...

## Troubleshooting by yourself

If, during operation, the error code **E...** plus number or letter) appears on the LCD: Switch the machine off and on again. Reset


programme. Press the START PAUSE button. If the error is still displayed, please inform your local Service Force Centre and quote the error code.


Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START PAUSE button?	Press the START PAUSE button again.
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Programme chart" chapter).
	Filter clogged.	Clean filter.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots covered up.	Uncover ventilation slots.


	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
	Conductance of water at installation site differs from standard setting of machine.	Re-programme standard setting for degree of drying (see 'Programming options' chapter).
Loading door does not close.	Filter not in place.	Install filter into place.
When a button is pressed, <b>Err</b> appears on the LCD.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF . Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to any programme.
	Defective light bulb.	Replace light bulb (see next section).
Displayed programme time changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process; this is not a machine fault.
Drying cycle ends shortly after programme starts.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. EXTRA DRY instead of CUPBOARD DRY ).
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically.	Filter clogged.	Clean filter.
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.

## Changing the bulb for interior lighting

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local Service Force centre.

 **Warning!** When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

 **Warning!** Do not use standard bulbs! These develop too much heat and may damage the machine!

 **Warning!** Before replacing the bulb, disconnect the mains plug.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw cover back down.

Check the correct positioning of o-ring gasket before screwing back the door light cover. Do not operate the dryer when missing o-ring gasket on door light cover.



**Warning!** For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

# Machine settings

## ALARM SIGNAL permanent off

1. Turn the programme selector to any programme.
2. Press simultaneously the LONG ANTICREASE and ALARM buttons and hold down for approx. 5 seconds.
3. The buzzer is by default always off. You can use ALARM button to activate or deactivate sound but machine does not memorize your selection.


## Water hardness

Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory

could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.

1. Turn the programme selector to any programme.
2. Press simultaneously the ALARM and START PAUSE buttons and hold down for approx. 5 seconds. The current setting is on the display:  $\square \square \_$  – low conductivity <300 micro S/cm,  $\square \square \_$  – medium conductivity 300-600 micro S/cm,  $\square \square \Xi$  – high conductivity >600 micro S/cm
3. Press the START PAUSE button sequentially until you set desired level.
4. To memorize setting press simultaneously the ALARM and START PAUSE buttons or turn knob to OFF position

# Environment

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for

the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council,

your household waste disposal service or the shop where you purchased the product.

## Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



**Warning!** When disposing of old appliances, remove the mains cable and dispose of together with the plug. Remove the door hook and ensure it is no longer lockable to prevent young children being trapped inside.

---


## Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
  - always keep the ventilation slots on the base of the dryer unobstructed;
  - use the loading volumes specified in the programme overview;
  - clean the filter after each drying cycle;
  - spin the laundry well before drying.  
Example: Consumption data – depending on spinning speed – for 7 kg of laundry, dried using the COTTONS (cotton) CUPBOARD DRY programme.
  - ensure the vent hose is not squashed or kinked.

Pre-draining		Drying cycle	
Revolutions per minute	Residual dampness		Energy in kWh
	in litres	as a %	
1000	4.20	60	3,9
1400	3.64	52	3,7

## Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions - see chapter *What to do if...*

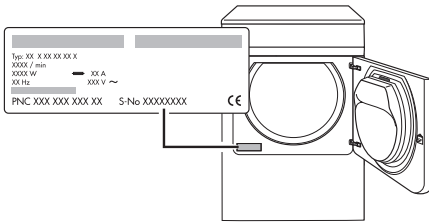

Model description:  
PNC:  
S No:

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners. In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No. is on rating plate stuck to the product - to find it see chapter *Product description* )
- Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

# Technical data



Height x width x depth	85 x 60 x 58 cm
Drum volume	108 l
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 30kg
Loading volume (depends on programme) <sup>1)</sup>	max. <b>7</b> kg
Voltage	230-240 V
Required fuse	13 A
Total power	2600 W
Energy efficiency class	<b>C</b>
Energy consumption (7 kg of cotton, pre-drained at 1000 rpm) <sup>2)</sup>	<b>3.9</b> kWh
Average annual energy consumption	263.1 kWh
Use	Domestic
Permissible ambient temperature	+ 5°C to + 35°C
<b>Consumption values</b>	
<i>The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.</i>	
<b>Programme</b>	<b>Energy consumption in kWh / average drying time in min.</b>
COTTONS CUPBOARD DRY <sup>2)</sup>	<b>3.9 / 95</b> (7 kg load pre-drained at 1000 rpm)
COTTONS IRON DRY <sup>2)</sup>	<b>3.05 / 75</b> (7 kg load pre-drained at 1000 rpm)
SYNTHETICS CUPBOARD DRY <sup>2)</sup>	<b>1.15 / 30</b> (3 kg load pre-drained at 1200 rpm)

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

2) in accordance with EN 61121

## Installation

---

**Important!** The appliance must be moved in vertical position for transport.

---

### Appliance positioning

- It is recommended that, for your convenience, the machine is positioned close to your washing machine.

- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.

**Important!** To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

**Important!** The feet must never be removed. Do not restrict the floor clearance through deeply carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

**Important!** The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.


**Warning!** Should the appliance be moved, it must be transported vertically.

**Warning!** The appliance must not be installed behind the lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.


## Removing transport safety packaging



**Caution!** Before use all parts of the transport packaging must be removed.

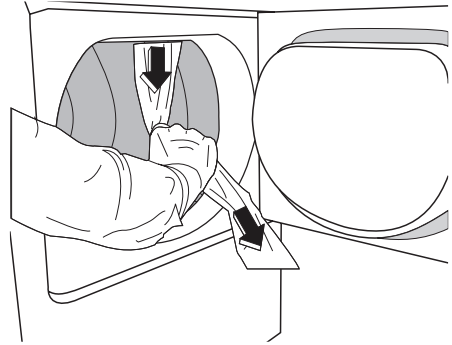

1. Open loading door.
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.


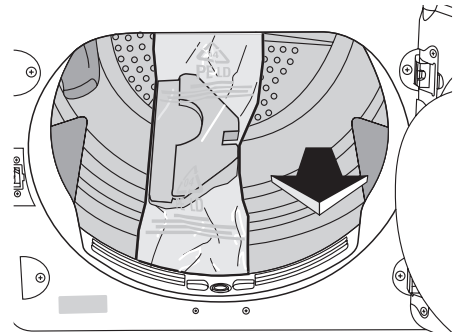


## Fitting the vent hose


To simplify the installation, there is a choice of vent outlets: one at the back, the others in the left and right-hand side. Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, screwing it on to the hose and pushing it firmly back into place. The unused vents



should now be sealed with the special snap covers provided.

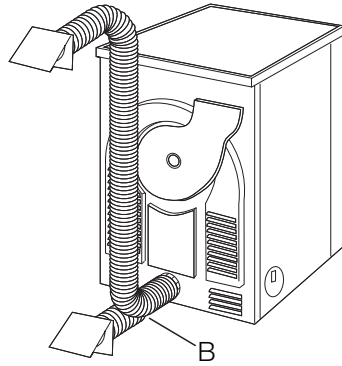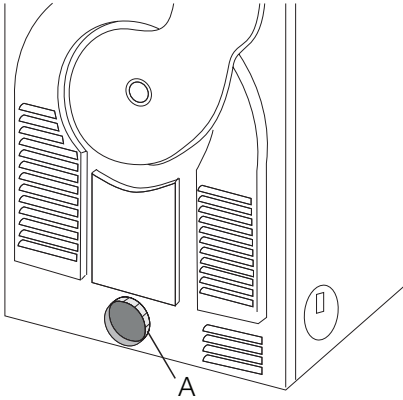


Once connected to the dryer, run the vent hose to the desired outlet point, ensuring that the run's overall length is less than 2 m, and that it contains no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builder's merchant should be able to supply you with the necessary fittings and installation advice.

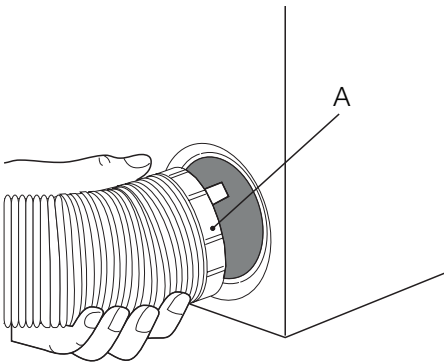

If the hose is too long and the room temperature low, the moisture might condense to water inside the hose. This is an unavoidable natural phenomenon. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (via. 3 mm) in the lowest point of the hose and to place a small container below it. (See picture, point B).



**Warning!** It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.

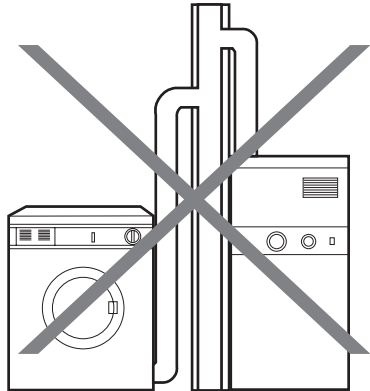


Note that to avoid condensation problems, it is essential that the dryer be fitted with the flexible hose to carry its “exhaust” at least beyond the kitchen units; preferable outside the kitchen. In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. Therefore, in case of a permanent hose fitted to an exterior wall or ceiling, it must be ensured an exhaust capacity of at least 150 m<sup>3</sup>/h. If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

## Changing door stop



**Warning!** Before changing the door stop, disconnect the mains plug.





1. Open loading door.

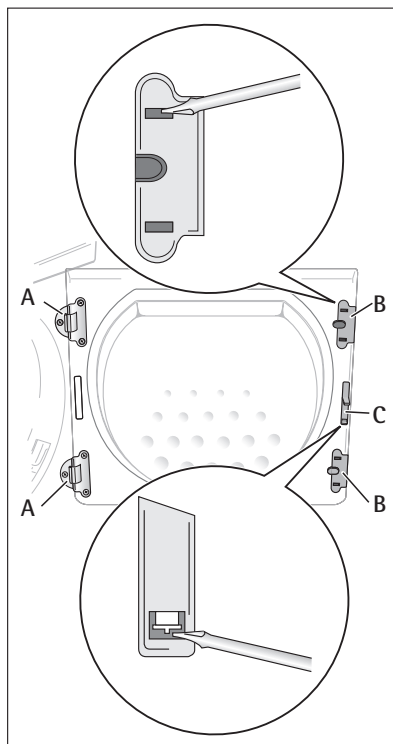

2. Unscrew hinge **A** from the front of the machine and take off the loading door.
3. Remove cover plates **B**. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block **C** from the snap-on fixture, take out and re-insert on the other side having rotated the block through 180°.



**Caution!** There is a little spring under locking block C. To put all parts together correctly, look at the pictures:

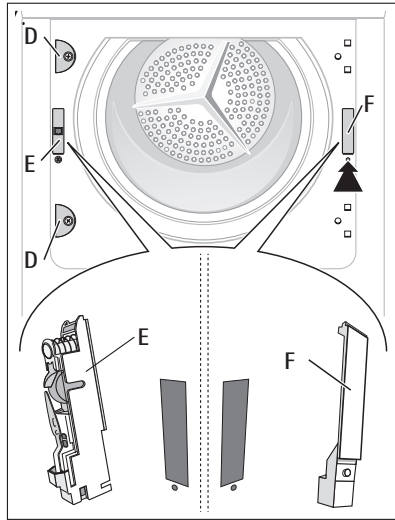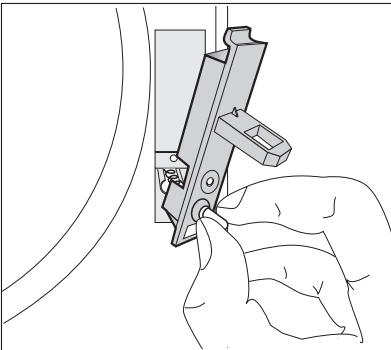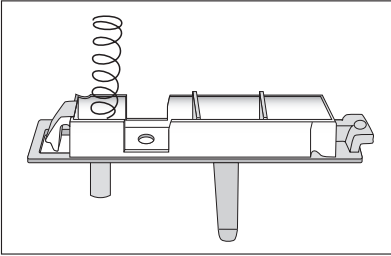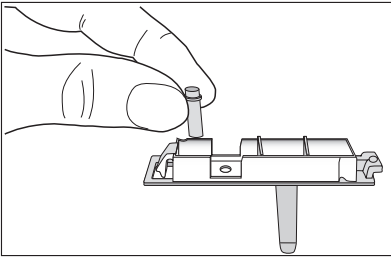

5. Unscrew hinge **A** from the loading door, rotate through 180°, re-insert on the opposite side and screw down.
6. Re-insert cover plates **B** on the opposite site having first rotated them through 180°.

8. Unscrew door lock **E**, push down slightly and remove from the front of the machine.
9. Press snap-in button **F** in and down, press cover down slightly and remove from front of the machine.
10. Change door lock **E** over to the opposite side, screw down the door interlock.
11. On the other side, insert cover **F** and allow snap-in button to lock into place.
12. Insert loading door and hinges into recesses on the front of the machine and screw down.

**Note regarding contact protection:**

The machine is only secure for operations again once all plastic parts have been inserted.

## Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



**Warning! THIS APPLIANCE MUST BE EARTHED.**

**Should the appliance power supply cable need to be replaced, this must be carried out by a Service Force agent (see chapter: Repairs - after sales service).**


**The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 6).

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved BS 1363/A fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code:

- Green and Yellow - Earth
- Blue - Neutral
- Brown - Live

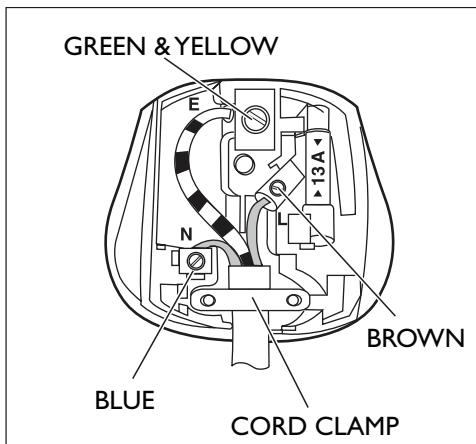

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug.

**Proceed as follows:**

1. Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol  $\perp$  or coloured green and yellow.
2. Connect the Blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black.
3. Connect the Brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red.
4. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.



**Warning! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.**



**Warning! The plug must still be accessible after the appliance has been installed.**



**Warning! The appliance should not be connected to the electrical supply by means of an extension cable.**



**Warning! The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions.**

**Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.**

---

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm. Read carefully the instructions supplied with the kit.



**Warning! The power supply cable must be accessible after installing the machine.**

---


## Permanent connection

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

## Special accessories

### Stacking kit

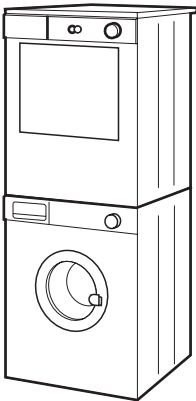





**John Lewis Partnership**

171 Victoria Street  
London SW1E 5NN  
[www.johnlewis.com](http://www.johnlewis.com)