


The new
BENDIX
Royale
autowasher de-luxe

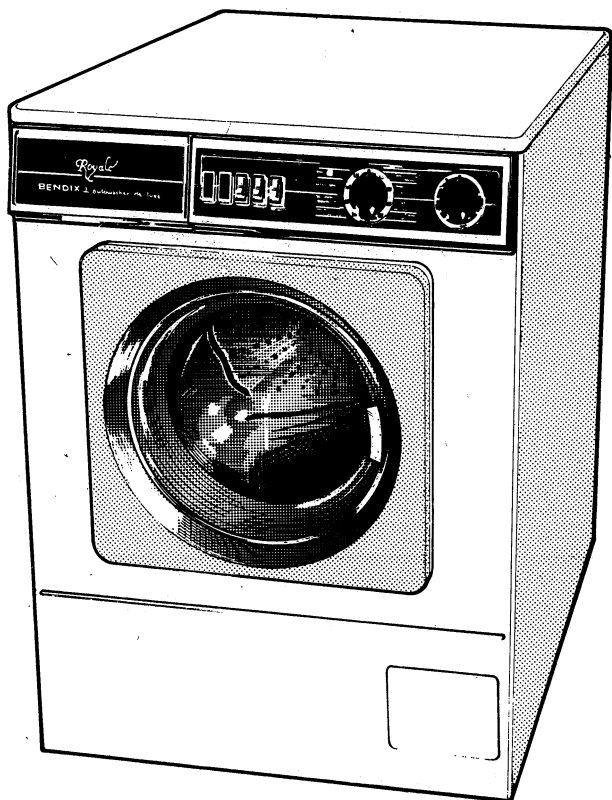

Model 7147EB

Connecting to power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

WARNING **THIS APPLIANCE MUST BE EARTHED**

If this appliance is fitted with a non-rewireable plug for which your socket is unsuitable then it should be cut off and an appropriate plug fitted. The removed plug should be disposed of as insertion of the plug into a 13 amp socket is likely to cause an electrical hazard. If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be replaced. If the fuse cover is lost or damaged the plug must not be used until a replacement is obtained. Replacement fuse covers are available from your nearest TDA Service Centre. It is important that the colour on the replacement fuse cover corresponds with the colour on the base of the plug.

IMPORTANT - The wires in the mains lead are coloured in accordance with the following code:-


GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings identifying the terminals in your plug proceed as follows:-


The wire which is coloured green and yellow must be connected to the terminal which is marked with the letter 'E' or by the 'Earth' symbol \perp or coloured green or coloured green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

The appliance must be protected by a 13 amp fuse, if a 13 amp (BS 1363) plug is used, or if any other type of plug is used by a 15 amp fuse either in the plug or adaptor or at the distribution board. Only ASTA approved fuses to BS 1362 should be used.

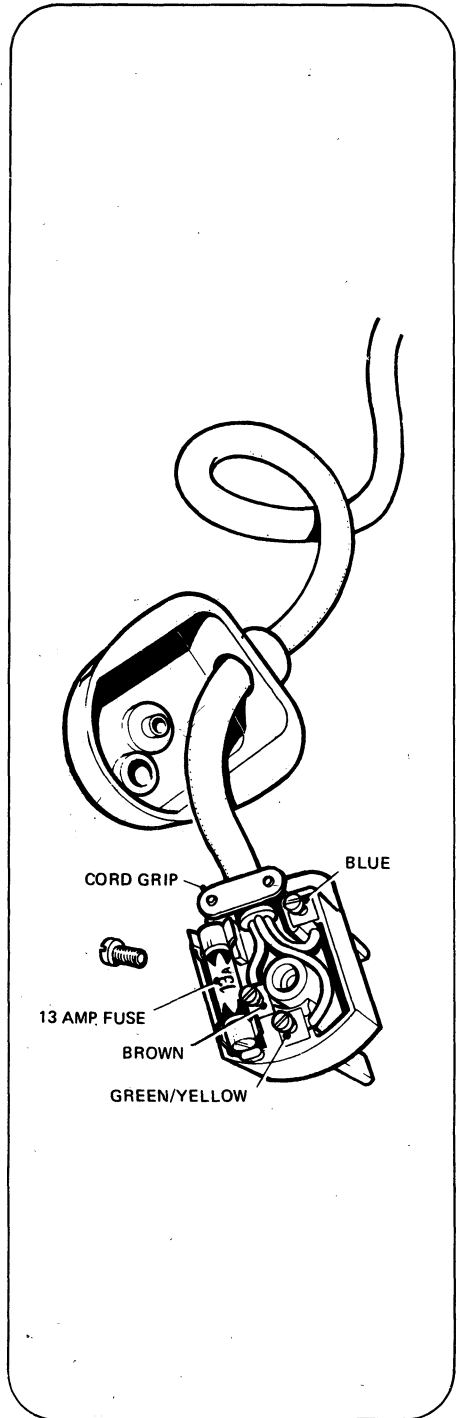

The new **BENDIX** *Royale* autowasher de-luxe

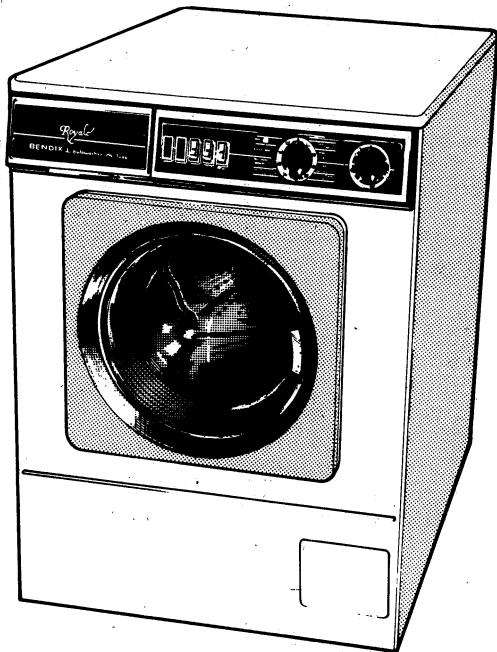

You are now the proud owner of a Bendix Royale Auto-washer de-luxe, you will be pleased to find that it washes, rinses and spins without you having to handle the clothes in between times.

You will be obviously want to obtain the best possible wash, by reading and following the instructions in this booklet you will achieve excellent results.

Please ensure that the Installation Instructions supplied have been followed.

If you should need any further advice or assistance please contact your nearest Electricity Board. You will find the address and telephone number in the Yellow Pages.

Specification

Dimensions:

Height	33 ½ inches	(850mm)
Width	24 inches	(610mm)
Depth	19 ¾ inches	(500mm)
Weight	210 lbs.	(95 Kg)

Capacity and Performance features:

Dry Laundry Maximum 10lb (4.5kg)

Water levels:

Full Load	4.2 gallons	(19 litres)
Economy Load	3.1 gallons	(14 litres)
Water Supply:	Hold and Cold (or Cold only)	
Cylinder Volume	1.6 cu.ft.	(45.3 litres)

Know your **BENDIX Royale** autowasher de-luxe

Heater Pilot Light - The orange pilot light will glow to show that the heater is switched on.

Door Lock-Light - glows red when the door is locked. Do not attempt to open the door at the completion of a wash programme until the red light goes out. The time delay is approximately 1½ minutes.

Should it be necessary to open the door during a wash programme, first switch the Programme Selector to 'O', and then wait for 1½ minutes.

The door incorporates a safety catch meaning that it is impossible for the motor or heater to operate when the door is open. In addition there is a safety interlock preventing the door from being accidentally opened during the wash cycle.

Economy Switch - regulates the amount of water used according to the size of the load to be washed either **ECONOMY LOAD** or **FULL LOAD**. This not only ensures the cleanest possible wash, but saves your water, electricity and detergents. (See page 9).

Bio or Pre-wash Selector Switch - If you wish you have the choice of either Bio-wash or Pre-wash before the selected main wash programme.

The Bio-wash takes about ½ hour and heats the water to the correct temperature necessary for Bio detergents to function.

The pre-wash takes 15-20 minutes approximately and heats sufficiently to flush away surface dirt and at the same time loosens deeper soil to be washed away during the main wash programme.

Spin Speed Selector You have a choice of fast spin or slow spin. Generally speaking the fast spin is more suitable for natural fabrics, i.e. cotton linen and wool, where maximum water extraction is required. The slow spin is ideal for man made fabrics, nylon, polyester, acrylics, as well as mixtures of man made and natural fabrics. This slower speed helps to prevent creasing, and a special short slow spin speed is automatically incorporated in delicate fabric programmes. On natural fabric programmes you have a choice of 800 or 400 rpm. If drying in a tumble drier we advise an 800rpm spin, but for outside line drying a 400 rpm spin.

Programme Selector Use this to select the wash programme required. A useful guide for matching fabrics to wash programme can be seen on Page 8. This also serves as an on/off switch.

Wash Timer Dial - once set rotates and shows how far through the wash programme your machine has progressed.

Detergent Dispenser - The detergent dispenser is designed so that detergents and additives will flush easily into your machine. It is divided into three compartments "A" for pre-wash or Bio powders, "B" for main wash powders and "C" for additives i.e. fabric softeners such as Comfort or Lenor. At the end of the wash programme, press the button in the additives compartment to release the water remaining and to leave the machine ready for the next wash.

Note: The detergent dispenser drawer and opening should be cleaned to prevent a build up of detergent and fabric softener. The dispenser drawer is easily removed by pressing the spring latch on the roof of the opening whilst gently pulling out the drawer. Rinse the dispenser drawer under the tap, dry and replace by inserting in the opening and pushing home.


Drain Screen The removable drain screen which protects the pump from lint and foreign matter needs to be cleaned periodically. How often will depend on your wash load e.g. cotton towels and nappies cause more lint to collect than nylon loads. Open the service door by pressing on the left hand side. Unscrew the locking screw (anticlockwise) and pull the drain screen out. Have a cloth or shallow tray under the drain screen housing, as a small quantity of water may run out. Clean the screen under running water to help remove the trapped lint. Replace the screen by sliding back into the housing. Lastly tighten the locking screw until the screen is secure.

Drain Hose Make sure that this is not kinked or the machine will not drain.

Hot and Cold Fill Hoses - Ensure that these are not kinked.

Adjustable Feet Check that you machine is level by adjusting the feet. See the installation instructions for further details.

Transit Brackets (as shown in the installation instructions). These must be removed before use.

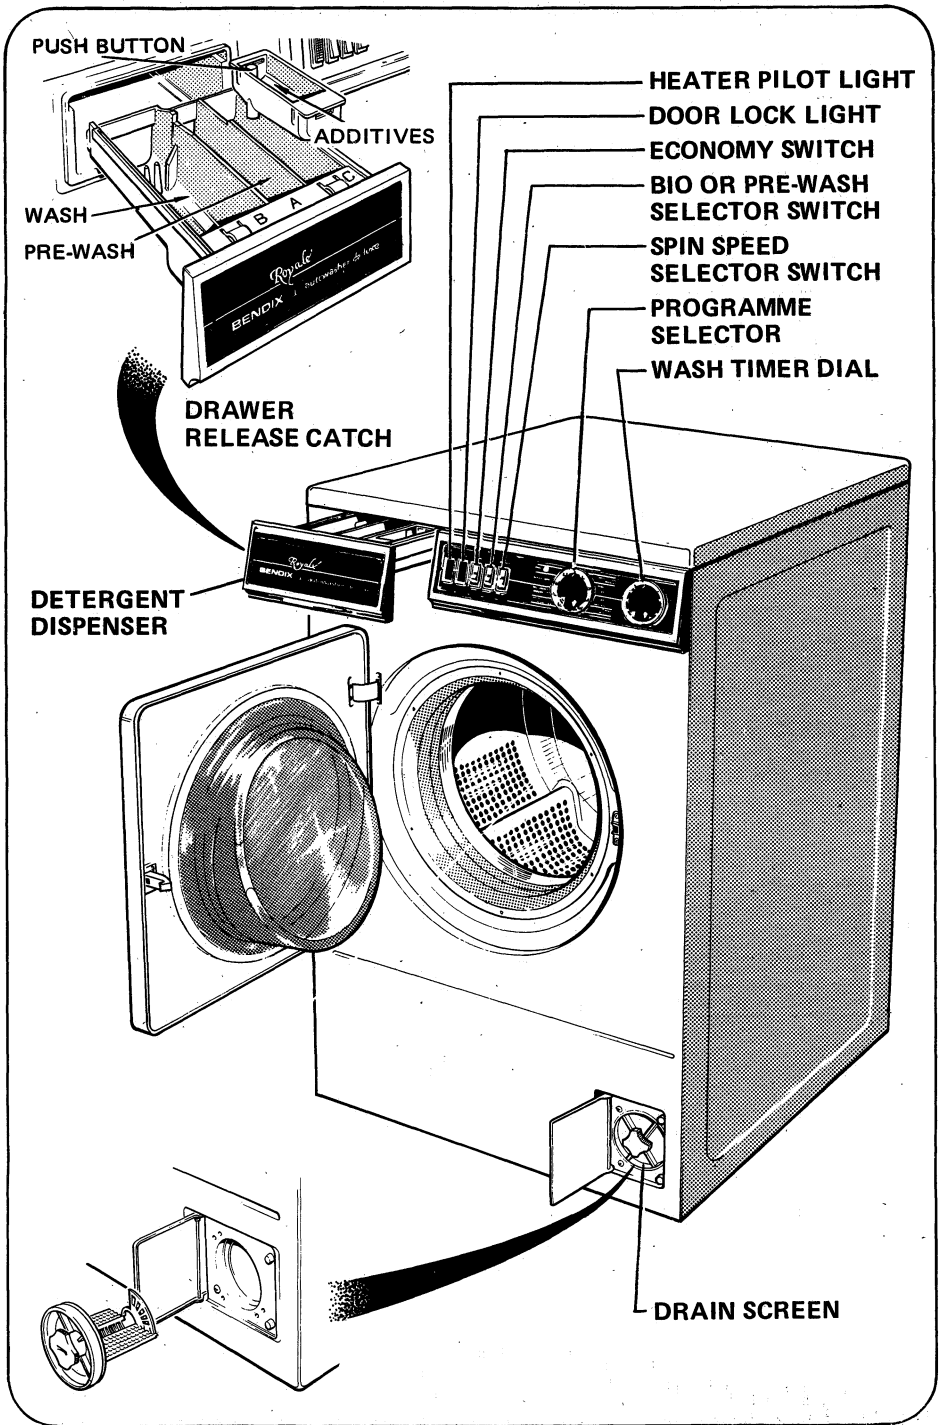

PUSH BUTTON

ADDITIVES

WASH

PRE-WASH

DRAWER
RELEASE CATCH

DETERGENT
DISPENSER

HEATER PILOT LIGHT

DOOR LOCK LIGHT

ECONOMY SWITCH

BIO OR PRE-WASH
SELECTOR SWITCH

SPIN SPEED
SELECTOR SWITCH

PROGRAMME
SELECTOR

WASH TIMER DIAL

DRAIN SCREEN

Using your **BENDIX Royale** autowasher de-luxe

Always use a low sudsing detergent in your machine, e.g. Bold, Persil Automatic, as these are specially formulated to work in conjunction with your Auto Deluxe machine to give the best results.

Detergents will be flushed automatically into the machine by means of the detergent dispenser. The suds level should never rise more than halfway up the door. Too much foam will not only impede the wash action of your machine but will rise through the detergent dispenser and possibly out of the overflow pipe at the back of the machine, so making a mess on the floor!

If this should happen clear excessive suds by setting the Wash Timer Dial to the beginning of the first rinse and allow the machine to rinse out.

The following quantities of powder are a guide for average water supplies. If the water is very hard more powder may be needed. If very soft less will be needed. If you are in doubt refer to the instructions on the packet.

If you have a more heavily soiled load and decide to use the pre-wash before a main wash, use approximately one third of the powder in the pre-wash compartment (A) of the dispenser and the remaining two thirds in the main wash (B) compartment.

Economy Load		Full Load	
pre-wash	main-wash	pre-wash	main-wash
2oz	3oz	2½oz	5½oz
(60g)	(90g)	(75g)	(160g)

Note: an average teacup holds 2½-3oz (75-90g)

Water Softeners

For hard water we suggest the use of "Calgon" (See packet for instructions).

Fabric Softeners, e.g. Comfort, Lenor

All fabrics particularly towels and nappies benefit from the use of fabric conditioners in the final rinse. Items of laundry feel softer, are more easily ironed and the clinging effect of nylon is considerably reduced.

To use:

Pour the recommended quantity according to the label on the bottle into the 'Additives' compartment (C) of the detergent dispenser

when adding the detergents and it will automatically be injected into the machine during the final rinse.

Preparation before you wash

Nowadays many garments carry a label under the International Care Labelling scheme indicating the correct type of wash treatment required. You will find that this label corresponds to the Wash Chart on Page 8.

Sort your washing according to the Care Label number i.e. given on the garment, or if absent, according to the fabric and type of wash treatment required. Your Bendix Auto-washer Deluxe takes up to 10lbs (4.5 Kg) dry weight of clothes.

If you decide for one reason or another to mix fabrics, always use the wash programme for the most delicate fabric in the load. For example a wash load made up with fabrics from the wash groups 1 and 2 should be washed on 2, similarly a wash load with fabrics from 3 and 4 should be washed on 4 etc. White nylon, or white polyester/cotton articles and delicate items i.e. programmes 5-8 should be washed separately.

Make sure that the pockets have been emptied, zips fastened and apron strings tied. Remove pins and other small objects which could harm clothes if they become separated in the machine.

If possible make up loads of similar soiling keeping heavily soiled items separate from lightly soiled clothes. Heavily soiled parts such as shirt cuffs and collars should be pre-treated by brushing with a solution made of detergent and water; this should be applied lightly to the right side of the garment.

Stain Removal

Most household stains come out in the normal wash, but there are some which require special treatment. The following hints may help with common stains.

When using a stain remover, follow the makers directions carefully. Never use full strength bleach on any fabrics.

Rinse thoroughly after any special treatment. Chemicals left in fabrics can weaken or destroy some fibres. Test delicate fabrics for possible damage to fibres before tackling the stained area.

Stains

**Coffee, Tea,
Fruit, Wine,**

These are usually removed in the wash; for old stains, soak in a biological wash product, then launder in the usual way.

**Grass, Ink,
Ballpoint**

Dab with methylated spirits over a soft cotton pad, then launder in the usual way.

Do not use methylated spirits on Tricel. Treat INK stains on Tricel with Glycerine.

Tar

Scrape off excess, dab with petrol, or lighter fuel over a soft cotton pad. (Caution. Petrol is inflammable).

Scorch

Moisten light stains and soak in glycerine then wash. If stains remains soak in one part hydrogen peroxide to nine parts water; wash through and rinse thoroughly.

Lipstick

Treat as a grease stain.

Iron Mould

Soak light stains in lemon juice, press between damp cotton, repeat if necessary.

Grease, Fat

Treat with a proprietary grease solvent.










**Blood, Egg
Milk, Cream
Meat Juice**

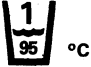Soak in biological solution, then launder in the usual way.

Mildew

Treat with peroxide. Soak (using one part hydrogen peroxide to nine parts water), rinse well. Care must be taken with coloured fabrics.

BENDIX *Royale* AUTOWASHER

PROGRAMME	FABRIC	BIO WASH 47°C	PREWASH 40°C	MAIN WASH	NUMBER OF RINSES
	Whites, cotton & linen			Maximum action 95°C	4
		Use for removal of bio-stains, i.e. blood, gravy egg etc.		Maximum action 95°C	4
			Use for heavily soiled wash load	Maximum action 95°C	4
	Cotton articles with special finishes, capable of being boiled but requiring drip drying.	Yes - select if required	Yes - select if required	Medium Action 95°C	4
	Colour fast cotton, and linen	Yes - select if required	Yes - select if required	Maximum action 60°C	4
	White nylon Sturdy synthetics	Yes - select if required	Yes - select if required	Medium action 60°C	4
	White nylon Sturdy synthetics	Yes - select if required	Yes - select if required	Medium action 60°C	4
	Coloured nylon polyester /cotton mixtures, terylene Drip dry	Yes - select if required	Yes - select if required	Medium action 50°C	4
	Non colour fast cotton and linen	No	Yes - select if required. Bio powder can be used.	Medium action 40°C	4
	Delicate fabrics	No	Yes - select if required. Bio powder can be used.	Minimum action 40°C	4
	Machine washable woollens	No	No	Minimum action 40°C	4
Rinse	Set programme selector to suit fabrics				1-4 as necessary Rinse 4 for the addition of fabric conditioner
Spin					

DE-LUXE PROGRAMME GUIDE

RINSE AND HOLD	SPIN Select		FULL LOAD	ECONOMY LOAD	NOTES
	Fast 800rpm	Slow 400rpm			
No	Select 800 or 400 rpm standard length spin is incorporated		10lb (4.5 kg)	6lb (2.7 kg)	A very high temperature vigorous wash which allows oxidising bleaches to work to the maximum advantage keeping whites white. There is thorough rinsing and fast spin should be selected to give maximum water extraction. This programme can be used fully automatically.
No	Select 800 or 400 rpm standard length spin is incorporated		10lb (4.5 kg)	6lb (2.7 kg)	
No	Select 800 or 400 rpm standard length spin is incorporated		10lb (4.5 kg)	6lb (2.7 kg)	
Yes clothes can be removed from cylinder for drip drying after final rinse	A shorter length 400 rpm spin is automatically selected		10lb (4.5 kg)	6lb (2.7 kg)	A very hot wash with medium wash action, thorough rinsing with the clothes left in water after the final rinse to help prevent creasing. Advance the wash timer dial to 'SPIN' to complete the programme.
No	Select 800 or 400 rpm standard length spin is incorporated		10lb (4.5 kg)	6lb (2.7 kg)	A hot wash with medium wash action to keep colours bright and fresh looking, thorough rinsing and a standard length spin.
Yes	A shorter length 400 rpm spin is automatically selected		4½lb (2.03 kg)	2lb (0.91 kg)	Always wash white synthetics separately as they pick up the dyes from coloured synthetics so becoming drab looking. This programme gives a hot wash with medium wash action to help keep white synthetics white, thorough rinsing with the clothes left in water after the final rinse. Advance the wash timer dial to 'SPIN' to complete the programme.
Yes	No		4½lb (2.03 kg)	2lb (0.91 kg)	See above for notes on white synthetics. A hot wash with medium wash action to help keep white synthetics white, thorough rinsing. The clothes are left in water after the final rinse. Advance the wash timer dial to 'SPIN' to complete the programme. Clothes can be removed and drip dried.
Yes	A shorter length 400 rpm spin is automatically selected		4½lb (2.03 kg)	2lb (0.91 kg)	A warm wash with medium wash action to preserve the appearance of coloured synthetics, cotton etc. Advance wash timer dial to 'SPIN' to complete the programme.
No	Select 800 or 400 rpm standard length spin is incorporated		10lb (4.5 kg)	6lb (2.7 kg)	A warm wash with medium wash action to prevent transfer of colour from non-fast coloureds.
Yes	A shorter length 400 rpm spin is automatically selected		4½lb (2.03 kg)	2lb (0.91 kg)	A warm wash with gentle wash action to care for delicate fabrics. The clothes are left in water after the final rinse. Advance the wash timer dial to 'Spin' to complete the programme.
Yes	Select 800 or 400 rpm standard length spin is incorporated		3½lb (1.5 kg)	No, always use full load setting	A warm wash with gentle wash action just right for woollens. Thorough rinsing and short spin to extract the excess water. Select fast spin 800 rpm. Advance the wash timer dial to 'SPIN' to complete the programme.
Yes	Dependent on fabric and programme selected see above				1-4 rinses can be followed if required by fast or slow spin.
No	Dependent on fabric and programme selected. See above				Advance wash timer dial to 'SPIN'.

Guide to wash load weights

Regular Wash	Sheet .. Cotton (D)	2 ½ lbs.	1.1kg	
	(S)	1 ½ lbs	670g	
	Other than cotton (D)	1 ½ lbs	670g	
	(S)	1 ¼ lbs	460g	
	Cot Sheet	6 oz.	170g	
	Pillowslips Cotton	4 oz.	113g	
	Others	3 oz.	85g	
	Bath Towel	1 ½ lbs.	670g	
	Hand Towel	9ozs.	255g	
	Tablecloth Small	8 ozs.	277g	
	Large	1 ½ lbs.	670g	
	4 table napkins	6 ozs.	170g	
	Personal	Shirt ... Cotton	10 oz.	283g
		Others	7 ozs.	198g
Blouse .. Cotton		5 ozs.	142g	
Others		4 ozs.	113g	
Cotton Vest		4 ozs.	113g	
Underslip		4 ozs.	113g	
Panties		2 ozs.	56g	
Bras		1 oz.	28g	
Pyjamas		12 ozs.	340g	
Nightdress		5 ozs	142g	
Socks .. Long 2 prs		6 ozs.	170g	
Short 2 prs		3 ozs.	85g	
6 Hankies		3 ozs.	85g	
1 doz. Nappies	2 ½ lbs.	1Kg		
Special Wash	Candlewick Bedspread			
	Double	7lbs.	3.18Kg	
	Single	5lbs.	2.27Kg	
	Blanket .. Wool	4 ¼ lbs	2Kg	
	Acrylic	3 ¼ lbs.	1.5Kg	
	Dress .. Cotton	12 ozs.	350g	
	Others	12 ozs.	350g	
	Sweater .. Wool	14 ozs.	400g	
	Others .. Heavy	12 ozs.	350g	
	Light-weight	6 ozs.	170g	
	Crimplene Suit			
	H/W	3 lbs.	1.36kg	
	Lightweight	2 lbs	910g	
Skirt	7 ozs.	198g		

Economy Switch

Select Economy for small or medium loads, an indication of weights are given in the Wash Programme Guide (pages 8 and 9). This switch controls the water level thereby reducing the total water consumption, which in turn results in a saving of electricity and detergent.

When washing fabrics which are subject to creasing such as Acrilan, Orlon, Nylon, Terylene etc. load the cylinder, about half-full to allow plenty of room for the garments to move about in order to avoid creasing. Set the water level control at full load and always use slow spin.

Loading the Cylinder

When you have a large wash load made up of shirts, towels, pillowcases, pyjamas and other similar small items, pack them loosely into the cylinder.

Large items, a candlewick bedspread for instance, should be washed individually as such a bulky article fills the cylinder.

When washing a mixed load put large and small items into the cylinder alternately. A sheet should be picked up by the centre, tentwise, shaken and then folded, pressing out the air.

Wash Programme

The choice of programmes on your machine enables you to select the best programme for your wash load. The programmes on the Programme Selector correspond to the Care Labelling Code of the International Care Labelling Scheme. See the Chart on Page 8.

Bio-wash

It could be that you have items of laundry which would benefit from a Bio-wash, i.e. blood, gravy, egg stains etc. Follow the above procedure, making sure that the low suds bio detergent goes into the pre-wash compartment of the soap dispenser. Press the rocker switch on the fascia to Bio. Start the machine by turning the Wash Timer Dial to the beginning of Bio-Wash.

The machine will now automatically heat the water to 47°C approx. - the correct temperature for the Bio detergent to function; during this time your clothes are tumbled clockwise and anticlockwise with pauses in between. This is to help loosen and disperse the soil present.

The Biological wash and soak will take approximately half an hour after which time your machine will continue and finish the selected programme.

Pre-Wash

On more heavily soiled wash loads a Pre-wash will help to obtain a better wash. It will disperse any superficial dirt and help loosen soil ready for the main wash. It can be used in conjunction with most wash programmes - synthetics as well as natural fibres


To obtain a Pre-wash press the rocker switch on the fascia to Pre-wash. Again make certain that you have switched the Programme Selector knob to the desired wash programme for the fabric. Load the machine, place the correct quantity, see page 6, of low-suds detergent in both the

pre-wash and main wash sections of the soap dispenser. Start the machine by turning the Wash Time Dial clockwise to the beginning of the 'Pre-Wash' section. Once set the machine will automatically heat the pre-wash water to 40°C, pre-wash and continue through the selected programme. The pre-wash takes approx. 17 mins.

Main Wash

To start the machine without a Bio wash or pre-wash ensure that the Programme Selector knob is turned to the desired programme, and the correct quantity of low suds detergent is in the main wash compartment of the detergent dispenser. Turn the Wash Timer Dial clockwise to the beginning of the 'Wash' section by-passing the Bio-Wash and pre-Wash. The machine will now automatically perform the programme you have selected.

Woollens Wash

Your Bendix Auto-Washer de luxe has a programme for woollen articles, which has been approved by the International Wool Secretariat  for machine washable articles.

Turn the Programme Selector to Woollens (7), select fast spin and turn the Wash Timer Dial to the 'Wash' position by-passing the Bio-wash and Pre-wash. Always set the water level control at Full Load.

Don't wash woollens in your Bendix unless the garment has been labelled 'Machine Washable'. This means that it has been especially treated to minimise shrinkage. However it is advantageous to spin the woollen articles that have been washed and rinsed by hand, as this removes most of the excess water. Use fast spin. Dry woollens carefully to help preserve their texture and shape. After spinning remove from the cylinder carefully, pull into shape and dry flat if possible avoiding direct heat. Do not be tempted to put woollen garments into the tumble dryer.

Blankets

Blankets that are labelled 'Machine Washable' can be safely washed on programme 7(40°C). Always set the water level to "FULL LOAD". Use fast spin for maximum extraction of water.

Most blanket manufacturers issue specific treatments for their products. Sometimes they will stipulate hand washing or dry cleaning. This particularly applies to wool cellular and honeycomb blankets which should not be machine washed.

Rinsing

All wash cycles automatically include 4 rinses and the programmes for natural fibres then

goes on to spin automatically. It is during the last of the 4 rinses that any additives e.g. fabric softener are taken into the machine. The 5 programmes for synthetics and delicate fabrics (see page 8 and 9) have a 'rinse and hold' feature, giving the 4 rinses and then retaining the last rinsing water. This feature prevents excess creasing. When you are ready to remove the clothes from the machine turn the Wash Timer Dial to 'Spin' and the programme is automatically completed. Use the 'rinse and hold' feature for drip dry articles. When you are ready to remove the clothes for drip drying, turn the Wash Timer Dial to 'Spin' to drain the water, and then turn further to the '0' position. After 1½ minutes the door may be opened. Items that have been hand washed can be

rinsed and spun in your Bendix, using just the rinse and spin section of the wash cycles. Select the programme for the fabric and turn the Wash Timer Dial in a clockwise direction to the section 'Rinses', - 1 indicating the start of the first rinse.

Spin

Select the spin speed which is suitable for the type of fabric that you wish to spin. Fast spin 800 rpm for natural fabrics which are more robust, linen, cotton, wool; and slow spin 400 rpm for synthetics or more delicate fabrics. Check also that the Programme Selector is set to the correct programme for the fabric as this will ensure the correct length of spin. Turn the Wash Timer Dial in a clockwise direction to the 'Spin' setting.

Now that you have attended to all the preliminaries, you will want to actually wash in your Bendix!

Check that ...

1. The machine is plugged in and switched on.
2. Both HOT and COLD stopcocks are fully open.
3. The hot and cold fill hoses and the drain hoses are not kinked.
4. The laundry is loaded into the machine and the door is closed firmly.
5. The appropriate amount of detergent and fabric softener has been added to the detergent dispenser.
6. Either Full or Economy load has been selected depending on the load.
7. A Pre-wash or Bio-wash is necessary, then set switch accordingly.
8. The correct spin speed for the fabric has been selected.
9. The programme selector knob has been switched to the desired programme (See wash chart on page 8).
Now turn the Wash Timer Dial clockwise to the required starting position.

After Use

1. Turn off the hot and cold taps to the machine.
2. Make sure that both the Programme Selector and Wash Timer Dial are at the '0' position.
3. Switch off at the power point.
4. Leave the porthole door slightly ajar.
5. Remove and clean the drain screen. If this is not done regularly your Bendix will not drain efficiently - don't forget to replace the drain screen after cleaning.
6. If your machine is not permanently installed disconnect the hoses, remove the electric plug from socket, and coil up the cord.

What's gone wrong?

If your machine won't work, check the following list and make sure that you haven't overlooked anything which might prevent your Bendix from functioning. It will certainly help you and us

- 1) Check that your Bendix is plugged in and switched on.
- 2) Check the 13amp fuse in the plug, you could try another appliance from the same outlet in case the main fuse has blown.
- 3) Be sure that the hot and cold taps have been turned on fully.
- 4) Have you selected the Programme?
- 5) Look to see if the door is fully closed, the door safety switch prevents the heater and motor operating if the door is open.
- 6) Is your machine overloaded! or is the electricity current too low for proper operation, if so the motor protector switch will stop the machine. If overloading is the problem simply remove some of the clothes.
- 7) Check that the drain and fill hoses are not kinked and have been fitted correctly. Does the drain screen need cleaning?


If your machine still does not work after checking this list contact your nearest Electricity Board Depot. (See list on page 15).

Note If, on making a service call, one of our engineers discovers that the only attention required is to remedy one of the above conditions, a charge will be made whether the machine is in or out of the guarantee period.

Moving House

If you plan to move, contact your local Electricity Board to see what should be done before and during the moving of your machine.

The **BENDIX** *Royale* Autodrier De Luxe Model 7447EB

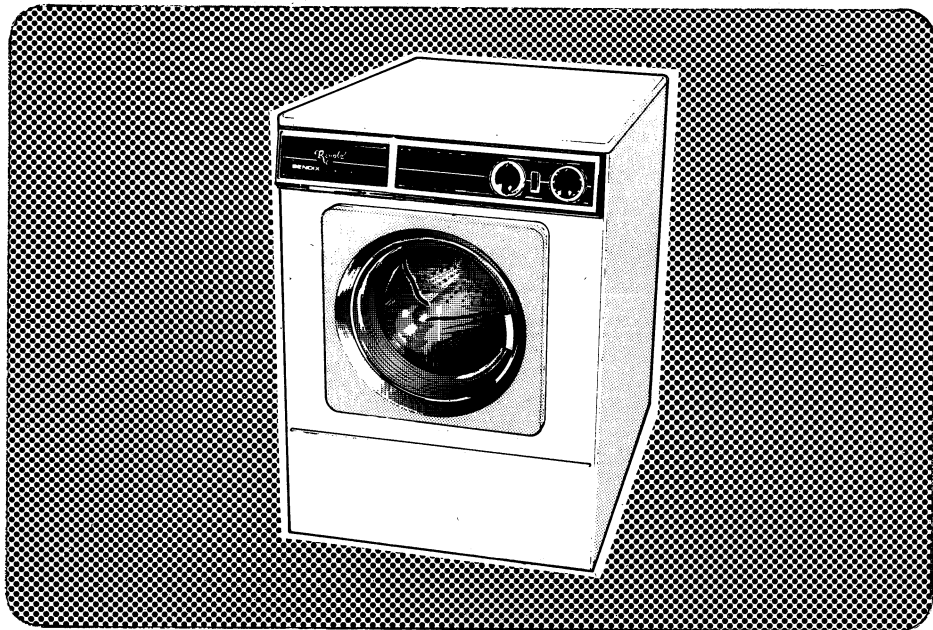

This is the ideal companion to the Auto Washer De Luxe. With the Bendix Royale Auto Drier De Luxe in your home you need never fear the elements again.

Drying becomes simple no matter what the weather, quicker and convenient, too. And better. With a tumble drier you not only get clothes dry in much less time than it takes outside, but you also get clothes that are softer and fluffier. Thanks to the machines 'Air Fluff' at the end of each drying cycle.

Naturally the Bendix Royale Auto Drier is fully automatic. Load, turn a dial and forget it. And even if the sunshine turns to torrential rain your clothes continue to dry. Even when you're out.

Select and turn

The Bendix Royale Auto Drier De Luxe's controls are so simple to use. Select the heat

you want and turn the timer switch. That's all.

Elegant design

The Bendix Royale Auto Drier De Luxe fits under work surfaces, can be stacked or sits on its own. Quite happily.

Features:

Fully front loading . Two heat settings . Automatic cool 'Air Fluff' . 10lb dry weight capacity . Variable timer . Temperature control thermostat . 2 kilowatt heater . Internal lint trap . New improved door with interior liner and double hinges for strength . Stainless steel drum . White stove enamel cabinet . Stainless steel door . Optional stacking kit . Optional exterior venting kits for permanent or temporary installation.

Eastern Electricity Service Depots

Service Depots	Eastern Electricity	Telephone
Chilterns	487 Dunstable Road, Luton LU4 8DQ	(0582) 53222
	Whiteleaf Road, Hemel Hempstead, Herts. HP3 9AD	(0442) 3125
Five Rivers	Valleybridge Road, Clacton-on-Sea, Essex CO15 4AE	(0255) 25525
	Beehive Lane, Chelmsford CM2 9SZ	(0245) 61861
	Electric House, Ipswich IP1 3HU	(0473) 217955
Lea Valley	249 Carterhatch Lane, Enfield EN1 4BW	01-366-1112
	Elizabeth Way, The Pinnacles, Harlow, Essex CM19 5AH	(0279) 29611
Norfolk	4 Duke Street, Norwich NR3 3AH	(0603) 28321
	Gaywood Bridge, Wootton Road, Kings Lynn, Norfolk PE30 4BP	(0553) 673344
Ouse Valley	Caxton Road, Bedford MK OEW	(0234) 55101
	Milton Hall, Milton, Cambridge CB4 4AA	(0223) 61266
	PO Box 43, Shrewsbury Avenue, Peterborough PE2 0BH	(0733) 231001
South Herts	Manor Way, Borehamwood, Herts. WD6 1LG	01-953-6282
	Ash Hill Drive, Pinner, Middlesex HA5 2AG	01-868-4455
Suffolk	Barton Road, Bury St. Edmunds, Suffolk IP32 7BG	(0284) 63111
	Gorleston Road, Oulton, Lowestoft, Suffolk NR32 3BE	(0502) 62155
Thameside	190 London Road, Rayleigh, Essex SS6 9EE	(0268) 775566
	Ashton Road, Harold Hill, Romford RM3 8UB	(04023) 45511

